




ASSEMBLY INSTRUCTIONS

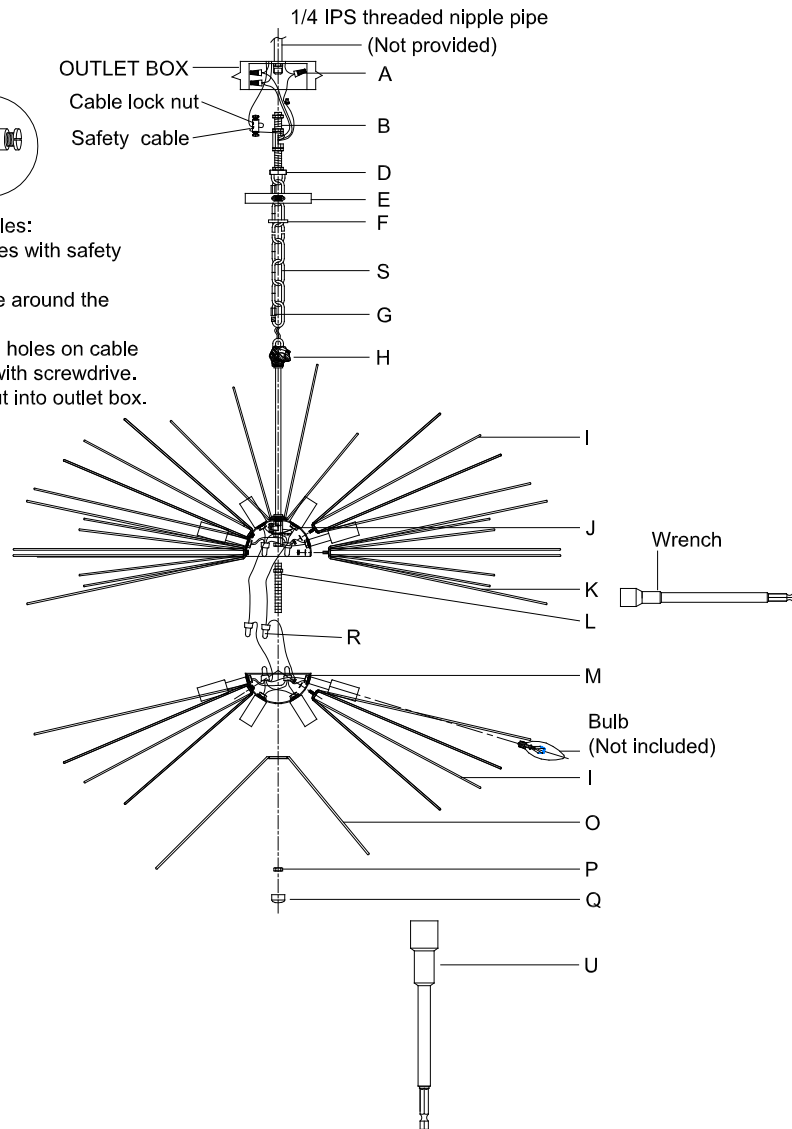

- TO assemble safety cables:
1. Join fixture safety cables with safety cable from ceiling.
 2. Wrap both safety cable around the cable lock nut.
 3. Insert screws into both holes on cable lock nut, secure screws with screwdriver.
 4. Push the cable lock nut into outlet box.

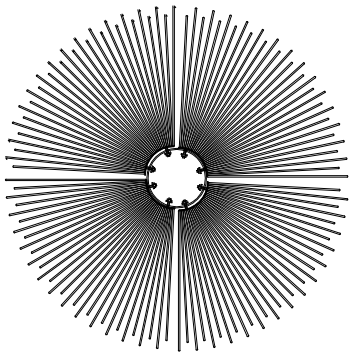

Strada Oval Pendant

Item # KW 5074

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.


NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

1. Carefully remove all parts from the box.
2. A 1/4" threaded nipple must be installed in your outlet box. Then install the threaded nipple (B) into the outlet box.
3. Attach branch (I) to top half ball (J), and secure with hex nut by wrench provided.
4. Attach all branches (K) to top half ball (J), and then secure with hex nut by wrench provided.
IT IS IMPORTANT TO LET ALL BRANCHES (K) ASSEMBLED AND EVEN DISTRIBUTION, THEN TIGHTEN IT BY WRENCH.
5. Attach the thread nipple (L) to the hickey from inside of top half ball.
6. Attach branch (I) to bottom half ball (M), and secure with hex nut by wrench provided.
7. Connect the Hot wire (black) from bottom half ball (M) to the Hot wire (black) from the top half ball (J) with nipple (R).
8. Connect the Neutral wire (white) from bottom half ball (M) to the Neutral wire (white) from the top half ball (J) with (R).
9. Attach bottom half ball (M) with branch (O) to the top half ball (J) and let the threaded nipple (L) go through the center hole of bottom half ball (M), then tighten with hex nut (P) by wrench (U) provided
10. Thread the finial (Q) to the bottom of threaded nipple (L).
11. Insert bulbs (not included) into the sockets.
12. Unscrew the threaded collar on the chain end link (G) and attach it to the fixture top center ring. Close the threaded collar to secure the fixture.
13. Let canopy (E) and lock collar (F) go through the chain (S).
14. With the fixture dimension as a guide, shorten the chain (S) as needed using a pair of chain pliers.
15. Unscrew the threaded collar on the other chain end link, raise the fixture then attach chain end link to the ceiling loop (D). Close the threaded collar to secure.





VISUAL COMFORT & Co. Est. 1987

ASSEMBLY INSTRUCTIONS



- TO assemble safety cables:
1. Join fixture safety cables with safety cable from ceiling.
 2. Wrap both safety cable around the cable lock nut.
 3. Insert screws into both holes on cable lock nut, secure screws with screwdriver.
 4. Push the cable lock nut into outlet box.

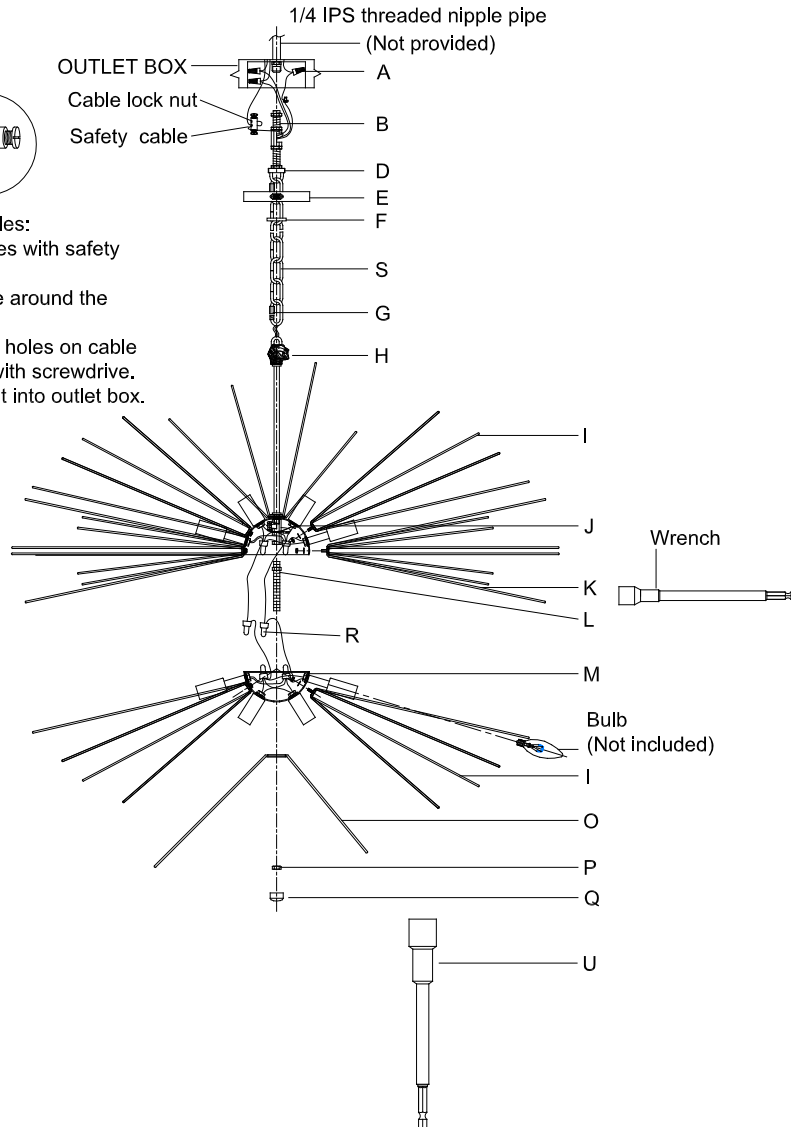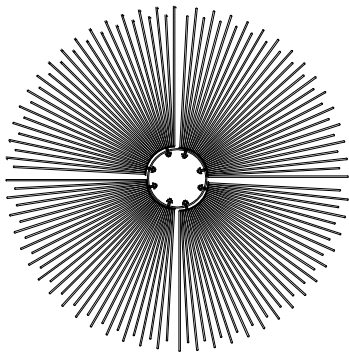

Strada Oval Pendant

Item # KW 5074

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

16. Unwrap the wiring from the top of the fixture body. Weave the power supply cord and the ground wire through the chain (S).
17. When you reach the canopy and ceiling loop, measure the wires then cut. Be certain to leave enough to connect inside of the outlet box.
18. Strip the insulation back on the two power supply wires about 5/8".
19. Twist the power supply and ground wire together and push through the center hole of the ceiling loop (D).
20. Connect the fixture ground (bare) wire with the ground wire from the outlet box using wire nut (A). If your house does not have ground wire, then attach this wire to the green grounding screw inside of the outlet box.
IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
21. Connect the fixture Neutral wire (ribbed, no markings) with the neutral wire from the outlet box using wire nut (A).
22. Connect the fixture Hot (smooth edge, markings) wire with the hot wire from the outlet box using wire nut (A).
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
23. Tuck these wire connections neatly into the outlet box to secure.
24. Put canopy (E) to ceiling loop (D), and secure with lock collar (F).
25. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.



VISUAL COMFORT & Co. Est. 1987

ASSEMBLY INSTRUCTIONS

Strada Oval Pendant Item # KW 5074

For a more personalized style you are able to gently bend spines in any direction.

NOTICE: BENDING SPINES MULTIPLE TIMES CAN CAUSE THEM TO BREAK

