


## ASSEMBLY INSTRUCTIONS

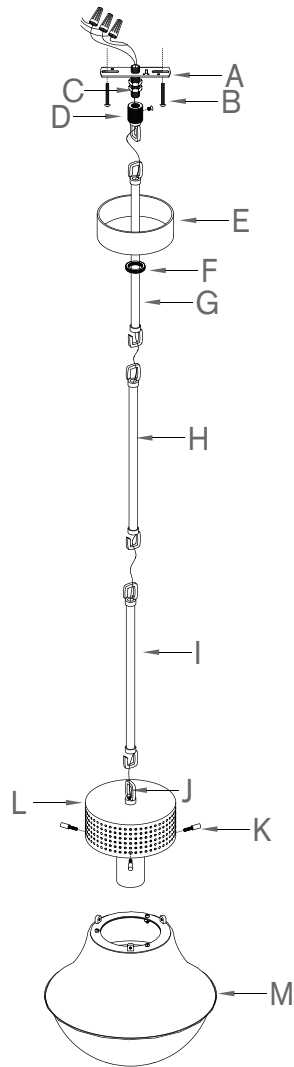

### Precision Small Pendant

Item # KW5221

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

1. Carefully remove all parts from the carton.
2. To determine the lighting fixture suspension length from the ceiling for the product installation, you can use one or all connection poles (G), (H) and (I) to adjust the light fixture's suspension length.
3. Insert light bulb (not included) Type A , maximum 60 watt into socket.
4. Remove locking screws (K) from shade holder (L), attache shade (M) to shade holder (L) and secure with locking screws (K).
5. Hook connction rod (I) to hanging loop (J).
6. Hook connection rod (H) to connection rod (I).
7. Hook connection rod (G) to connection rod (H).
8. Unscrewing canopy ring (F), slide canopy ring (F) and canopy (E) on connection rod (G).
9. Feed wire through connection rod (I)/ (H)/(G) and mounting loop (D).
10. Attach mounting strap (A) to ceiling outlet box and secure with mounting screws (B).
11. Insert top thread nipple (C) in mounting strap (A).
12. Attach mounting loop (D) to thread nipple (C).
13. Hook connection rod (G) to Mounting loop (D).
14. Attach the bare copper ground from the fixture to the ground junction box wire (usually green or copper), fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape. Be sure no wire strands are exposed. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
15. Connect neutral wire from fixture (ridges molded wire) to the neutral wire from the junction box (usually white) . Fasten both wires together with a plastic wire connector and tightly wrap the wire connctor with electrical tape. Be sure no wire strands are exposed.
16. Connect the hot wire from the fixture (smooth wire) to the hot wire (usually black ) from the junction box. Fasten each together with a plastic wire connctor and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
17. Tuck the wire connections neatly into the ceiling outlet box.
18. Slip canopy (E) to ceiling and secure with canopy ring (F).
19. Installation is complete. Restore power and test fixture.p

\*\*\* Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.