


ASSEMBLY INSTRUCTIONS

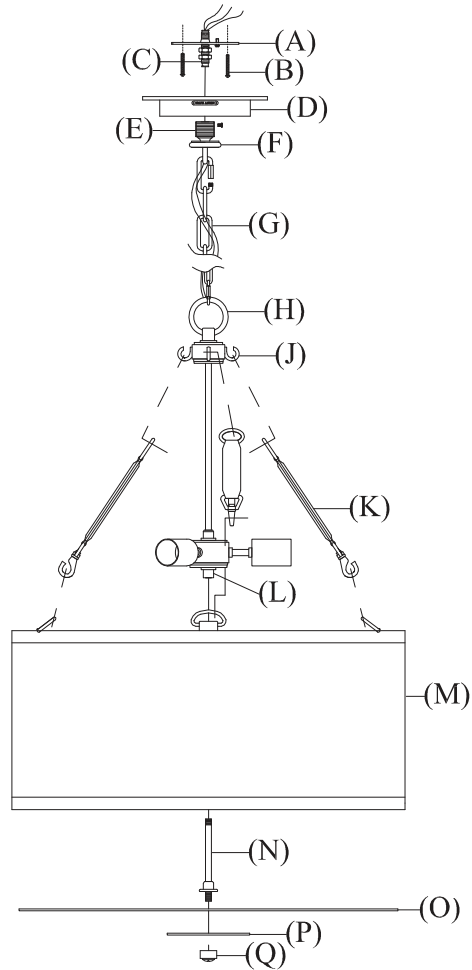

Broomfield Small Hanging Shade

Item # RL 5161


NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

1. Attach chain (G) to top loop (H) and mounting loop (E).
2. Hook lamp shade (M) to assembly part (K), and hook the assembly part (K) to the hook rack (J) and feed the wire through chain (G), mounting loop (E) and nipple (C).
3. Unscrew canopy ring (F), slide canopy ring (F) and canopy (D) on chain (G).
4. Attach rod (N) to the assembly part (L) and tighten with hand.
5. Join parts (N), (O) & (P) together, letting threaded rod on bottom of pole (N) pass through the center hole of (O) & (P), and tighten with screw (Q).
6. Attach mounting strap (A) to ceiling outlet box using mounting screws (B) provided.
7. Insert threaded nipple (C) in mounting strap (A). Using pliers, thread one of hex nut to nipple (C) to secure.
8. Attach mounting loop (E) to nipple (C) and lock into place using nut included.
9. To determine the hanging length, shorter the height by removing the excess chain link.
10. Attach the ground wire (golden or brass in color) from the fixture to the ground junction box wire (usually green or copper wire). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed. It is imperative that the outlet box in your home be properly grounded.

RALPH LAUREN

ASSEMBLY INSTRUCTIONS

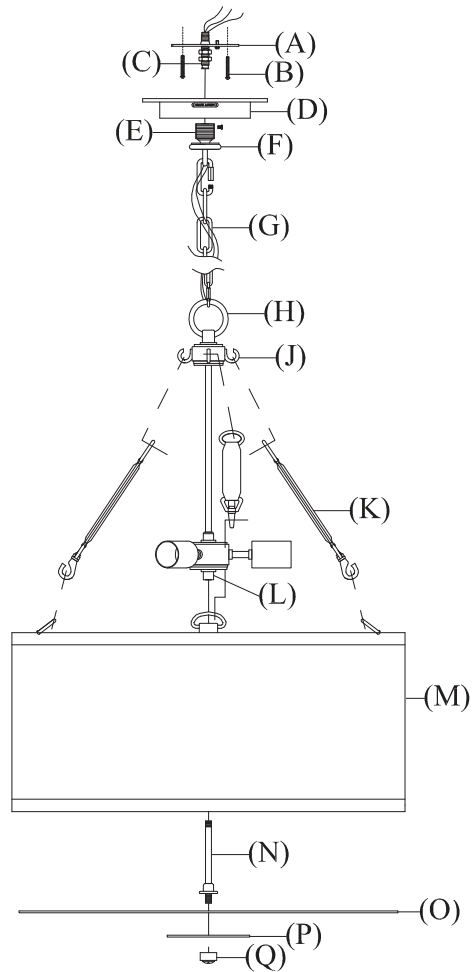

Broomfield Small Hanging Shade

Item # RL 5161

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

11. Connect the neutral wire from the fixture (ridges molded wire) to the neutral wire from the junction box (usually white). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed.
12. Connect the hot wire from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten each a plastic wire connector and wrap the connection with electrical tape. Be sure that no wire strands are exposed.
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
13. Tuck wire connections neatly into ceiling outlet box.
14. Slip canopy (D) to ceiling and secure with threaded canopy ring (F).
15. Insert light bulbs into sockets.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

RALPH LAUREN

