

Eastham Chandelier

CO1334 | 1.0

GENERATION LIGHTING CHANDELIER

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.


This instruction shows a typical installation.

SAVE THESE INSTRUCTIONS!


CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

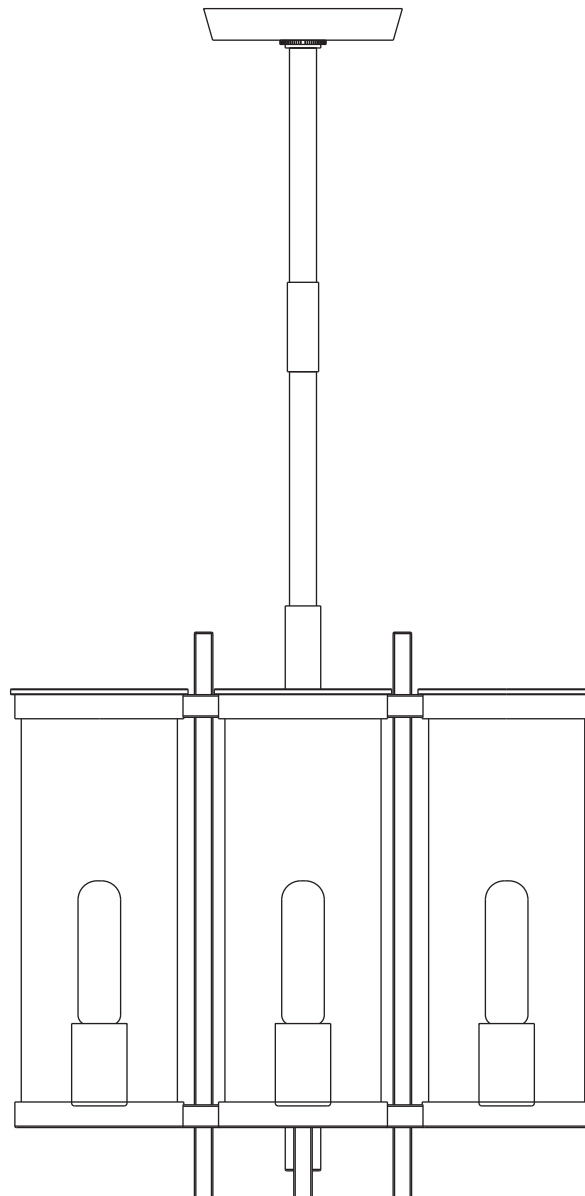

GENERATION LIGHTING
7400 Linder Ave., Skokie, IL 60077
T 847.410.4400 | F 847.410.4500
www.generationlighting.com

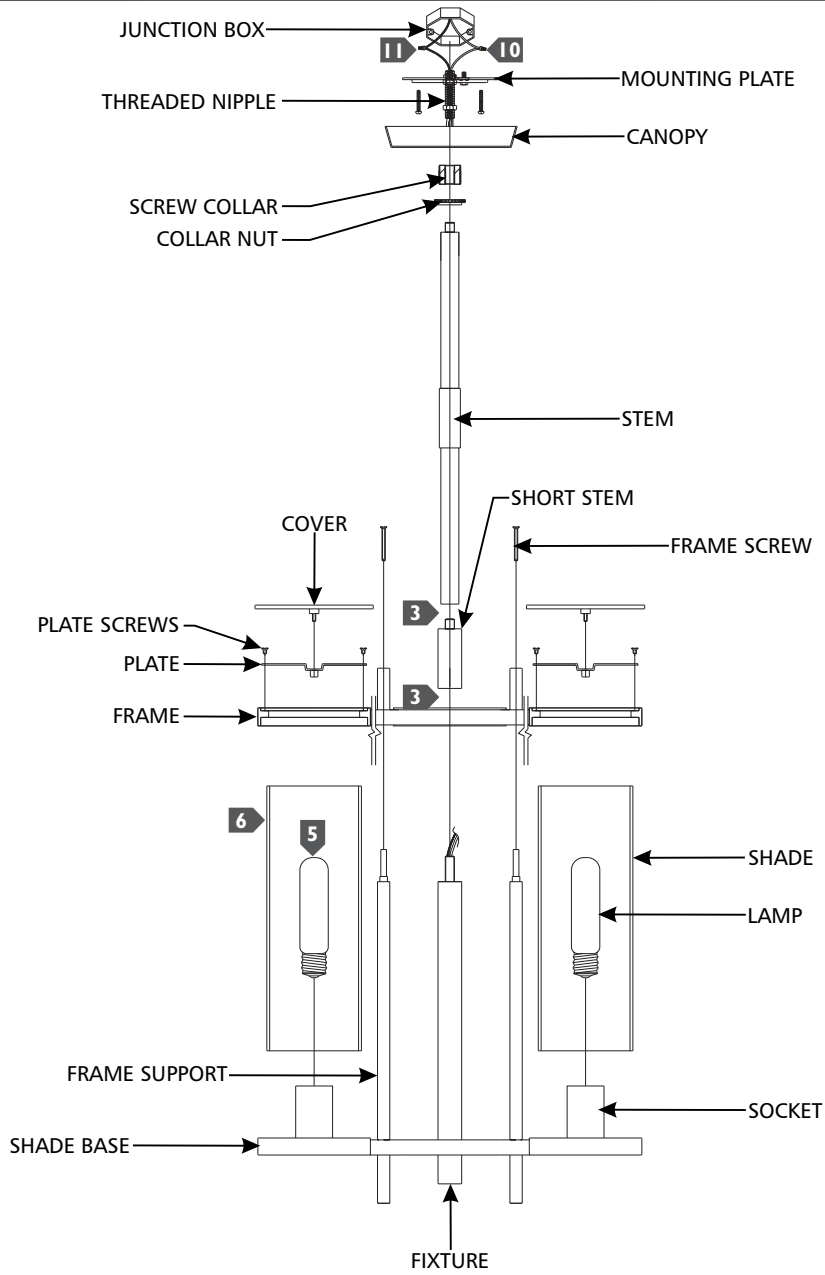IA

- 1** if necessary, screw the shorter end of the threaded nipple tightly onto the mounting plate, then screw the screw collar tightly onto the mounting plate.
- 2** Feed the fixture wires through the frame then place it onto the frame supports.
- 3** Feed the fixture wires through the stems and assemble them by screwing them together, then screw the stem assembly onto the top of the fixture.
- 4** Insert the shade into the shade base. Repeat for remaining shades.
- 5** Screw the lamps into the sockets. Refer to the label on the socket for Max Wattage Information
- 6** Place the plate onto the frame above the shade and secure it with the plate screws. Place the cover onto the plate. Repeat for remaining shades.
- 7** Feed the fixture wires through the collar nut, canopy, and mounting plate assembly (in that order), then screw the mounting plate assembly onto the stem.
- 8** Align and secure the mounting plate to the junction box.
- 9** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 10** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 11** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 12** Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the mounting plate.