Installation Instructions for

MonoRail FreeJack Connector

700MOCHED_ 1.6

VISUAL COMFORT & CO.

ARCHITECTURAL COLLECTION




GENERAL PRODUCT INFORMATION:


This product is suitable for indoor dry locations only.

This product should be used with Tech Lighting MonoRail system only.

Install the FreeJack Connector onto the MonoRail

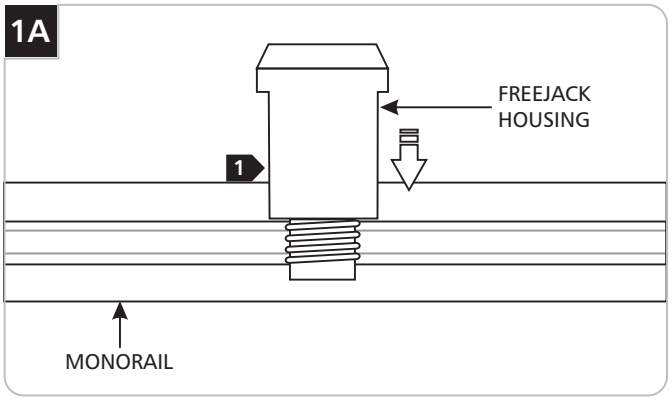


1 From top of the MonoRail place the FreeJack housing onto the MonoRail.

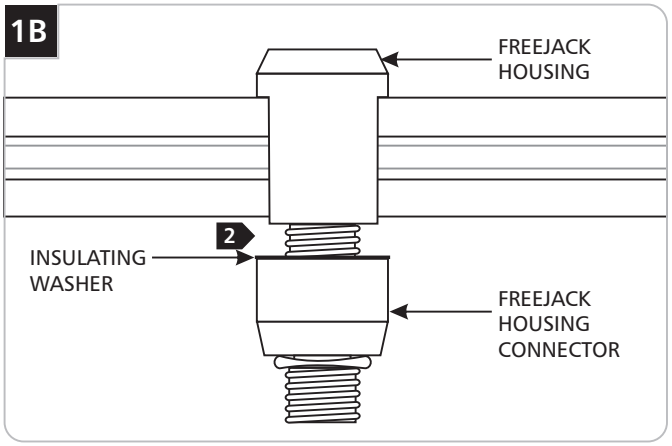

2 From bottom of the MonoRail tighten the FreeJack housing connector to the FreeJack housing.

Connect the FreeJack Fixture to the MonoRail FreeJack Connector

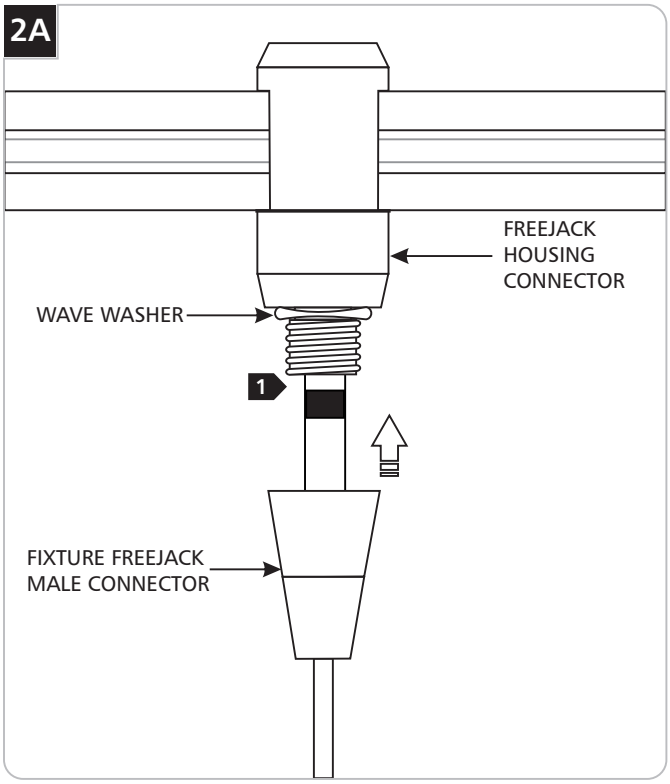

1 Push and screw the fixture FreeJack male connector all the way into the FreeJack housing connector.

SAVE THESE INSTRUCTIONS!