


ORBET 5, 9 & 13-LIGHT PENDANTS

700TDOBT5; 700TDOBT9; 700TDOBT13

General Product Information



Suggested/Required Tools

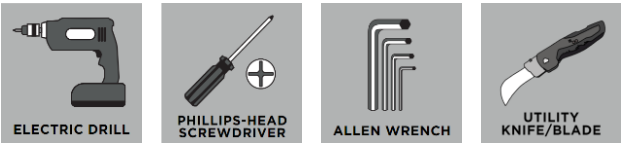

Safety Information

CAUTION-RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


USE MINIMUM 90°C SUPPLY CONDUCTORS.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

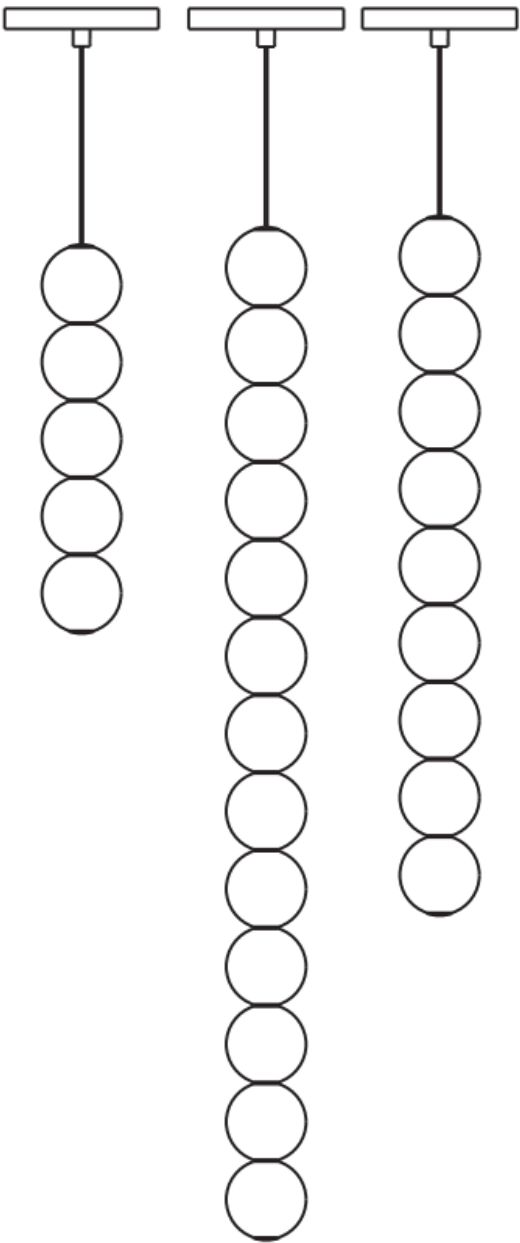

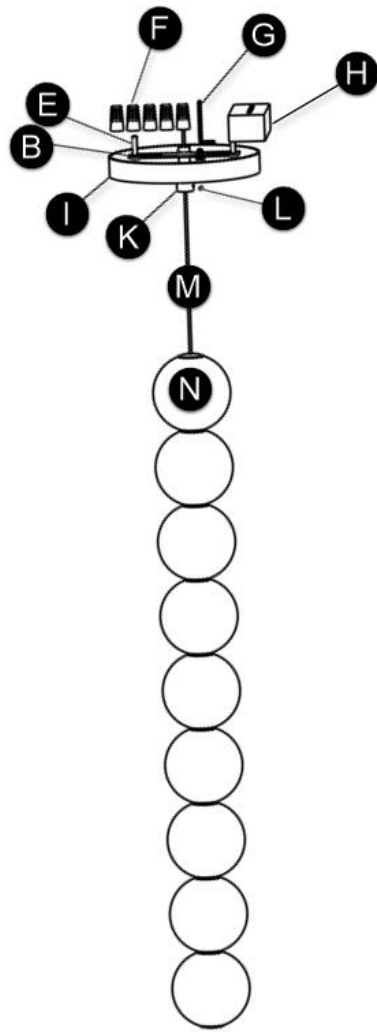



FIXTURE PARTS

- A. Junction box
- B. Mounting Bar
- C. Mounting Bar Center Hole
- D. Green Ground Screw
- E. #8-32 Screws (2)
- F. Wire Nuts (5)
- G. Allen Wrench
- H. Driver
- I. Canopy
- J. Canopy Center Hole
- K. Strain Relief
- L. Set Screw
- M. Fixture Cord
- N. Fixture
- O. Power Line Ground Wire
- P. Power Line Neutral (-) Wire
- Q. Power Line Hot (+) Wire
- R. Fixture Wires
- S. Fixture & Power Line Wire Connections

INSTRUCTIONS

I. Preparing the Canopy

1. Carefully, unbox and examine all the items included in the packaging of the pendant.
2. Locate the canopy and completely unscrew the strain relief from it to remove the mounting bar.
3. Secure the mounting bar to the junction box using the provided #8-32 screws.

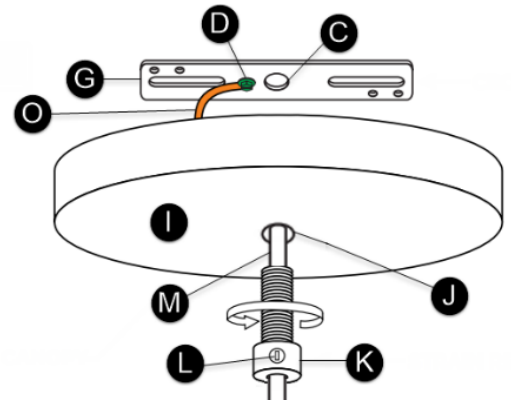
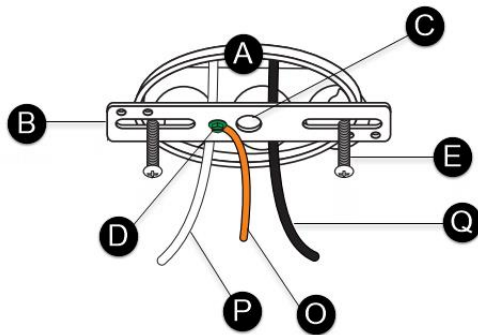


II. Preparing the Pendant

1. Do the following to determine the ideal cord height for the pendant:

Tip: Measure the distance from the bottom of the fixture to the top of the canopy, then subtract the ceiling height from that measurement; this will provide the necessary cord length needed to hang the pendant at the correct height.)

- Loosen (do not remove) and back out the set screw on the strain relief with the provided Allen wrench. Once removed, it is difficult to put back into place and easily lost.
- Adjust the cord height by moving the cord up or down the strain relief. Measure and mark the desired cord length.
- Tighten the set screw back into the strain relief to secure the selected cord length.
- Cut the excess cord length, leaving approximately 6" of cord behind the canopy to connect the canopy to power.
- Using wire cutters or a sharp knife, strip 4" of insulation off the end of the cord. Be careful not to nick the inner wires. Then strip the end of the wires.

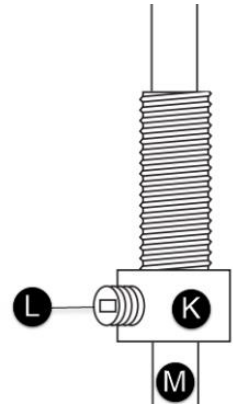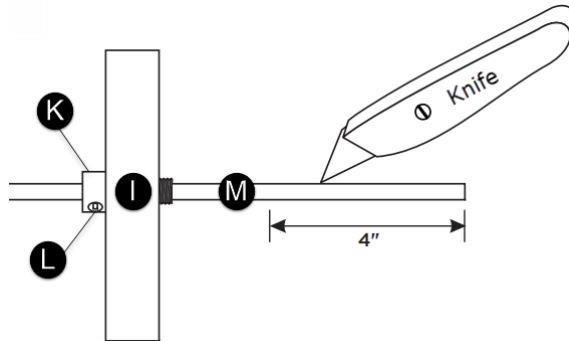

III. Wiring & Installing the Fixture

- Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
- In accordance with local electrical codes, connect the fixture and the mounting bar ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate, which the ground wire should be tightly wrapped around or a house wire (green or bare copper wire without insulation).
- Adjust the length the wires using a wire stripper/cutter, if necessary.
- Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - Negative driver wire (labeled -) to white pendant wire
 - Positive driver wire (labeled +) to black pendant wire
 - White driver wire to neutral (-) power line wire
 - Black driver wire to hot (+) power line wire
- For 0-10V dimming capabilities, connect the purple and pink wires (cap off wires, if dimmer not used) to a compatible dimmer.
- Carefully tuck the driver and all the wires in between the canopy and the junction box.
- Loosen the set screw again on the strain relief.
- Align the center hole on the canopy with the center hole in the mounting bar.
- Place the canopy against the junction box, aligning the center hole on the canopy with the center hole in the mounting bar.
- Secure the canopy to the ceiling/junction box by reinstalling the strain relief.
- Without turning the cord, screw the strain relief back into the canopy and the mounting bar.
- Push the cord into the canopy and line up the marked point on the cord with the bottom of the strain relief.
- To finish, tighten the set screw back into the strain relief to secure the cord.

