

BAU 28/36 PENDANTS

700TDBAU28x; 700TDBAU36x

General Product Information




SAVE THESE INSTRUCTIONS!



INDOOR



DAMP LOCATION SAFE

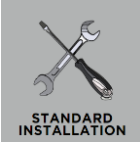

STANDARD INSTALLATION



DIMMABLE (ELV)



INTEGRATED LED NO BULBS REQUIRED



PLEASE SEE visualcomfort.com FOR PRODUCT SPECS




CLEAN WITH SOFT, DRY CLOTH ONLY. NO HARSH CHEMICALS!



BEST PRACTICE: HANDLE FIXTURE WITH GLOVES



WARRANTY

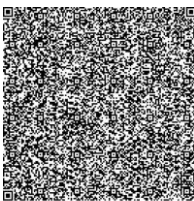

FCC STATEMENT

Tools Required



PHILLIPS-HEAD SCREWDRIVER



WIRE CUTTER



ALLEN WRENCH

Safety Information

CAUTION-RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


USE MINIMUM 90°C SUPPLY CONDUCTORS.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.



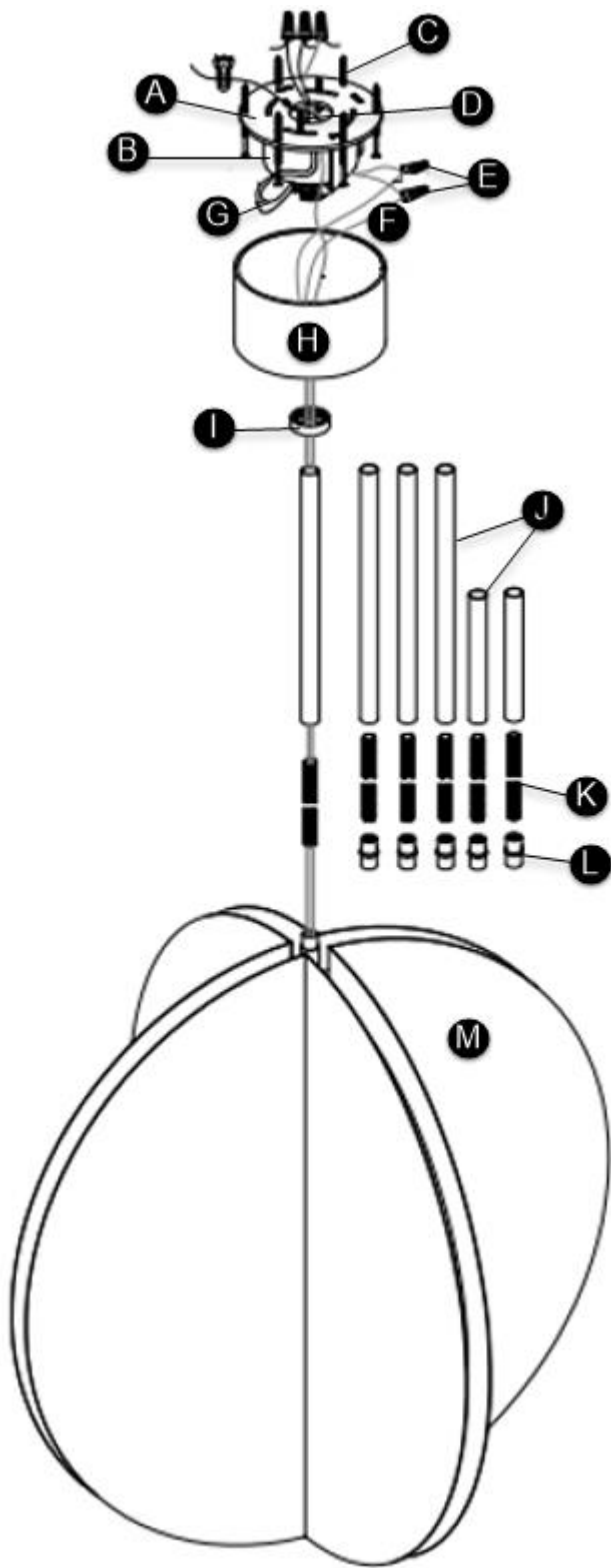

FIXTURE PARTS

- A. Mounting Plate
- B. Driver
- C. Lag Screw
- D. #8-32 Screw
- E. Wire Nuts
- F. Fixture Wires
- G. Driver Wires
- H. Canopy
- I. Collar Nut
- J. Stem Assembly Cover
- K. Threaded Rod
- L. Coupler
- M. Fixture

INSTRUCTIONS

1. Remove the mounting plate and driver from the canopy.
2. Secure the mounting plate to the junction box with the provided #8-32 screws. **DANGER: If using the Bau 28, the junction box must be rated for 150 lbs., or more. If using the Bau 36, the junction box must be rated for 200 lbs., or more. If the junction box is not rated for the minimum weight, then the mounting plate must be supported independently of the junction box.**
3. Secure the safety cable to a secure solid structure in accordance with local building code.
4. Determine the desired height of the fixture using the provided threaded rods, covers and couplers, then assemble them by sliding a cover over each rod and screwing the rods to a coupler.
5. Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the fixture.
6. Slide the collar nut and canopy over the rod assembly then screw the half ball to the top of the stem assembly.
7. Seat the half ball into the mounting plate. **WARNING: Make sure to avoid pinching the wires.**
8. Connect the blue driver wire to the blue fixture wire with a wire nut.
9. Connect the red driver wire to the red fixture wire with a wire nut.
10. Connect the fixture to a suitable ground in accordance with local electrical codes.
11. Connect the white driver wires to the neutral power line wire with a wire nut.
12. Connect the black driver wires to the hot power line wire with a wire nut.
13. Neatly place the drivers, all wires, and wire nut connections inside the canopy, slide the canopy up to over the mounting bracket and secure in place with the collar nut.