INSTALLATION INSTRUCTION

Precision Multiples

4" LED Adjustable recessed downlights MT-4LD

WAC LIGHTING

Responsible Lighting®

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read all instructions before installing.
- 2. System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- 3. Go to the main fuse box, or circuit breaker. Place the main power switch in the "OFF" position and unscrew the fuse(s) or switch "OFF" the circuit breaker switch(es) that control the power to the fixture or room that you are working on.
- 4. Place the wall switch in the "OFF" position.

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

- 1. Lisez toutes les instructions avant d'installer.
- 2. Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- 3. Accédez au panneau central de disjoncteurs ou de fusibles de votre demeure et placez l'interrupteur principal en position d'arrêt («OFF»).
- 4. Placez l'interrupteur mural en position d'arrêt (« OFF »).

OVERVIEW:

Housing is new construction and requires a trim or invisible trim.


Table 1 - HOUSING OVERVIEW


Fig. 2


MODEL	DIMMING TYPE	IC RATING	INPUT VOLTAGE	POWER
MT-4LD*16N*	0-10V	Non-IC	120V-277V	16.5W
MT-4LD*16NE*	ELV	Non-IC	120V	16.5W
MT-4LD*11NE*	ELV	IC-Rated	120V	11.5W


MOUNTING:

1. Adjust the housing to proper height by loosening the wing nut on both adjustable brackets and set the basic plate so that the bottom edge of the frame is flush to the finished ceiling (**Fig.1, Fig.2, Fig.3, Fig.4** and **Fig.5**). Tighten the wing nut.

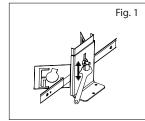



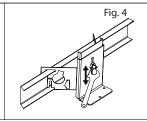



a. With HANGER

b. With 1/2 CHANNEL (not included)

c. With 3/4 CHANNEL (not included)

d. With 1 1/2 CHANNEL (not included)

e. With ROUND CHANNEL (not included)

- Install the mounting frame using two hanger bars. Bars are notched on the ends to fit over "T" bars in suspended ceilings. Hanger bars include a captive mounting "screw-nail" for ease of installation (Fig.6). Align the bottom of the hanger bar with the bottom of the wood joist. Secure the "screw-nail" on each end by screwdriver (Fig. A), or by hammer (Fig. B).
- 3. Pinch the adjustable bracket, slide the fixture along hanger bars into desired location (**Fig. C**).
- 4. The junction box is suitable for branch wiring and has trade size knockouts and integral non-metallic sheathed cable connectors.

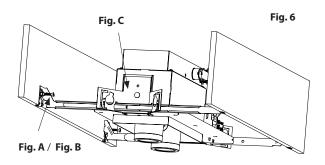


Fig. A


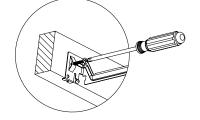


Fig. B



Fig. C



WAC Lighting www.waclighting.com Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center 44 Harbor Park Drive • Port Washington, NY 11050 Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center 1750 Archibald Ave • Ontario, CA 91761 Phone (800) 526.2588 • Fax (800) 526.2585

INSTALLATION INSTRUCTION

Precision Multiples

4" LED Adjustable recessed downlights MT-4LD



WIRING

- 1. Remove spring latched junction box door and connect fixture wires to building wires; insert each supply wire into appropriate junction box connector. Connect black fixture wire to hot, white fixture wire to neutral and green fixture wire to ground.
- 2. For dimming type, refer to **Table 2**

For 0-10V compatible housings, wire purple(dim+) and grey(dim-) in accordance to 0-10V dimmer specifications.

For ELV compatible housing, wire black (line hot) and white (line neutral) in accordance to ELV dimmer specifications. Purple and grey wires are to be capped separately for ELV housings

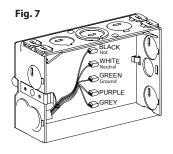


Table 2 - HOUSING OVERVIEW

MT-4LD*16N*	MT-4LD*11NE*, MT-4LD*16NE*
0-10V Dimming	ELV dimming
Black - Line Hot	Black - Line Hot
White - Line Neutral	White - Line Neutral
Green - Ground	Green - Ground
Purple - 0-10V Dim+ (Cap if not dimming)	Purple - Unused (Cap)
Grey - 0-10V Dim- (Cap if not dimming)	Grey - Unused (Cap)


3. Use push-in type wire connectors supplied or wire nuts. Place all wiring and connectors back in wiring box and replace junction box door.

Table 3. Use template supplied to make appropriate cutout for trim installation.

MODEL	TRIM	ситоит	INVISIBLE TRIM™	ситоит
MT-4LD116N*	MT-4LD116T*	5 1/8" X 5 1/8"	MT-4LD116TL-WT	5 1/8" X 5 1/8"
MT-4LD216N*	MT-4LD216T*	9 3/4" X 5 1/8"	MT-4LD216TL-WT	9 3/4" X 5 1/8"
MT-4LD316N*	MT-4LD316T*	14 1/2" X 5 1/8"	MT-4LD316TL-WT	14 1/2" X 5 1/8"
MT-4LD416N*	MT-4LD416T*	19 1/8" X 5 1/8"	MT-4LD416TL-WT	19 1/8" X 5 1/8"
MT-4LD226N*	MT-4LD226T*	9 3/4" X 9 3/4"	MT-4LD226TL-WT	9 3/4" X 9 3/4"

TO INSTALL TRIM

- When installing in drywall, cut a hole in the drywall (see **Table 3** for cut out size).
 After finished, if necessary, adjust the fixture for ceiling thickness by loosening the screws that attach the square housing to the plaster frame (**Fig. 8**).
- 2. Raise the trim to the housing and attach two sides by securing the tension spring in the anchor cleat (as **Fig.9**, **Fig.10**). Push the trim flush up against the ceiling (**Fig.11**).

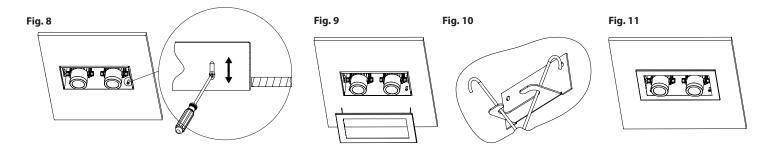

WAC Lighting www.waclighting.com Phone (800) 526.2588 • Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive • Port Washington, NY 11050 Phone (516) 515.5000 • Fax (516) 515.5050 Western Distribution Center 1750 Archibald Ave • Ontario, CA 91761 Phone (800) 526.2588 • Fax (800) 526.2585

INSTALLATION INSTRUCTION


Precision Multiples

4" LED Adjustable recessed downlights MT-4LD

WAC LIGHTING Responsible Lighting®

INVISIBLE TRIM™ INSTALLATION

- 1. Raise the screen panel to ceiling opening and secure with screws supplied (Fig.12, Fig.13 and Fig.14).
- 2. Apply plaster over the screen panel and sand surface when dry for a finished look (Fig.15 and Fig.16).

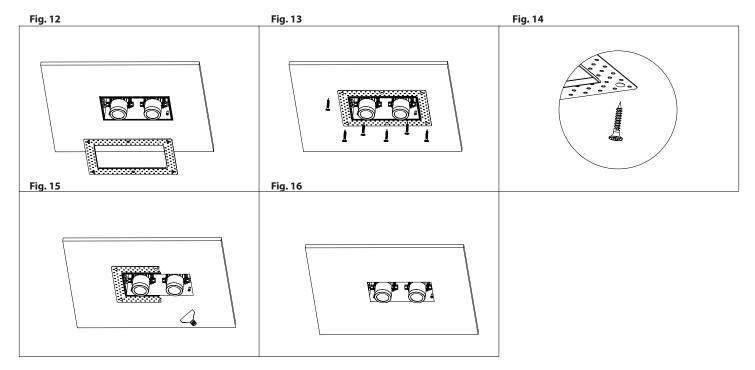

ALTERNATE ACCESSORY LENSES

1. Twist the the lens ring counter clockwise to remove (hold with a lens or a accessory lens).

2. Replace the glass lens or other accessory lens (Fig.17).

