

BROOKLYN, NEW YORK

Installation Instructions

for Deck Mounted Monoblock Faucets





Last Updated: 07/2023


The 37-7.3P1-BL2 will be used as an example in this manual. Applicable for all 7.3P1, 7.3PG2, 7.3P3, 7.3PG4, 9.3P1, and 9.3PG2 models.

WATERMYRK

BROOKLYN, NEW YORK

Last Updated: 07/2023

PARTS BREAKDOWN

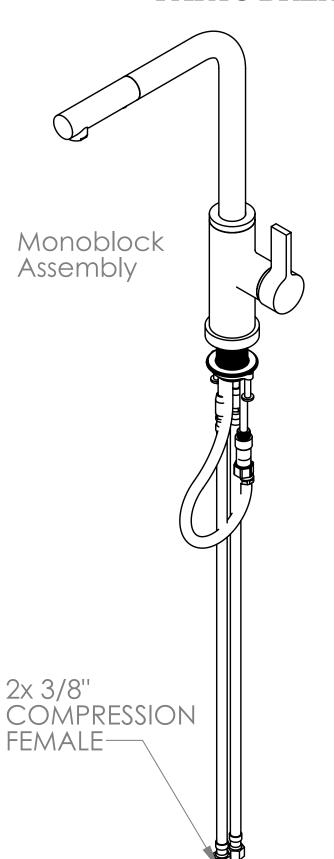

Hose Weight




You will need:
- 1 x Screwdriver

Page 2 of 4

BROOKLYN, NEW YORK

1. Prepare the mounting surface


Make 1 hole in the mounting surface following the requirements shown on the drawing.

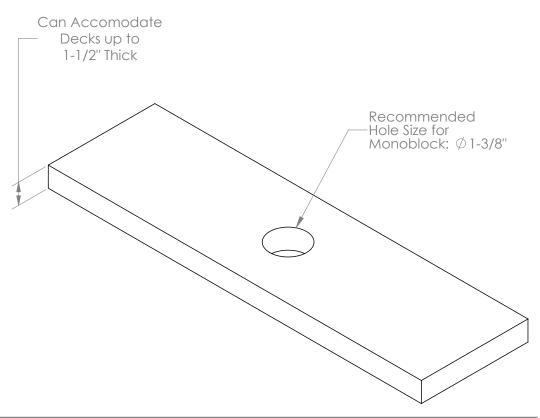

Last Updated: 07/2023

2. Install the monoblock

- [A] Insert the monoblock assembly through the hole in the mounting deck. Thread the spout nut onto the bottom of the spout nipple.
- [**B**] Tighten the spout nut on the spout nipple by hand, compressing the metal washer and rubber gasket against the bottom of the mounting surface.
- [C] Use a screwdriver to tighten the two screws on the spout nut against the metal washer as much as possible.

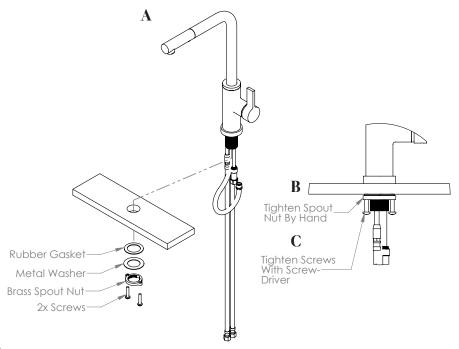

NOTE: Hose length shown is not to scale

Page 3 of 4

Watermark Designs reserves the right to make revisions to product specifications without notice. All product dimensions are nominal.

3. Install the hose weight and hose connection

- [A] Attach the hose weight on the side of the hose loop that goes into the spout. Adjust the location based on how much you need the pull-out spray to extend.
- [B] Connect and screw the end of the hose to the riser outlet at the bottom of the spout if it has not been connected yet.
- [C] Connect the ends of the flex hoses to a supply stop (sold separately).

