



### Exploded View

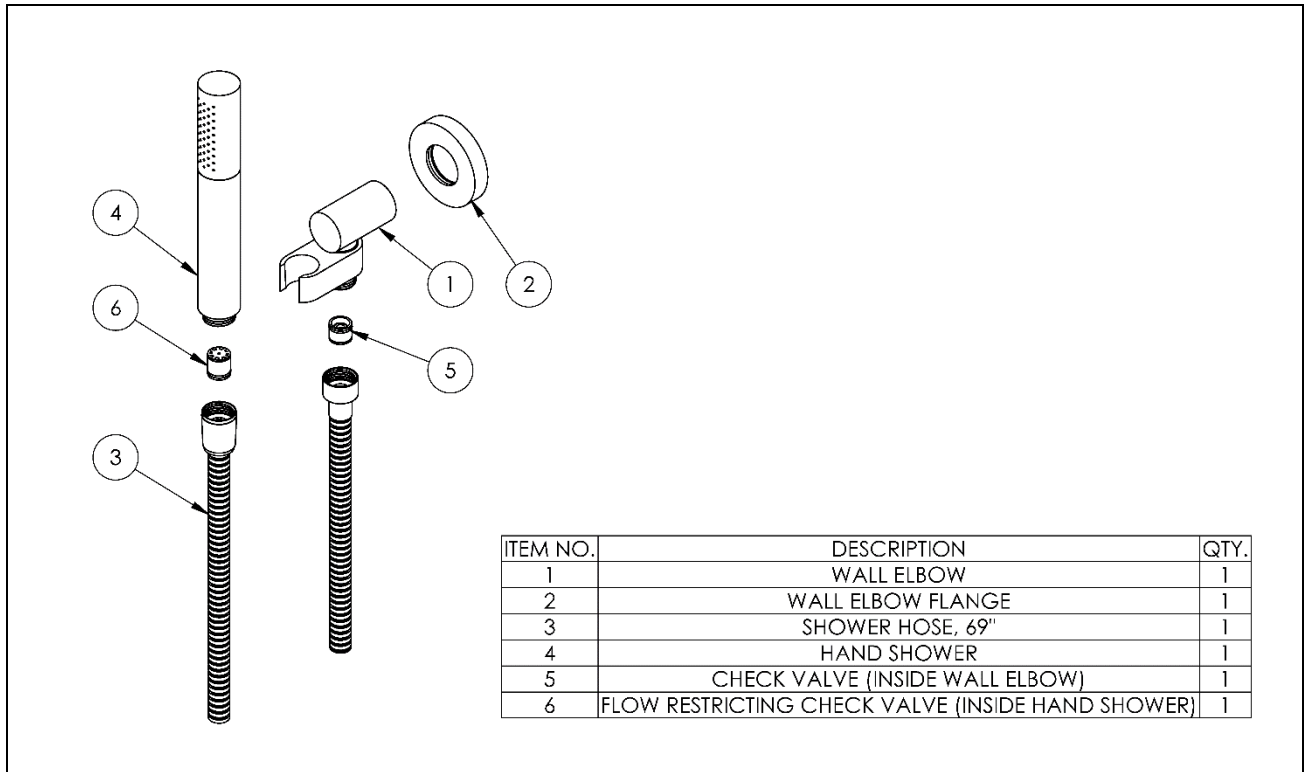

### Dimensions

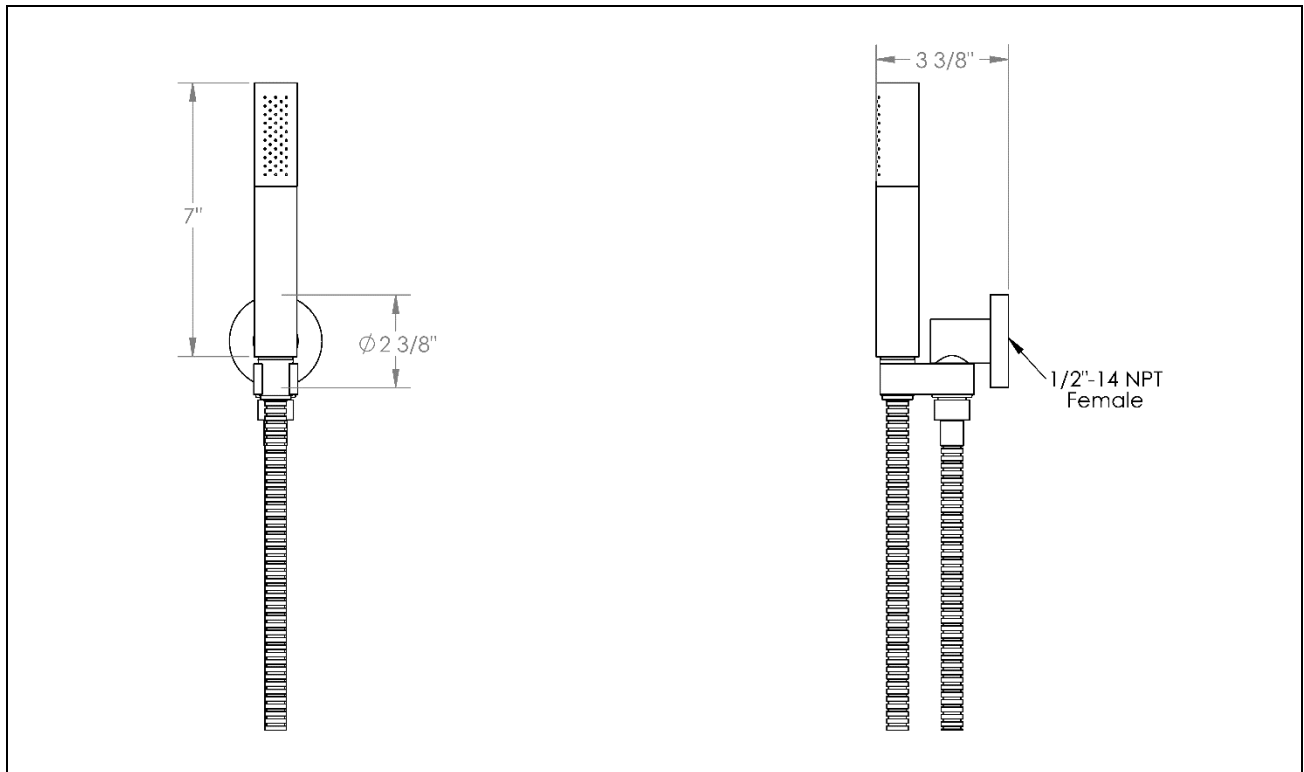

## Installation Instructions

1. A well-supported 1/2" NPT elbow with nipple is required in the wall prior to installation.
2. Hole in the wall should be at least  $\varnothing 1"$  to fit the wall nipple. Nipple should end 5/8" in front of the finished wall.
3. Slide the **wall elbow flange** (2) onto the **wall elbow** (1). Thread the **wall elbow** (1) onto the nipple so that the outlet faces down when the back of the elbow contacts the wall. Use a strap wrench or soft jaw pliers if necessary.
4. Slide the **wall elbow flange** (2) until it contacts the finished wall. A bead of silicone sealant should be applied of the back of the flange.
5. Thread the nut end of the **shower hose** (3) onto the **wall elbow** (1).
6. Flush the wall elbow and check for leaks.
7. Thread the **hand shower** (4) onto the cone end of the **shower hose** (3).
8. Note: Dual **check valves** (5, 6) are installed for backflow prevention.

### **IMPORTANT INSTALLATION INFORMATION**

- Use Teflon tape or pipe sealant for threaded connections.
- Do NOT use Plumber's Putty on any of the brass components.  
This will cause the finish to tarnish and void the warranty. A non-corrosive alkoxy silicone is recommended.
- Copper adapters may be required to complete your installation.
- Refer to maintenance guide for finish care instructions.

**For technical support, please call 718-257-2800**