



Pro Wall Hood Duct Cover Installation


wolfappliance.com 800.222.7820

CONTENTS


1	Cover, duct
8	Screw, #8 x 1/2"
6	Screw, #10 x 2"

PRO WALL HOOD DUCT COVER INSTALLATION

- 1 Install the ventilation hood using the instructions provided with the hood.
- 2 Remove and discard the existing screws from the top of the hood.

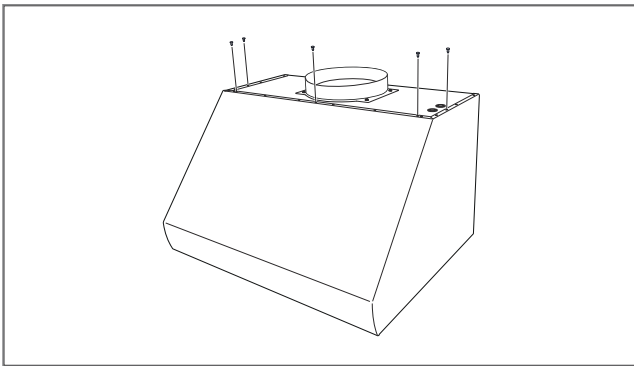

- 3 Place the duct cover on the hood.
- 4 Loosely install eight #8 x 1/2" screws. Verify duct cover alignment, then tighten all screws.

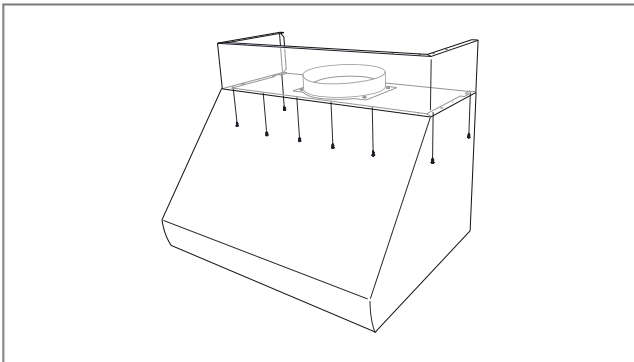

- 5 Six additional screws are provided to secure the top of the duct cover to an upper cabinet or soffit area, if accessible.

