




WYNDHAM COLLECTION

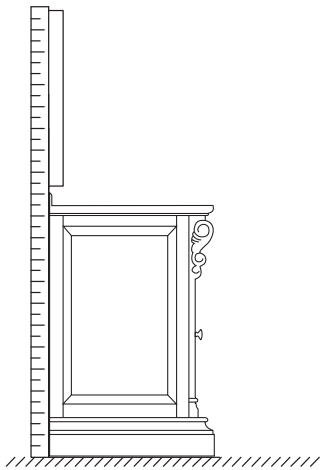


- Prior to installation, please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.

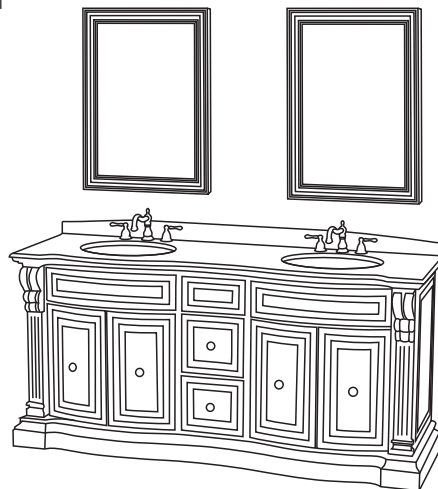


PACKING LIST

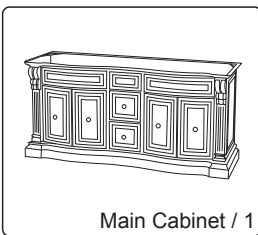


Optional

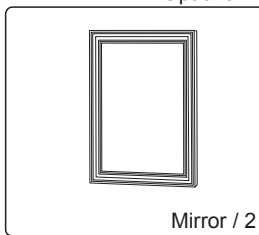


Optional

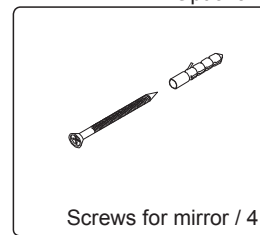


Optional

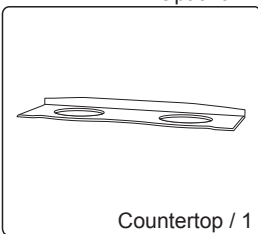


Optional

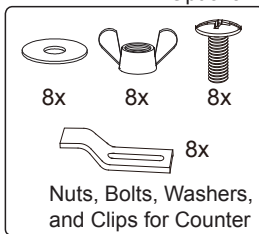

Optional

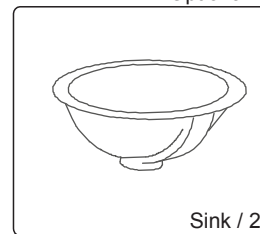

REQUIRED TOOLS NOT IN BOX



Tape measure



Pencil




Electric Drill




Phillips Screwdriver



Adjustable Wrench



Spirit Level



Silicone sealant

WC-J232-72-DBL
INSTALLATION

WYNDHAM COLLECTION


CARE AND CLEANING

For best results in caring for your stone top, we suggest:

- Always wipe off spills immediately.
- Seal the stone top regularly with a good quality stone sealer.
- Never use strong / abrasive cleaner. Always test your cleaning solution on unnoticeable areas before applying to the entire surface.
- Wipe surfaces clean, immediately after applying cleaner.
- Do not allow cleaner to sit or soak. Never let cleaners sit on the surface of the stone for long periods of time.
- Use a soft, dampened sponge and cloth. Never use an abrasive material such as brush or scouring pad to clean surfaces. They will scratch the surface of the stone top and lavatory.
- Always rinse and wipe clean the fixtures to prevent soap buildup.


INSTALLATION INSTRUCTIONS FOR SINKS (IF APPLICABLE)

1

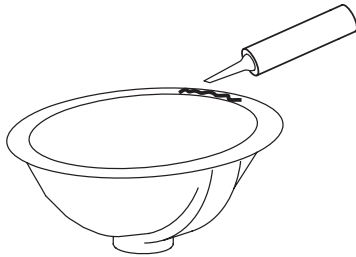


Apply a continuous bead of quality sealant to the top surface (rim) of the sink.

2

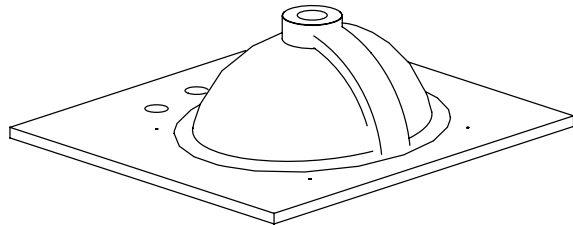

Turn the stone top upside down and place it on a clean, surface. Center the sink over the cutout.

3

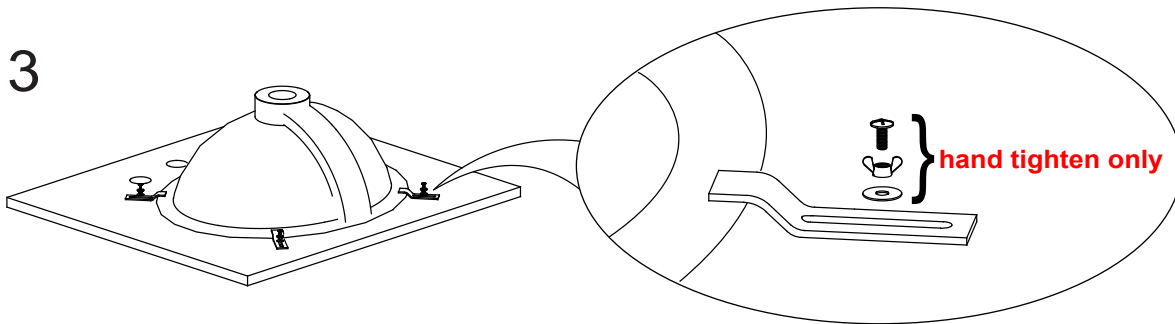


Secure the sink to the top using the mounting kit and hardware provided with the stone top.
Hand tighten only, do not use any tools.

WC-J232-72-DBL
INSTALLATION

WYNDHAM COLLECTION


INSTALLATION INSTRUCTIONS FOR COUNTERTOP AND MIRRORS (IF APPLICABLE)

4

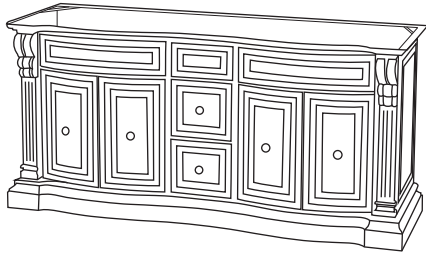


The cabinet is precut in the back for easy plumbing installation. For non-standard installations, installer must cut appropriately sized hole in back to accommodate.

5

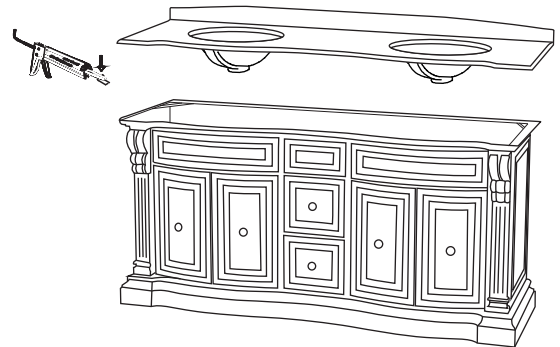


Install the counter and pop-up drain. Seal around the top of the cabinet with clear or white silicone sealant.

6

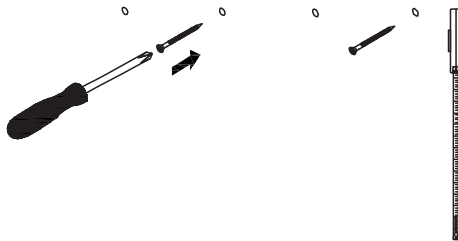

Attach mirror brackets to wall with supplied screws. Hang mirrors.

7

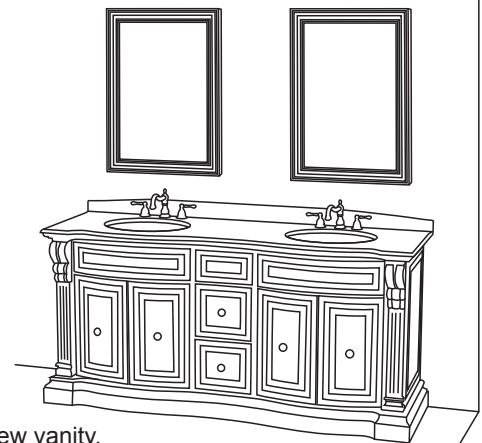

Enjoy your new vanity.

WC-J232-72-DBL
INSTALLATION