

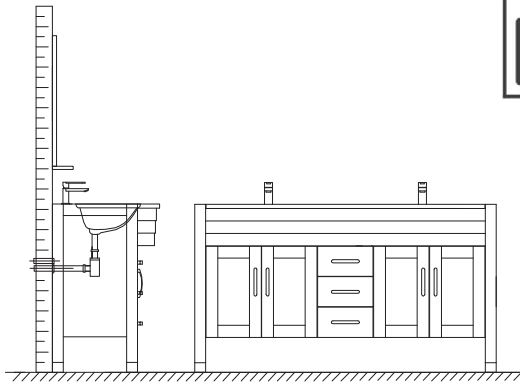
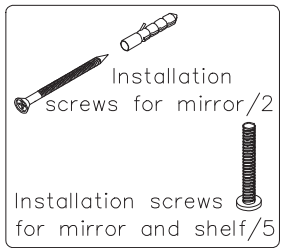
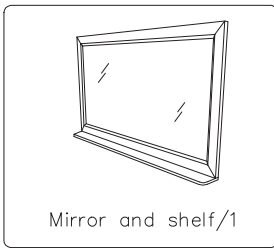
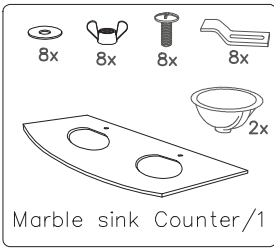
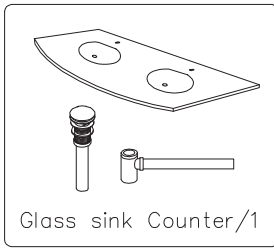


# WYNDHAM COLLECTION





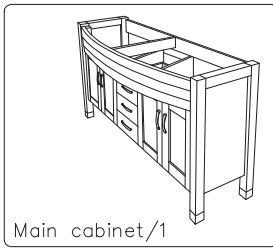


## PACKING LIST





- Prior to installation please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.

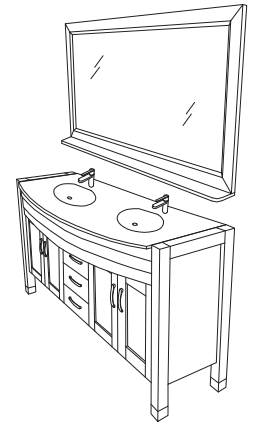







## INSTALLATION AND ADJUSTMENT OF HINGES

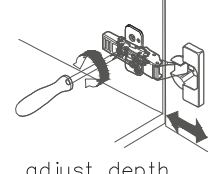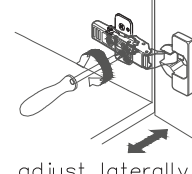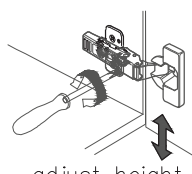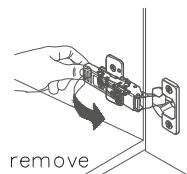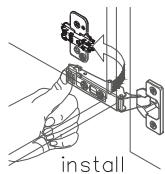

## REQUIRED TOOLS NOT IN BOX



## INSTALLATION INSTRUCTIONS

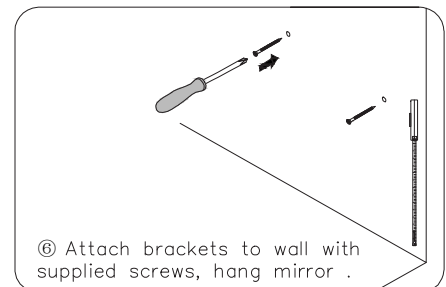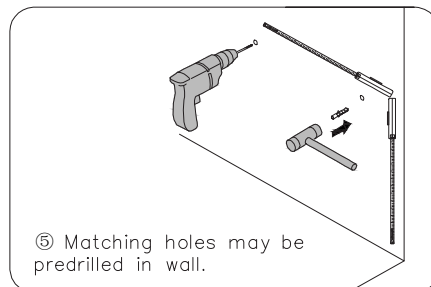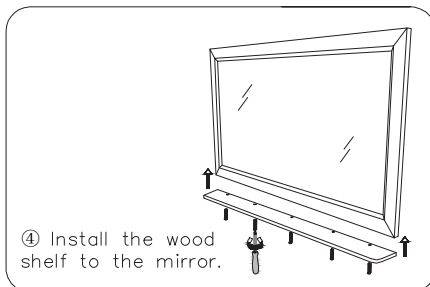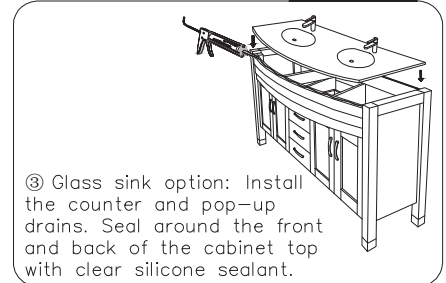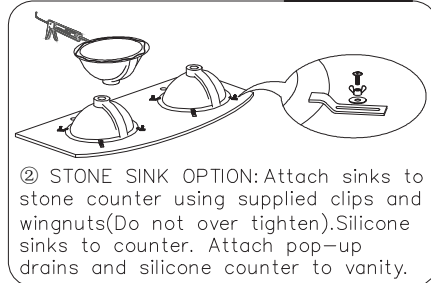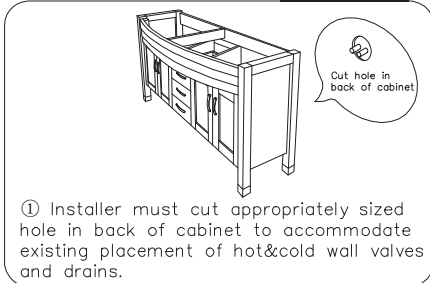

WC-A-2200-71  
INSTALLATION