


# WYNDHAM COLLECTION

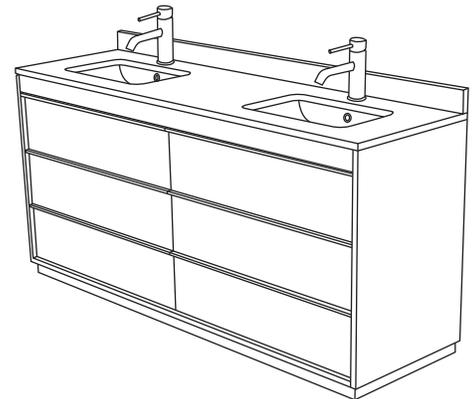


- Prior to installation please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.




## PACKING LIST

(Not all components may be included, depending on your purchase)

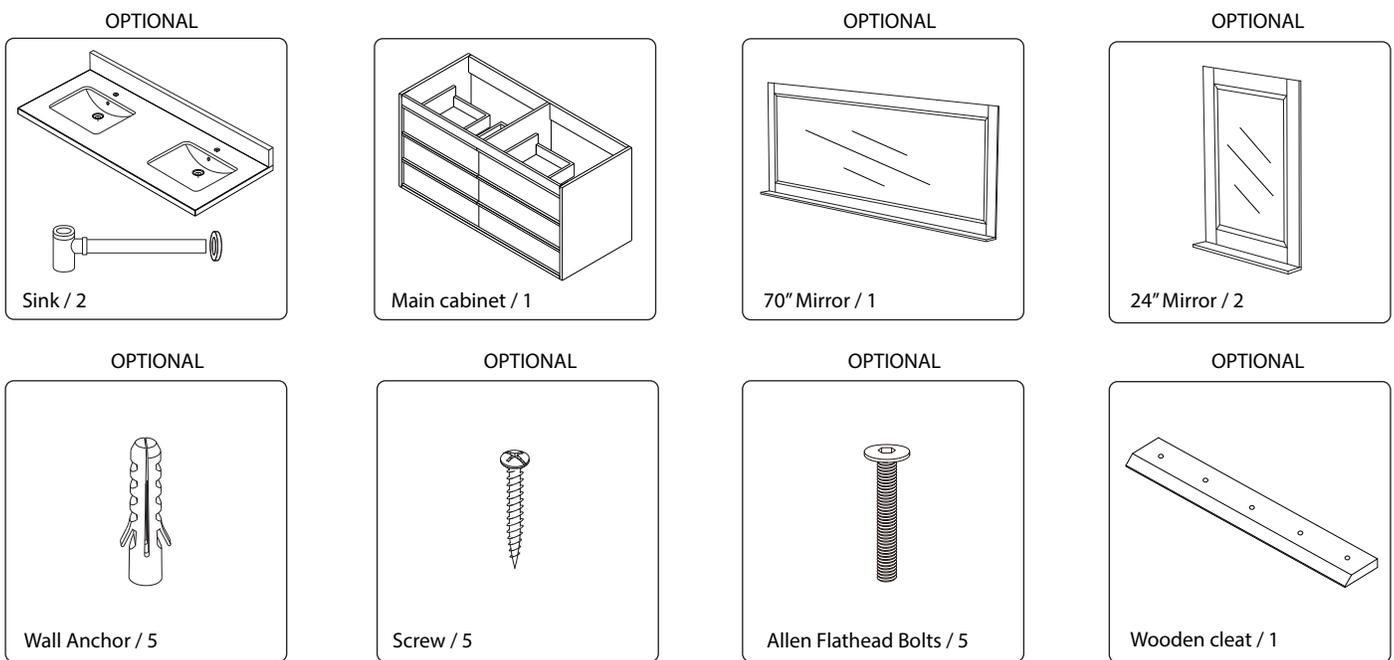

## REQUIRED TOOLS NOT IN BOX

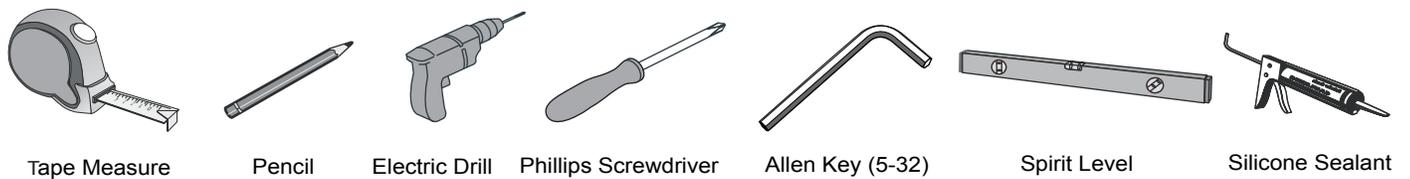


# WC-1818-72-DBL INSTALLATION-GUIDE


# WYNDHAM COLLECTION

## INSTALLATION INSTRUCTIONS


- ① Attach counter to cabinet with silicone sealant applied to top of front and side cabinet edges. Do not over apply. Allow to dry for 24 hours for proper curing.

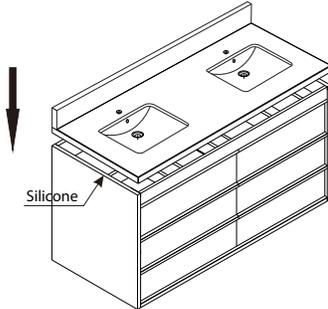


- ② Licensed professional installation recommended. Other installation techniques may require a licensed professional.

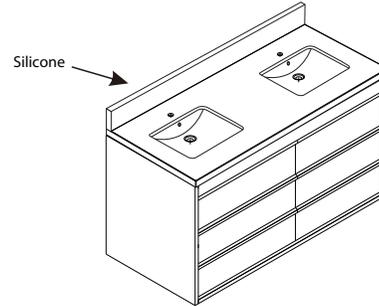


- ③ Place flathead bolts through existing holes on mirror shelf. Attach to bottom of mirror frame and use Allen key to tighten bolts until shelf is securely fastened to mirror frame.

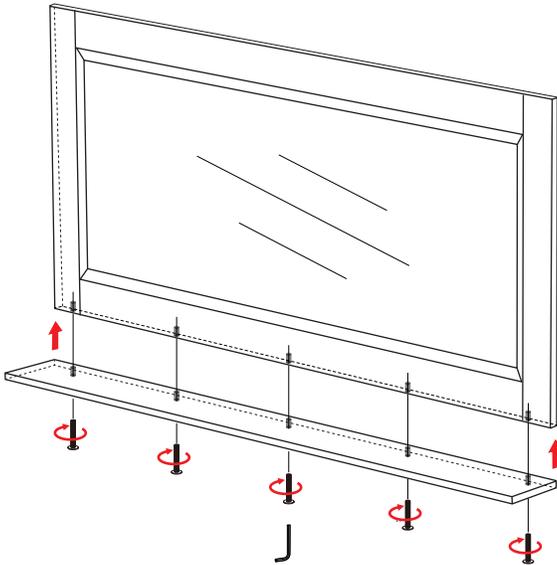

- ④ Drill holes in wall and gently tap anchors into the holes.

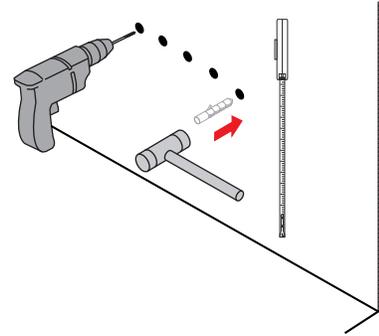

- ⑤ Place wooden cleat flat onto wall, carefully lining it up with the holes. Next, use the screws provided to fasten cleat onto the wall.

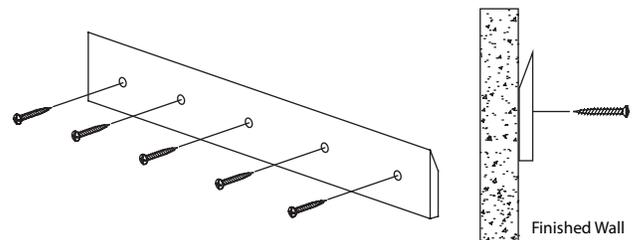


WC-1818-72-DBL  
INSTALLATION-GUIDE

# WYNDHAM COLLECTION

## MIRROR INSTALLATION INSTRUCTIONS

- ⑥ Hang mirror by placing top rail/cleat directly onto the wall cleat, matching the angle of the slant.

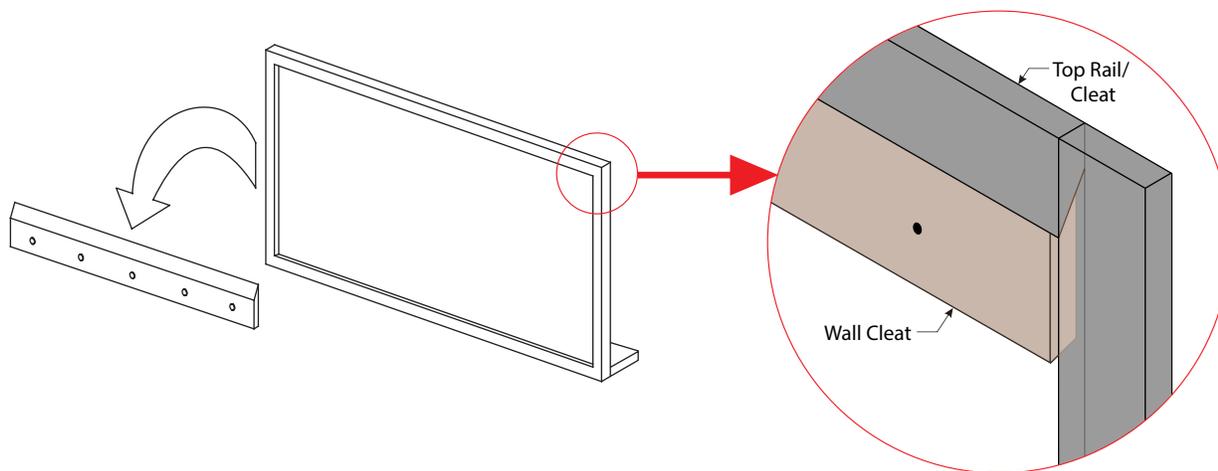

WC-1818-72-DBL  
INSTALLATION-GUIDE