



(figure 10)

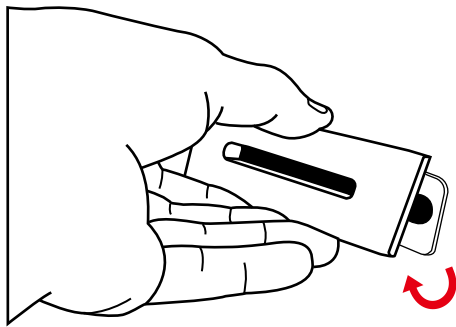

(figure 11)

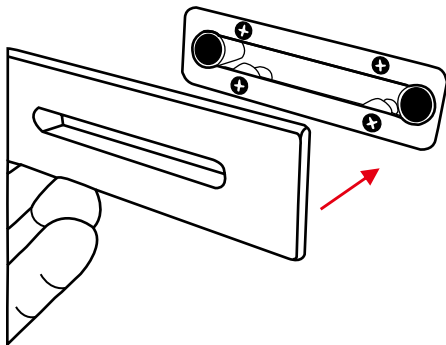

(figure 12)

INSTALL OVERFLOW

If you purchased a Brushed Nickel pop up **overflow, or any other trim kit finish, please** follow these replacement instructions.

Place hand and use fingers to lift up overflow from bottom edge as pictured. (figure 10)

Tilt up then pull out the overflow from holes on it's base. (figure 11)

To replace new overflow, simply match position of screws located on rear of overflow and push until it is locked into holes. (figure 12)

It is highly recommended that you do not use any **sharp objects to remove the overflow, for it will** cause surface damage to the tub as well as the **overflow itself.**