



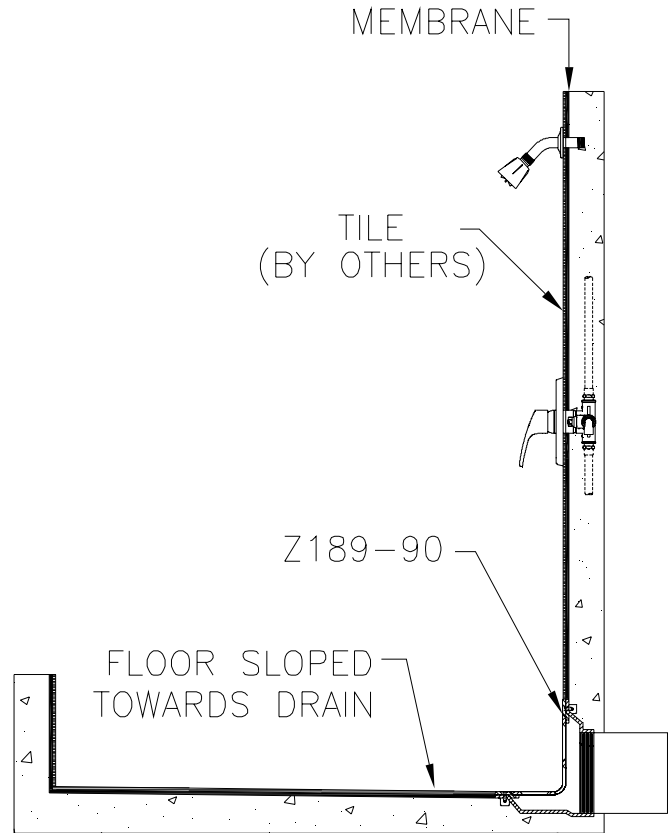

TYPICAL SHOWER INSTALLATION FOR Z189-90 SCUPPER DRAIN

Dimensional Data (inches and [mm]) are Subject to Manufacturing Tolerances and Change Without Notice

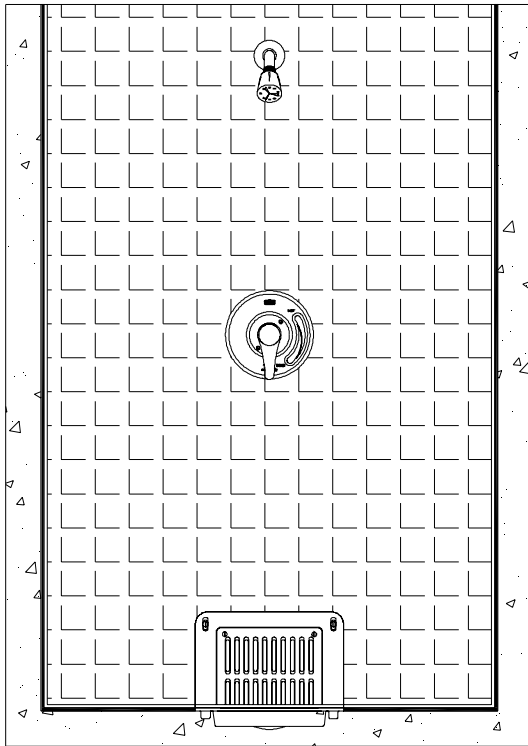

Z189-90 SCUPPER DRAIN

Drain is illustrated in a shower floor application. Dimensional data is shown in the Engineering Handbook and on the Zurn submittal drawings. The drain body is secured to the pipe by a threaded connection or a no-hub connector. The type of connection must be specified upon ordering. The waterproofing membrane is to run up to and over the clamping flange area. The clamping collar is then placed on the drain and then secured. The design and method used for the installation of flooring materials is by others. For other available scupper drains, see Z187

Form # RD75

Date: 3/17/06

C.N. No. 94917

Rev.

ZURN INDUSTRIES, INC. ♦ SPECIFICATION DRAINAGE OPERATION ♦ 1801 Pittsburgh Ave. ♦ Erie, PA 16514

Phone: 814/455-0921 ♦ Fax: 814/454-7929 ♦ World Wide Web: www.zurn.com

In Canada: ZURN INDUSTRIES LIMITED ♦ 3544 Nashua Drive ♦ Mississauga, Ontario L4V1L2 ♦ Phone: 905/405-8272 Fax: 905/405-1292