


SHOWER HEAD INSTALLATION

Thread shower head onto shower arm.

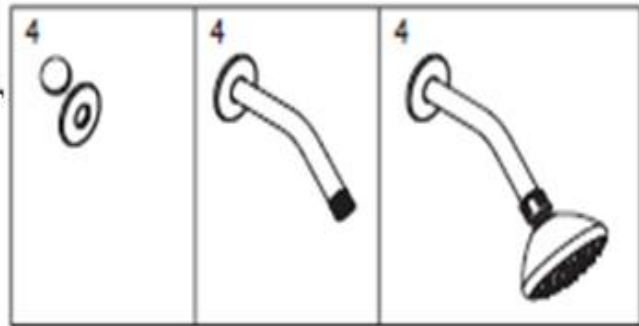

REMEMBER TO WRAP
THREADED CONNECTIONS
WITH TEFLON TAPE OR JOINT
COMPOUND.