


# ASSEMBLY INSTRUCTIONS FOR # 113155

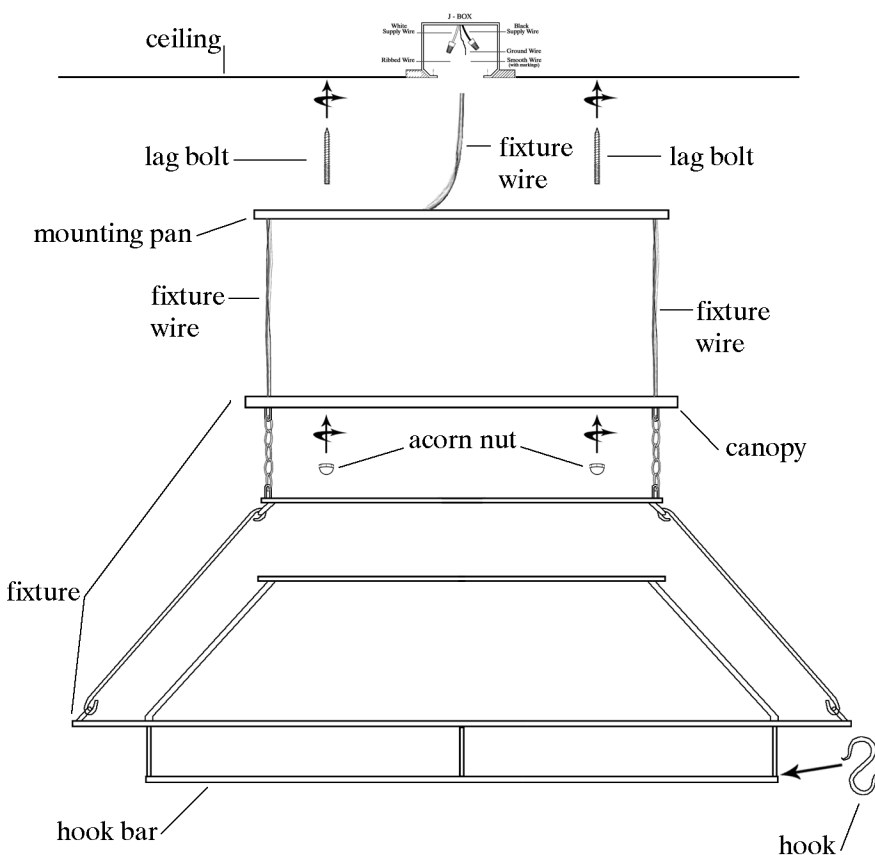

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Make sure lag bolts are secured to weight bearing ceiling structure.
2. Place electrical wires through mounting pan.
3. Wire as per local electrical code.
4. Place mounting pan onto lag bolts to ceiling.
5. Place fixture/canopy onto lag bolts up to ceiling.
6. Secure with acorn nuts, tighten to canopy.
7. Place pot hanging hooks onto hook bar as needed.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)