

PARTS & ASSEMBLY SHEET

Fixture Name: Echelon 8981-M1L BRI / GRM

This fixture assembled PO:_	Date:
-----------------------------	-------

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.

PARTS LIST		Company Name:Co. Account #: to be filled out by retailer			
Canopy	1ea	Hex nut	1ea (CD)	Wire connectors	2ea
Mounting bracket	1ea	Nipple	1ea	Socket rings	1ea <u> </u>
Chain	1ft 😊	Mounting screws	2ea {	Canopy Loop and Canopy loop collar	1e <i>ε</i>
Chain connector	2ea	12" Rod	3ea		
Crystal draping A1 x 3pcs	Crystal draping A2 x 3pcs	Crystal drops B2 x 3p	Crystal drops C1 x 1pc	Crystal drops are not included in parts bag. They are already installed on the fixture.	
Part Needed Part Needed			Quantity Quantity		
Reason why Comments	(missing, scratche	ed, broken glass, bent, bad finish)			


FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet, but do not install before assembling the fixture.

- 1. By measuring determine correct number of rods and chain needed for proper hanging height. There are two optional 12" rods included.
- 2.To shorten the fixture trim the wires to the desired length plus at least $8\sim10$ inches. You must use at least one Rod.
- 3. To lengthen the fixture add additional rods (ROD-8981 CH) or additional chain (CHAIN-8981), available separately.

NOTE: THE SHADE ASSEMBLY CAN BE DAMAGED BY ROUGH HANDLING. USE CARE WHEN ASSEMBLING.

8981-M1L BRI / GRM

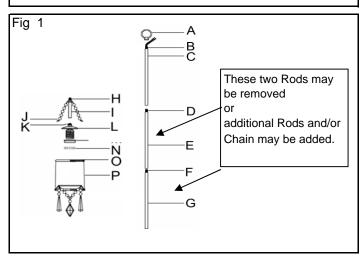

For Customer Service, contact the place of purchase to arrange for replacement parts.

PARTS & ASSEMBLY SHEET

Fixture Name:

Fig 2

Echelon 8981-M1L BRI / GRM

- 4. Pull the fixture's wire through the Rods.
- 5. Thread Rod (F) into Frame at (H) until tight.
- 6. Thread Rod (D) into Rod (F) until tight. repeat for any additional rods.
- 7. Feed the fixture wires through the Top loop (A) and pull the wires until taut.
- 8. Thread Top loop (A) into Rod (C) until tight.
- 9. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain then remove the excess Chain and discard it.
- 10. Use one chain connector (A12) to attach one end of the chain to the Top loop (A) and close the chain connector.
- 11. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
- 12. Slip Canopy loop collar (A11) over the Chain, then do the same with the canopy (A9).
- 13. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (A10) and close the chain connector.
- 14. Make sure the weight of the chandelier is supported by the chain-not the electrical wire.

* You may now install the fixture.

- 15. Place the Fabric shade (P) over the threaded socket
- (L) and secure in place by threading the ring (M) andSocket ring (N) on until tight. Then attach Crystal draping(J) to hook (O) of shade.
- 16. Install the light bulb in accordance with the fixture's specifications.

expanded view of assembly \mathbf{E} A10 A12 A9 **CHAIN** A12 D F

(DO NOT EXCEED MAXIMUM WATTAGE RATING!)



INSTALLATION INSTRUCTIONS

Fixture Name: Echelon 8981-3P, 5, 9, M1L BRI / GRM

For Chandelier Light Fixture

WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig.1)

- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
- 3. Thread Nipple(A-8) into Canopy loop (A-11) until snug. Thread Hex nut (A-6) and Washer (A-5) on next.
- 4. Thread other end of the Nipple (A-8) with Canopy loop attached into Mounting strap (A-4)about 4 complete turns.
- 5. Tighten the Washer (A-5) and Hex Nut (A-5) until snug to the Mounting strap(A-4).
- 6. Take this mounting strap assembly and mount to ceiling junction box with Mounting Screws (A-7). Tighten screws securely with screw driver.
- 7. Unscrew the Canopy loop collar(A-10)from the Canopy loop. Take the canopy and pass over the Canopy loop. approximately one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy loop collar.
- 8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
- 9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.

CONNECTING THE WIRES (Fig 2)


- 10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (A-4) or connect both wires together using the correct size of wire connectors.


NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.

12. Tuck these wire connections neatly into the Junction Box.

FINISHING THE INSTALLATION

13. Raise Canopy (A9) to the ceiling and secure in place by tightening the Canopy loop collar(A11) onto the Canopy Loop(10)14. Install the light bulbs and shade as per the fixture assembly sheet.

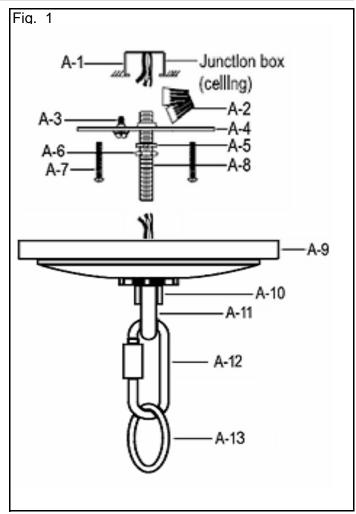

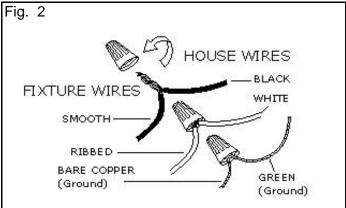

YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX AND
TEST THE FIXTURE.

CRYSTAL INSTRUCTION

