


WARNING

DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

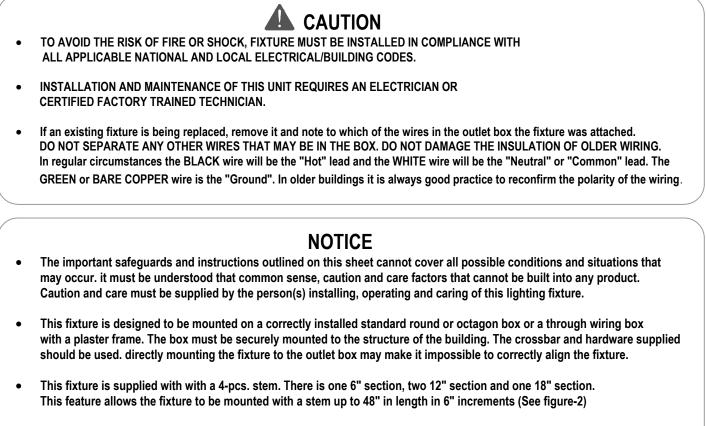

• This fixture is supplied with a swivel. By rotating the canopy the fixture may be mounted to angled ceiling.

FIXTURE PREPARATION

1. Remove the fixture, glass, metal prism and parts bag(s) from the carton.


NOTICE:

- Before discarding the carton, double check to make certain that all parts are found.
- Do not remove the tripod until after installation.
- Only handle/lift fixture by tripod or center stem.

FIXTURE INSTALLATION

1. Attach the SAFETY CABLE to the building structure or brace (See figure-1).

WARNING REFER TO THE ILLUSTRATION FOR CORRECT AND SAFE INSTALLATION OF SAFETY CABLE. FAILURE TO FOLLOW THIS INSTRUCTION COULD RESULT HARM/DAMAGE TO THE FIXTURE, PROPERTY AND/OR PERSON(S)!

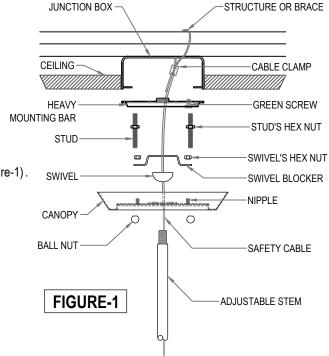

- 2. Determine the overall desired length of the fixture. Assemble the adjustable stems one at a time onto the fixture leads. Tape the end of the leads to a stiff wire (coat hanger) to aid in pulling them through the stems. Place the canopy onto the stem. Assemble the top stem section, decorative breaker, fixture stem and swivel. Place the swivel blocker over the nipple of the canopy and thread the hex nuts onto them.
- 3. Attach the heavy mounting bar to the junction box. (The green screw should face the floor). Thread the studs into the mounting bar at the spacing that matches the mounting holes in the canopy. Adjust the screw so they extend 3/16" beyond the canopy.
- 4. Cut off the excess ground and fixture wire 6" beyond the canopy. Strip $\frac{1}{2}$ " of insulation from the ends of the wire. Twist the wire stands together.
- 5. Fasten the ground wire to the green or bare copper wire in the junction box or the green screw on the mounting bar.

WARNING

Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

6. Fasten the white fixture lead to the white wire in the junction box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener.

WARNING

Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!



Approved fastener (wire nut)

- 7. Connect the black fixture lead to the black wire in the junction box. Fasten the joined wires as in step 6.
- 8. Attach the **SAFETY CABLE** to the fixture (See figure-1).

WARNING **REFER TO THE ILLUSTRATION FOR CORRECT AND SAFE** INSTALLATION OF SAFETY CABLE. FAILURE TO FOLLOW THIS INSTRUCTION COULD RESULT HARM/DAMAGE TO THE FIXTURE, PROPERTY AND/OR PERSON(S)!

- 9. Using the ball nuts, loosely fasten the fixture to the mounting strap. Rotate and align the canopy as necessary. Tighten the ball nuts.
- **10.** Place the glass (See figure-3) using the special tool supplied.
- **11.** Once the fixture is installed, remove the tripod. (Rotate the tail lock, that holds the tripod, in a counterclockwise direction.)
- 12. Attach the tail lock at the bottom of the fixture by rotating it clockwise.
- 13. Install the lamps (G9 lighting bulbs). NOTE: This fixture is rated for 50 watts G9 lamp.



14. Restore power to circuit at breaker or fuse box.

