


KitchenAid®

48 INCH BUILT IN REFRIGERATOR

MODELS:

KBSN608ESS00 (Stainless Steel)


CABINET PARTS

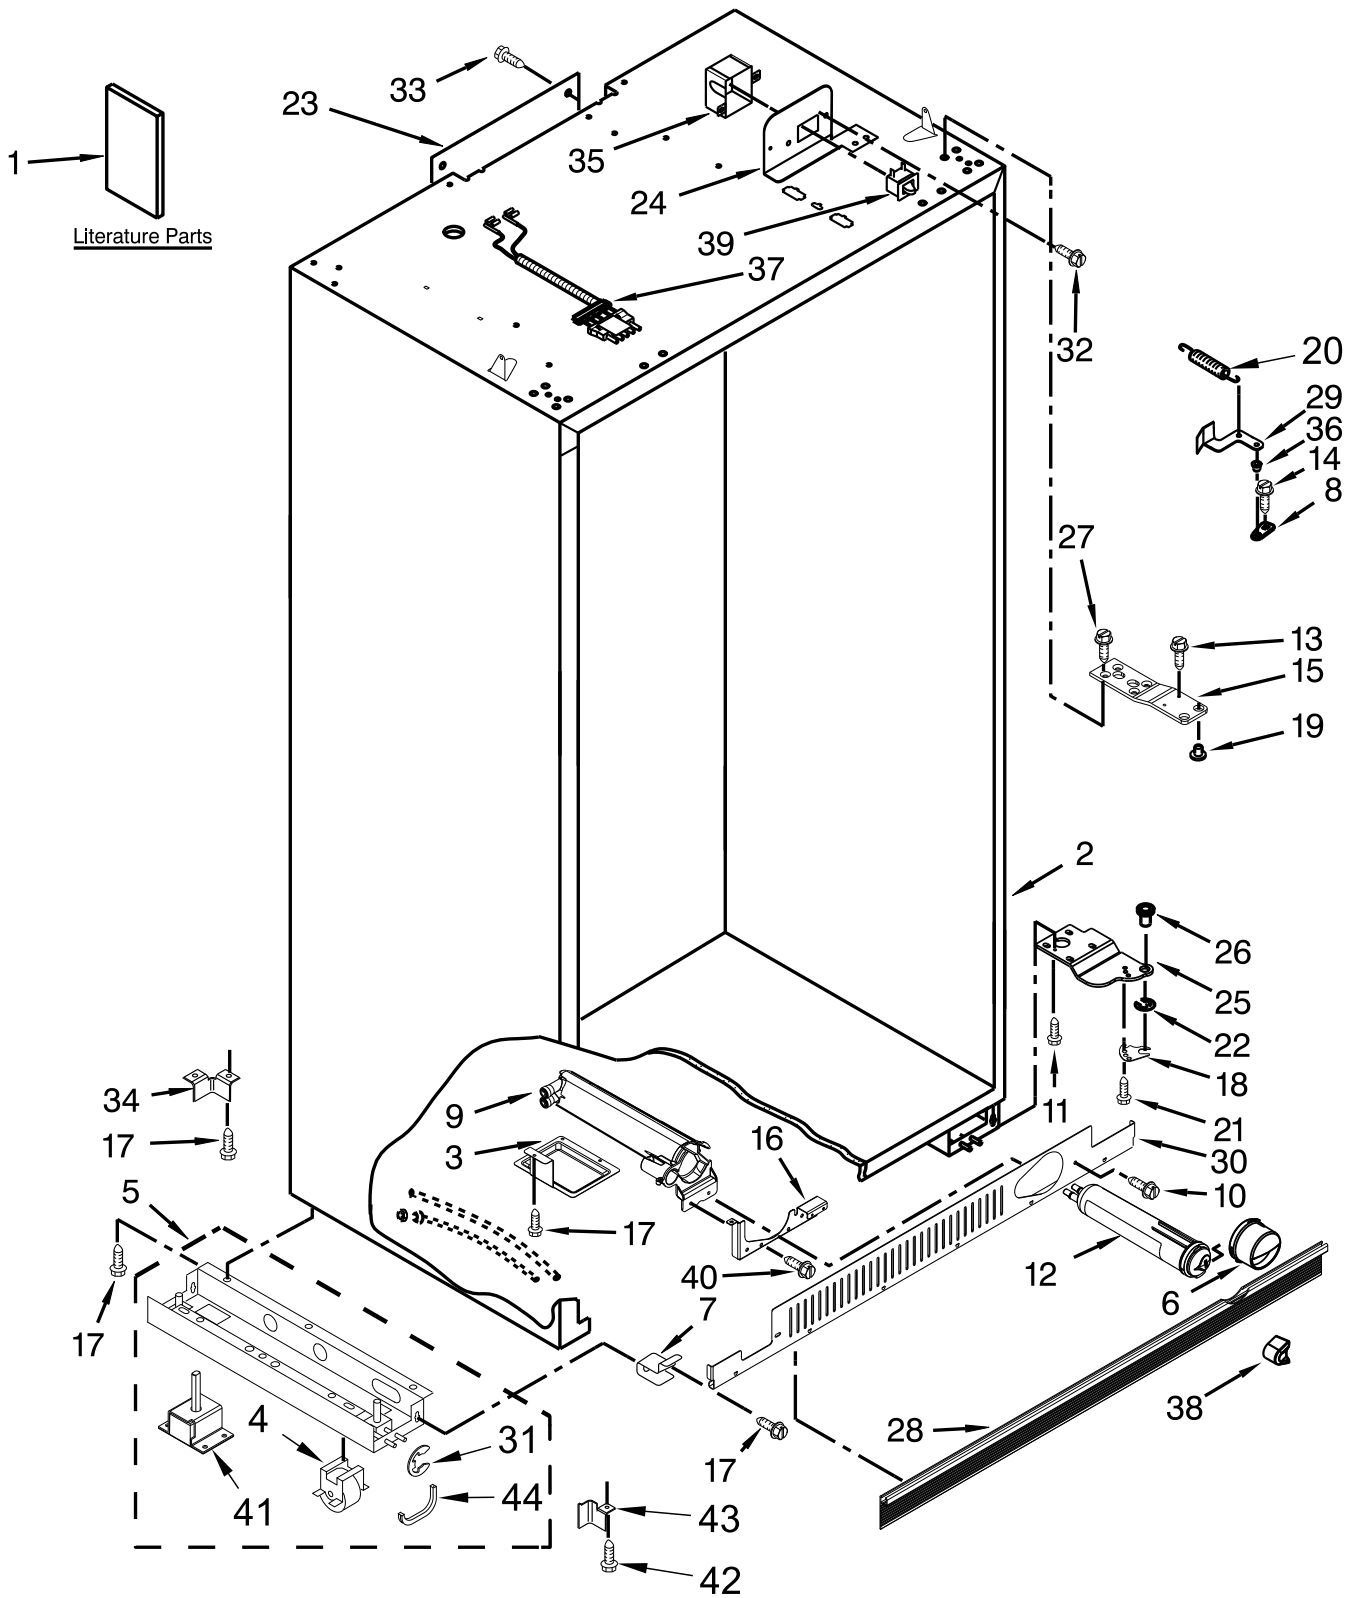

CABINET PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	14	W10485630	Screw	30		Grille, Bottom
	W10763009	Use and Care Guide	15	2257644	Hinge, Top		W10182718	Black
	W10763008	Energy Guide	16	W10674648	Bracket, Filter	31	2006841	Ring, Retainer
		Tech Sheet	17	W10001250	Screw	32	487415	Screw
	W10762994	English	18	2004994	Lock, Bushing	33	486194	Screw
	W10762996	French	19	W10484913	Bushing, Top Hinge	34	2006617	Bracket, Base Support (Rear)
	W10763010	Installation Instructions	20	2221242	Spring, Door Closure (Green)	35	2215938	Cover, Switch
2		Cabinet (Not Serviced)	21	3400230	Screw	36	2316859	Bushing, Extension Arm
3	2318189	Tray, Filter Drip	22	2005008	Ring, Bushing Retaining	37	W10780213	Assembly, Switch Wire
4	W10138054	Assembly, Roller	23	2215612	Cover, Air Duct	38		Button, Water Filter
5		Assembly, Support Base	24		Bracket, Switch		2260503B	Black
	W10279275	Left Hand		W10741112	Left Hand	39	1118894	Switch, Rocker Arm
	W10138423	Right Hand		W10741111	Right Hand		1115373	Switch, Rocker Arm Combination (Freezer)
6		Cap, Water Filter	25		Hinge, Bottom	40	8281163	Screw (Stainless)
	W10797527	Black		2006779	Left Hand	41	2005032	Leveler, Adjustable
7	2307640	Bracket, Grill Mounting		2006780	Right Hand	42	W10141604	Screw
8	2320509	Stop, Door	26	2302876	Bushing, Adjustable	43		Bracket, Support
9	W10121140	Housing, Water Filter	27	8533913	Screw		2006616	Left Hand
10	W10005050	Screw	28	W10188551	Skirt, Bottom Grille		2006556	Right Hand
11	3400525	Screw	29		Arm, Extension	44	2307584	Grommet, Crossover Tube
12	W10121146	Filter, Water		W10709785	Left Hand			
13	8281164	Screw (Stainless)		W10728112	Right Hand			


CABINET TRIM PARTS

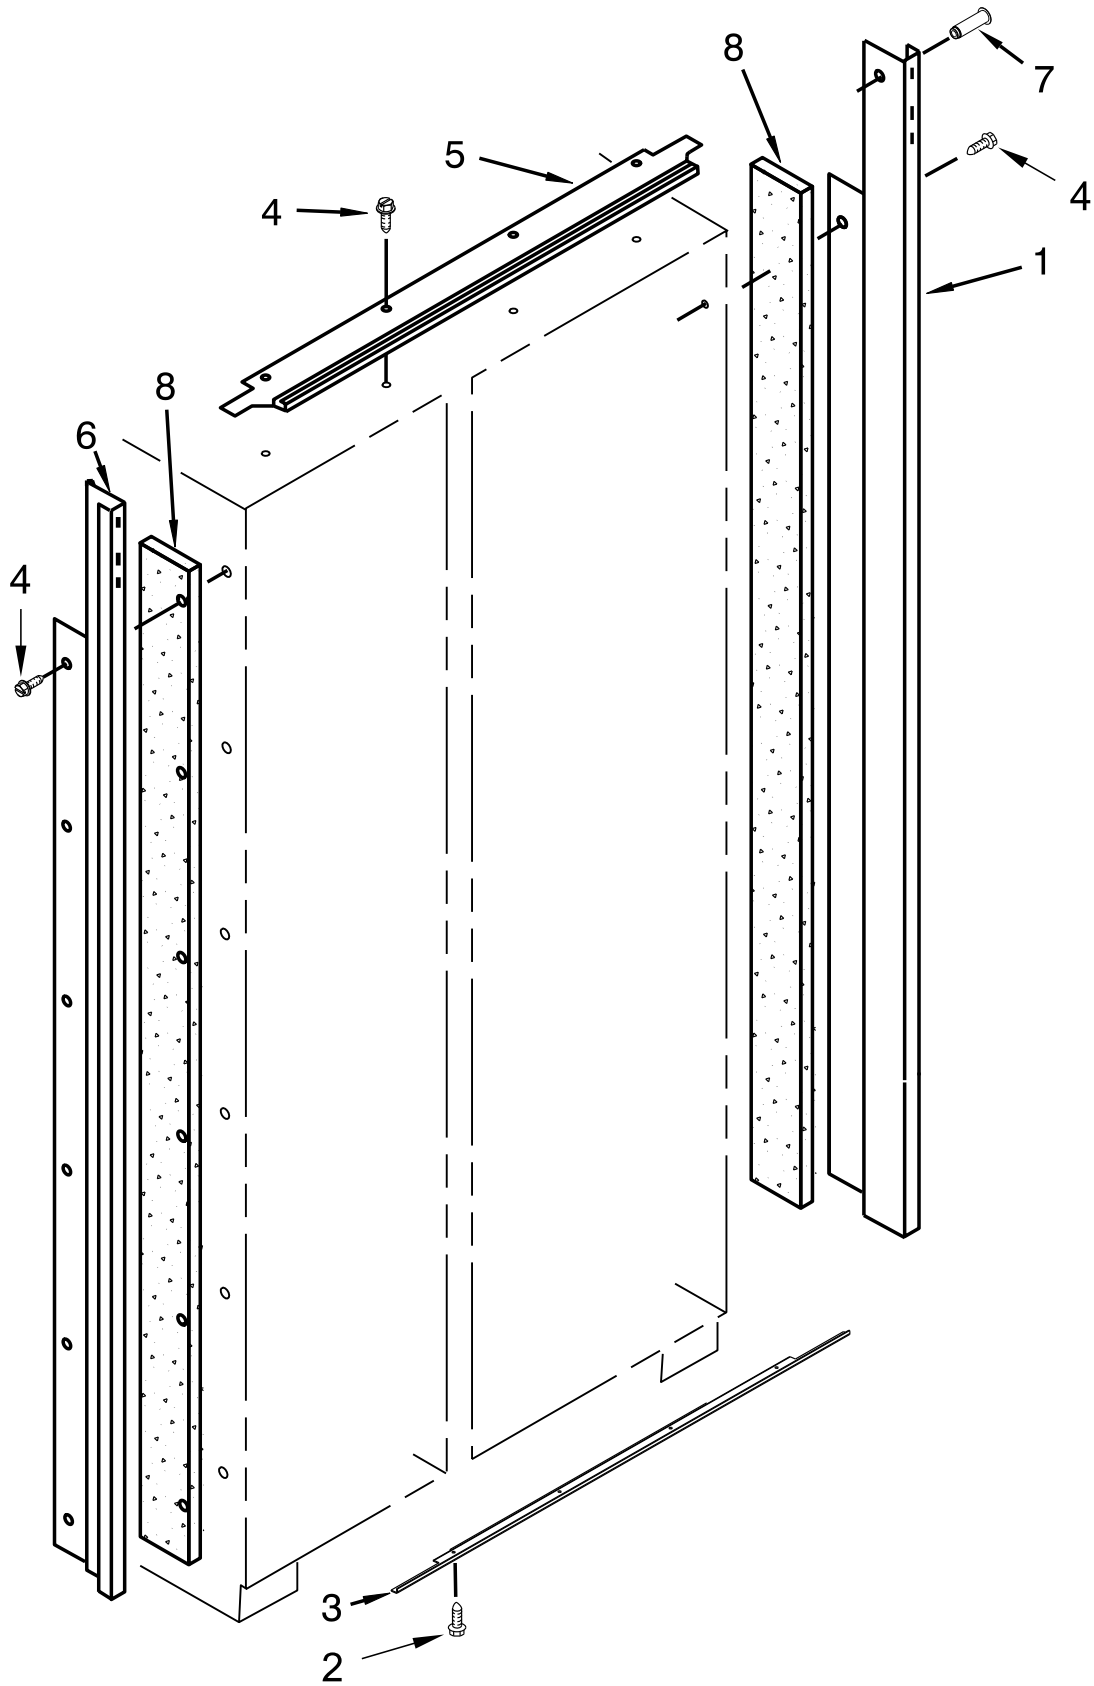

CABINET TRIM PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Cabinet Side (Right)	4	486194	Screw	7	W10121451	Insert, Blind Threaded
	W10568005	Aluminum	5		Trim, Top Cabinet	8	2005925	Seal, Side Trim
2	W10001250	Screw		2314018	Aluminum			
3		Trim, Bottom Cabinet	6		Trim, Cabinet Side (Left)			
	2316688	Aluminum		W10568007	Aluminum			


REFRIGERATOR LINER PARTS

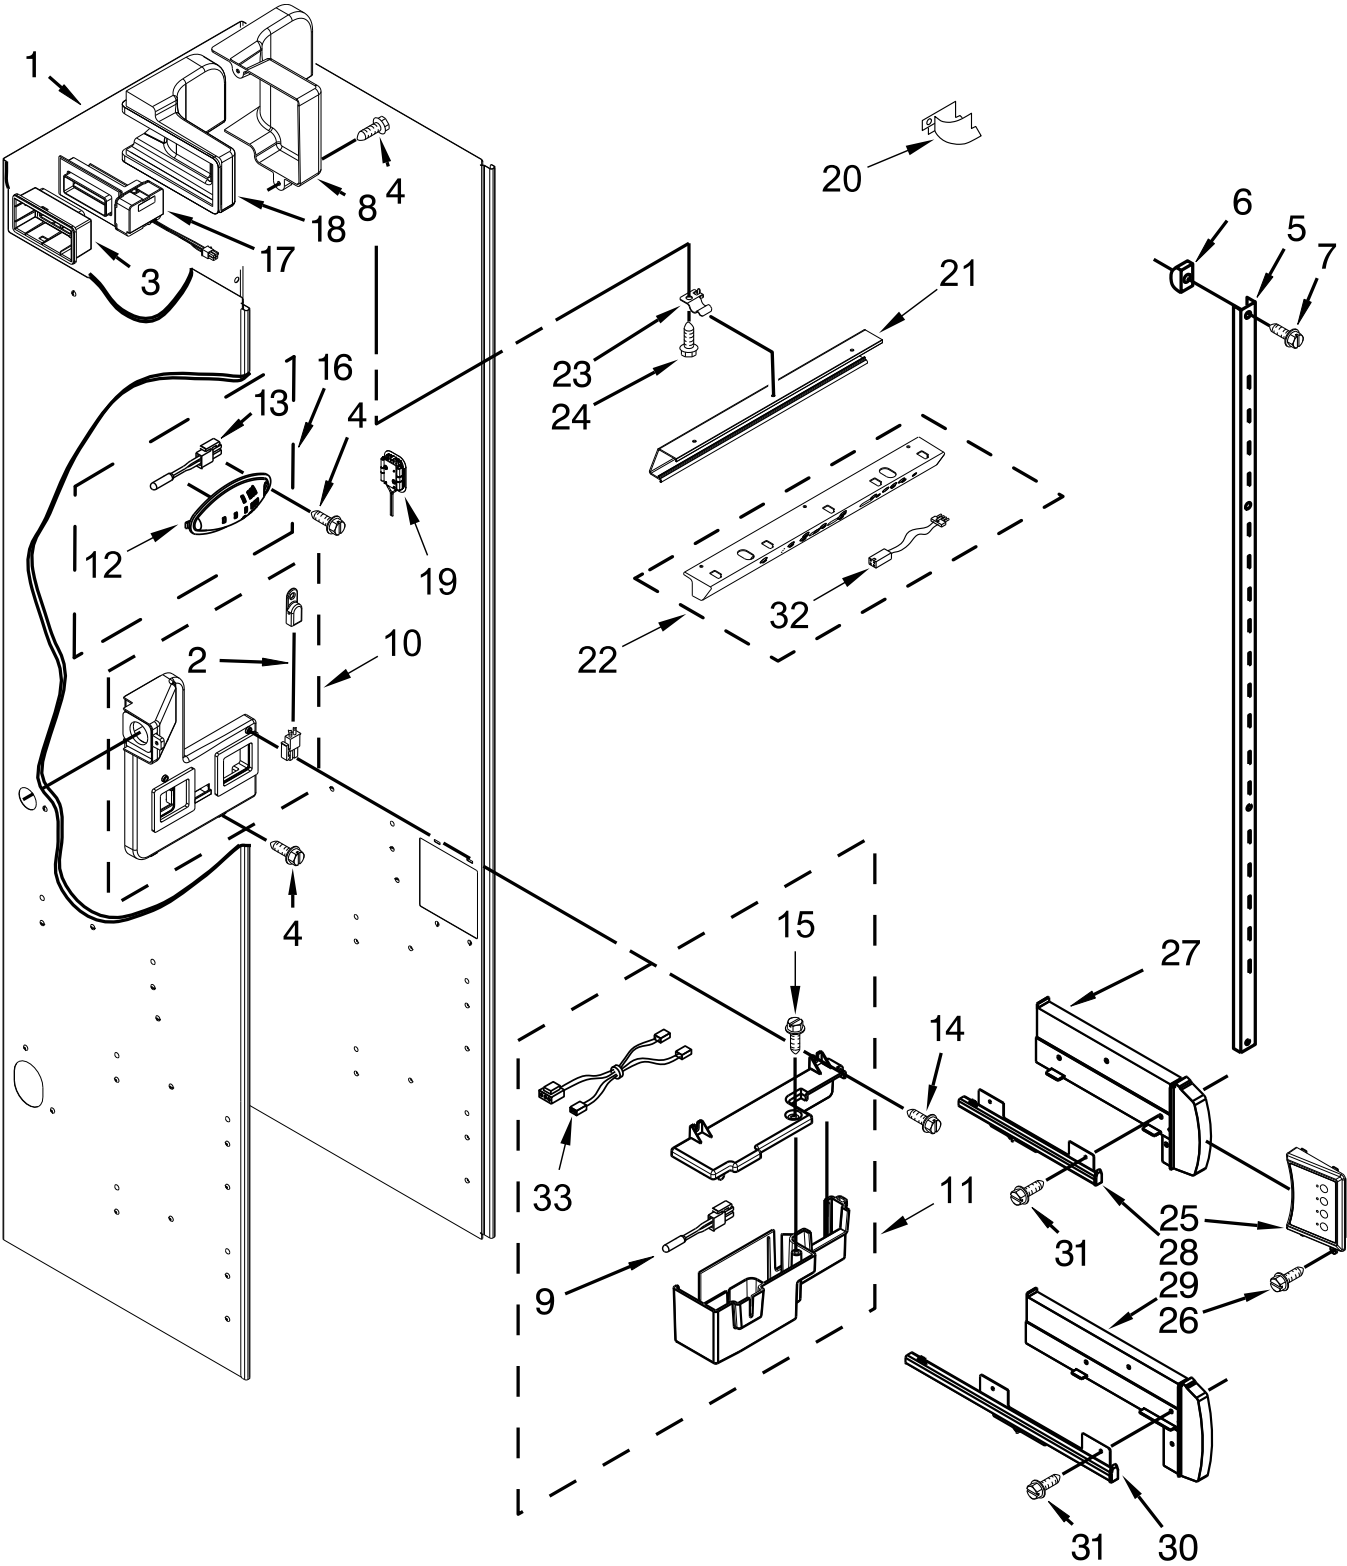

REFRIGERATOR LINER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not Serviced)	15	486194	Screw	27		Spacer, Meat Pan
2	2306010	Thermistor	16	2317844	Assembly, Thermistor		2256243	Left Hand
3	2208970	Duct, Air	17	2221296	Assembly, Air Baffle		2256244	Right Hand
4	487539	Screw (Stainless)	18	2309222	Assembly, Air Diffuser	28		Slide, Meat Pan
5	2259077	Ladder, Shelf	19	W10607479	Assembly, LED Module		2302954	Left Hand
6	520965	Support, Ladder	20	2003577	Guard, Air Return		2302955	Right Hand
7	2006475	Screw (White)	21	W10780415	Bracket, Control Box	29		Spacer, Crisper
8	2309087	Cover, Air Diffuser	22	W10798007	Assembly, Control Box		2256223	Left Hand
9	2302937	Thermistor	23	2317000	Clip, Control Box		2256222	Right Hand
10	W10475010	Assembly, Spacer	24	8281163	Screw (Stainless)	30		Slide, Crisper
11	W10169528	Assembly, Control Baffle	25	W10760791	Assembly, User Interface		2302956	Left Hand
12	2317105	Cover, Thermistor	26	W10142283	Screw (White)		2302957	Right Hand
13	2188820	Thermistor				31	8533928	Screw
14	8533929	Screw (Stainless)				32	W10458299	Wire, Jumper
						33	2310205	Assembly, Meat Pan Wire


FREEZER LINER AND AIR FLOW PARTS

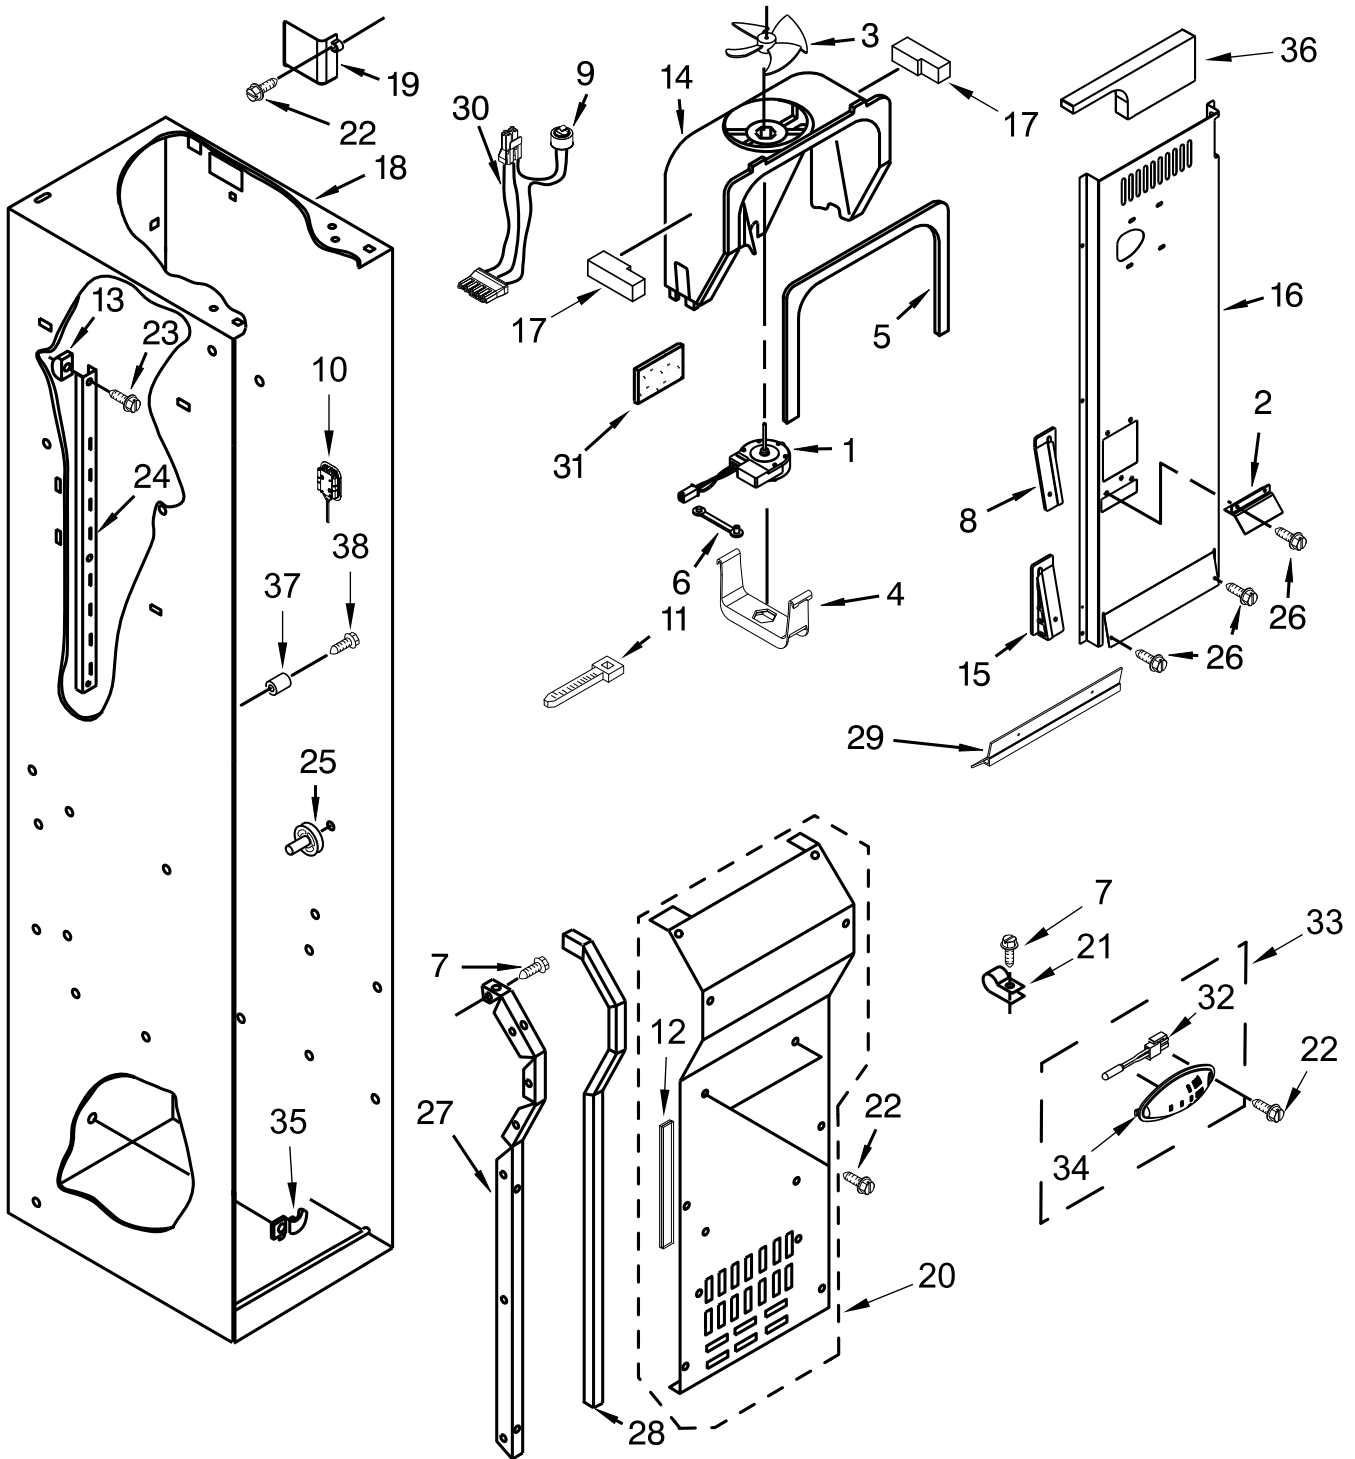

FREEZER LINER AND AIR FLOW PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10436861	Motor, Fan	17		Block, Fan Scroll	29	2302851	Support, Air Duct
2	2266801	Deflector, Air		2209066	Left Hand	30	W10482187	Harness, Bi-Metal Wire
3	2169142	Blade, Fan		2209482	Right Hand	31	2169104	Sealer, Insulation
4	W10260421	Retainer, Fan Motor	18		Liner (Not Serviced)	32	2188820	Thermistor
5	2302817	Gasket, Scroll Assembly	19	2259025	Cover, Air Outlet	33	2317844	Assembly, Thermistor
6	W10321090	Grommet, Motor	20	W10813095	Assembly, Evaporator Cover	34	2317105	Cover, Thermistor
7	486194	Screw	21	2221070	Clamp, Tube	35	1112260	Support, Evaporator
8	2259464	Wedge, Right Air Duct	22	487539	Screw (Stainless)	36	2309284	Deflector, Air Duct
9	W10160570	Bi-Metal, Defrost	23	2006475	Screw (White)	37	2266955	Spacer, Ice Door
10	W10607479	Assembly, LED Module	24	2259032	Ladder, Shelf	38	8533929	Screw (Stainless)
11	2155774	Tie, Wire	25	W10173127	Assembly, Shelf Stud			
12	W10581989	Gasket, Evaporator Cover	26	W10142283	Screw (White)			
13	2259445	Support, Ladder	27		Rail, Evaporator Cover			
14	2182120	Scroll, Fan		2221107	Left Hand			
15	2259465	Wedge, Left Air Duct		2259355	Right Hand			
16	2307778	Duct, Air	28	2220904	Gasket, Evaporator Cover			


REFRIGERATOR SHELF PARTS

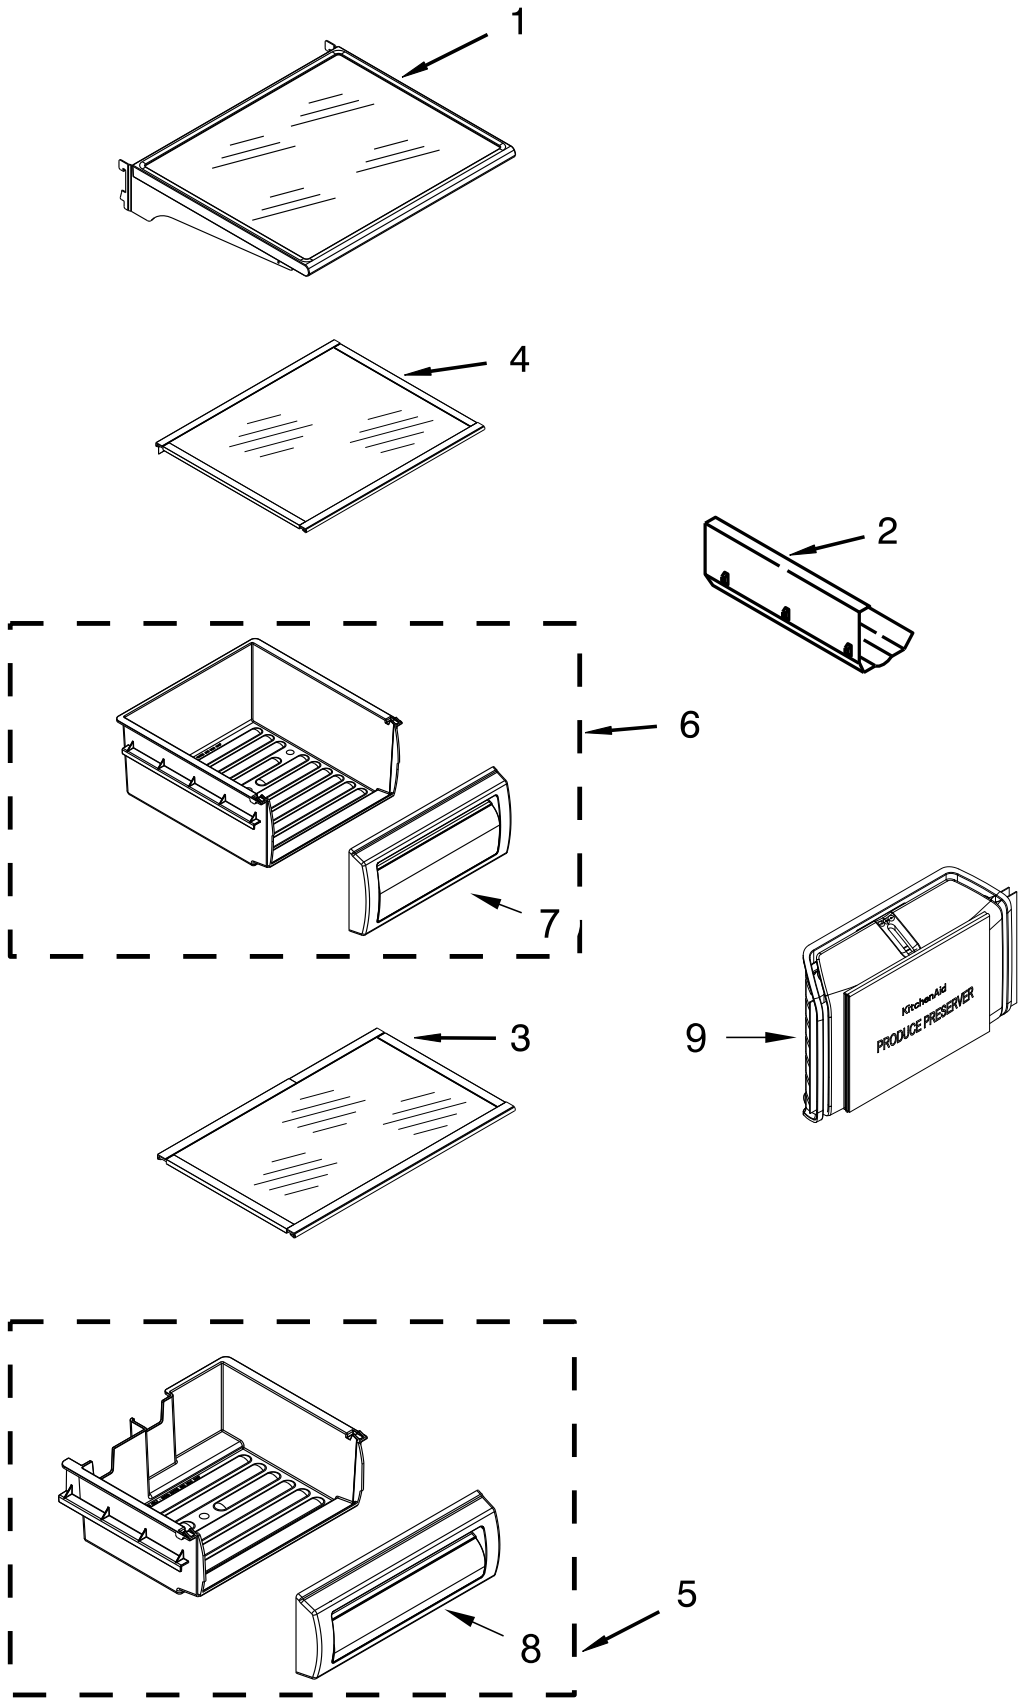

REFRIGERATOR SHELF PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10568585	Assembly, Fixed Shelf	6	W10407625	Assembly, Crisper Pan	8	2256367	Assembly, Meat Pan Front
2	W10701859	Rack, Wine	7	2256249	Front, Crisper Pan	9	W10593207	Assembly, Produce Preserver
3	W10556313	Assembly, Meat Pan Cover						
4	W10556776	Assembly, Crisper Cover						
5	W10407628	Assembly, Meat Pan						


FREEZER SHELF PARTS

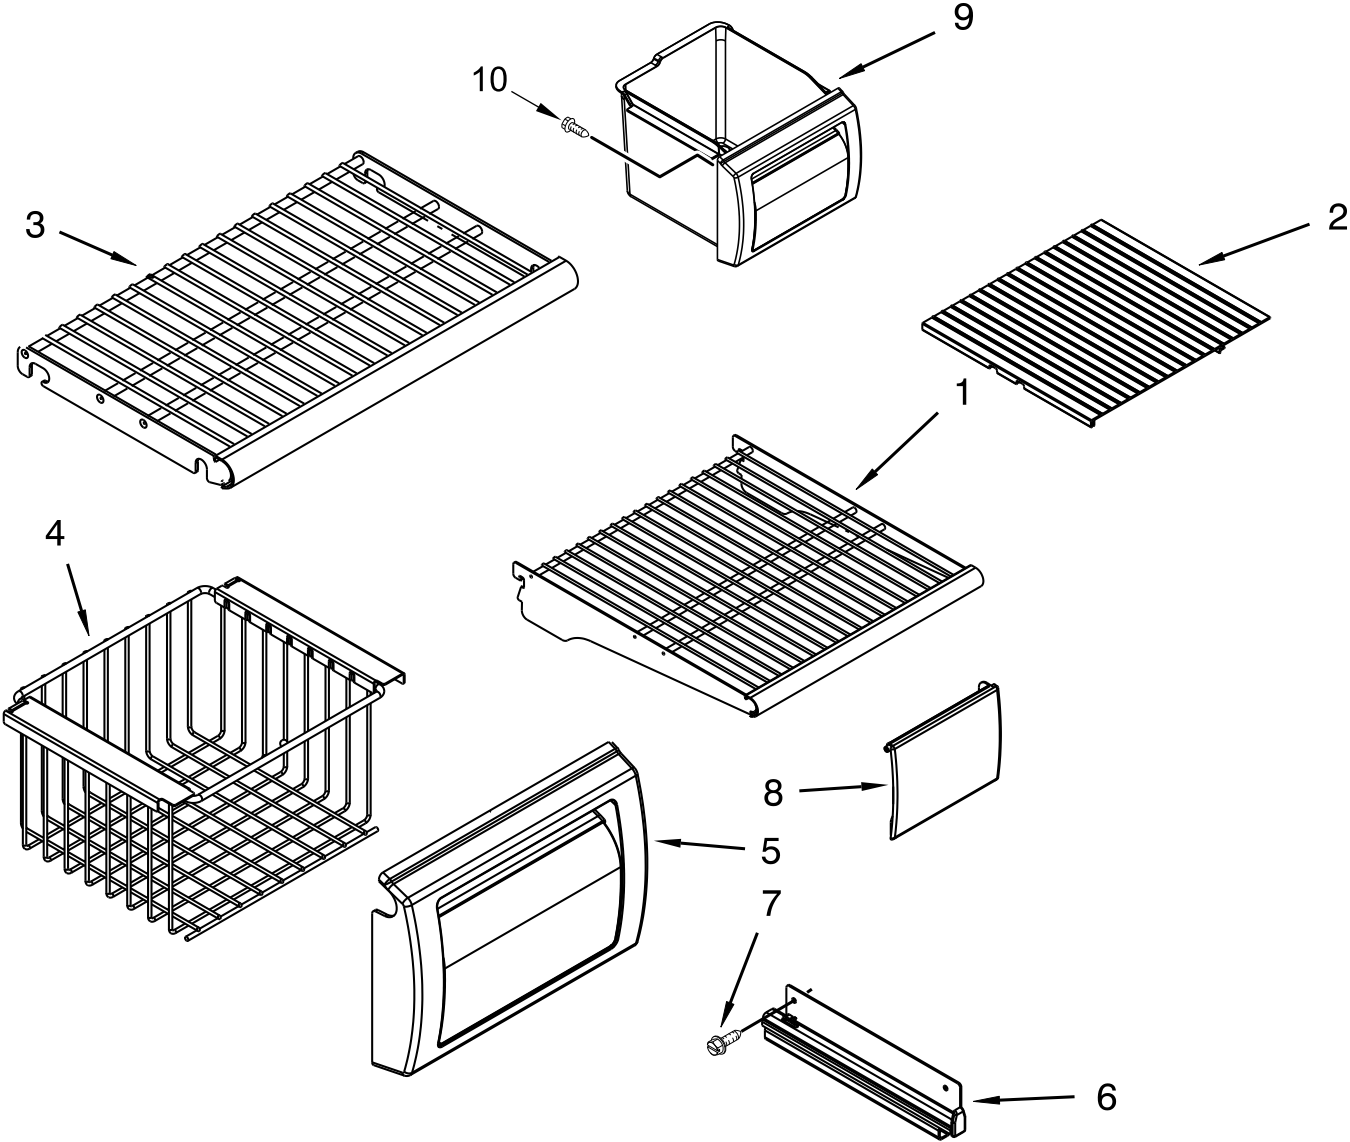

FREEZER SHELF PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10759087	Shelf, Wire	5	2256271	Assembly, Basket Front	7	8533928	Screw
2	W10760870	Cover, Shelf	6		Slide, Basket	8	2266935	Door, Ice
3	W10759067	Shelf, Fixed		2259318	Left Hand	9	2266932	Bucket, Ice
4	2259083	Basket, Freezer		2259317	Right Hand	10	488886	Screw


REFRIGERATOR DOOR PARTS

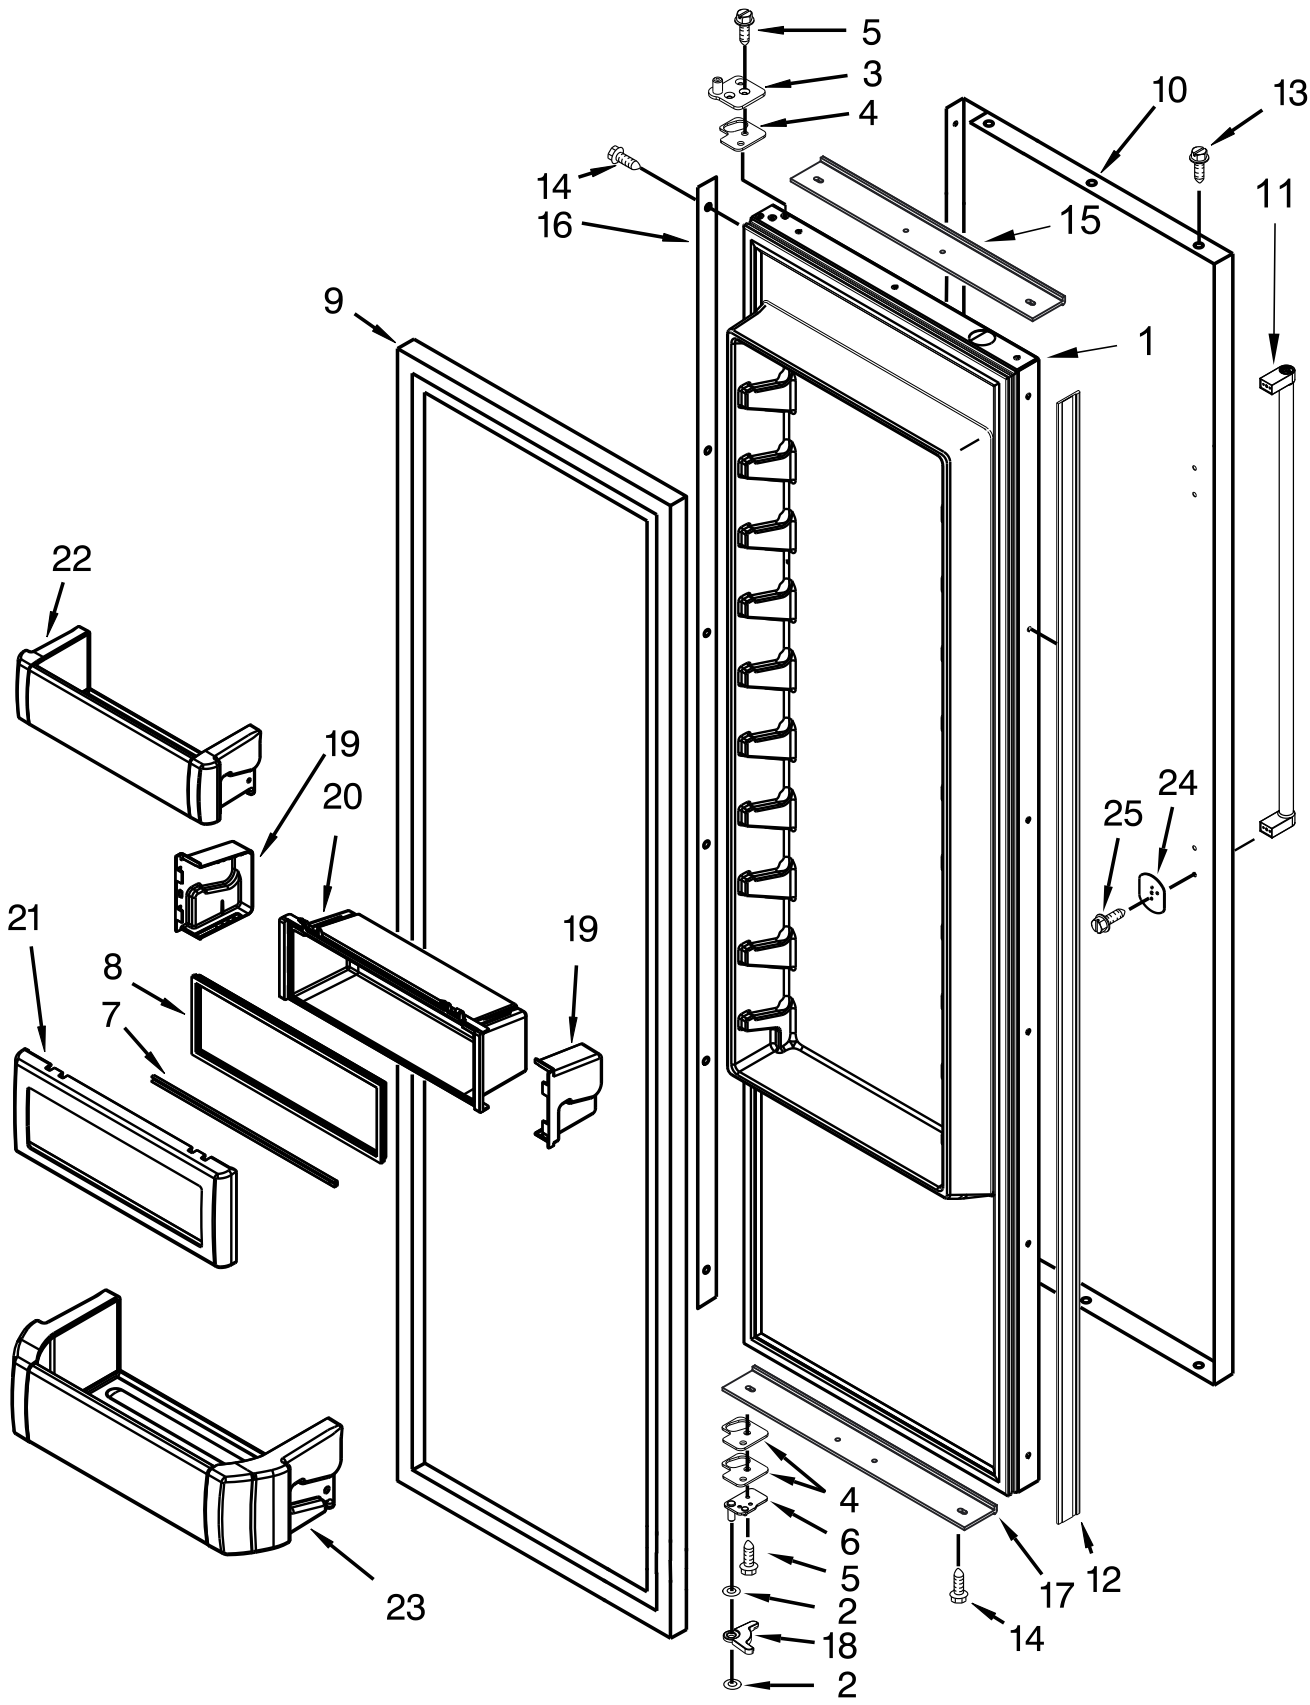

REFRIGERATOR DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10761879	Door, Refrigerator	11		Handle, Door	19		Endcap, Utility Bin
2	2006346	Washer, Extension Arm		W10541592	Stainless		W10769395	Left Hand
3	W10485980	Assembly, Hinge (Top)	12	W10758113	Spacer, Handle Side Door		W10768112	Right Hand
4	2316804	Spacer, Door Hinge Bottom	13	488568	Screw (Stainless)	20	W10323037	Bin, Utility Center
5	W10162602	Screw	14	8281250	Screw (Stainless)	21	2257617	Door, Utility Bin
6	2302878	Assembly, Hinge (Bottom)	15	W10761897	Spacer, Door Skin (Top)	22	W10323600	Bin, Shallow Door
7	2222797	Rail, Lid	16	W10756209	Spacer, Hinge Side Door	23	W10323748	Bin, Gallon Door
8	2222983	Gasket, Utility Bin	17	W10761937	Spacer, Door Skin (Bottom)	24	W10127710	Plate, Handle Door
9	W10760886	Grey	18	W10482554	Cover, Bottom Gap	25	308544	Screw
10		Skin, Door						
	W10756464	Stainless						


FREEZER DOOR PARTS

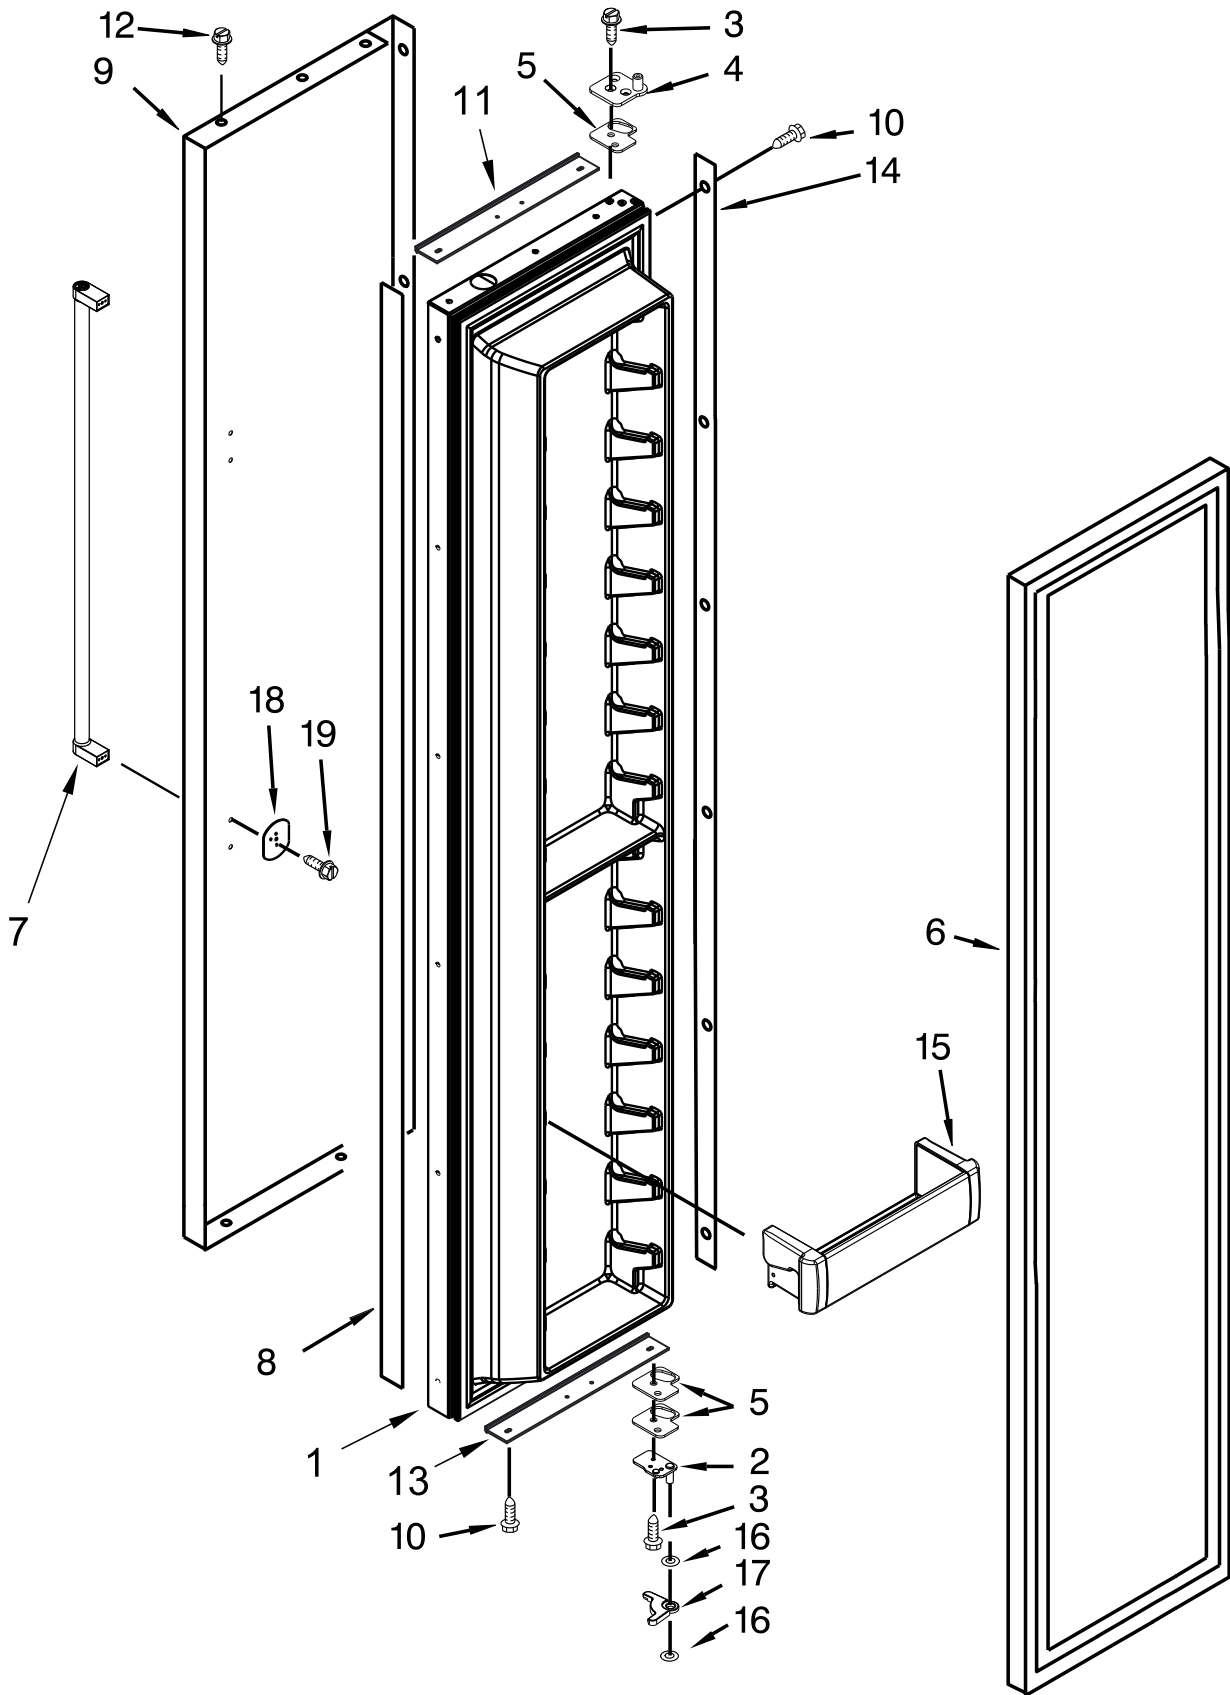

FREEZER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10761959	Door, Freezer	8	W10758113	Spacer, Handle Side Door	15	W10323603	Bin, Shallow
2	2302879	Assembly, Hinge (Bottom)	9		Skin, Door	16	2006346	Washer, Extension Arm
3	W10162602	Screw		W10756228	Stainless	17	W10482554	Cover, Bottom Gap
4	W10485980	Assembly, Hinge (Top)	10	8281250	Screw (Stainless)	18	W10127710	Plate, Handle Door
5	2316804	Spacer, Door Hinge Bottom	11	W10758121	Spacer, Door Skin (Top)	19	308544	Screw
6		Gasket, Door	12	488568	Screw (Stainless)			
	W10760884	Grey	13	W10761935	Spacer, Door Skin (Bottom)			
7		Handle, Door	14	W10756209	Spacer, Hinge Side Door			
	W10541592	Stainless						


TOP GRILLE AND UNIT COVER PARTS

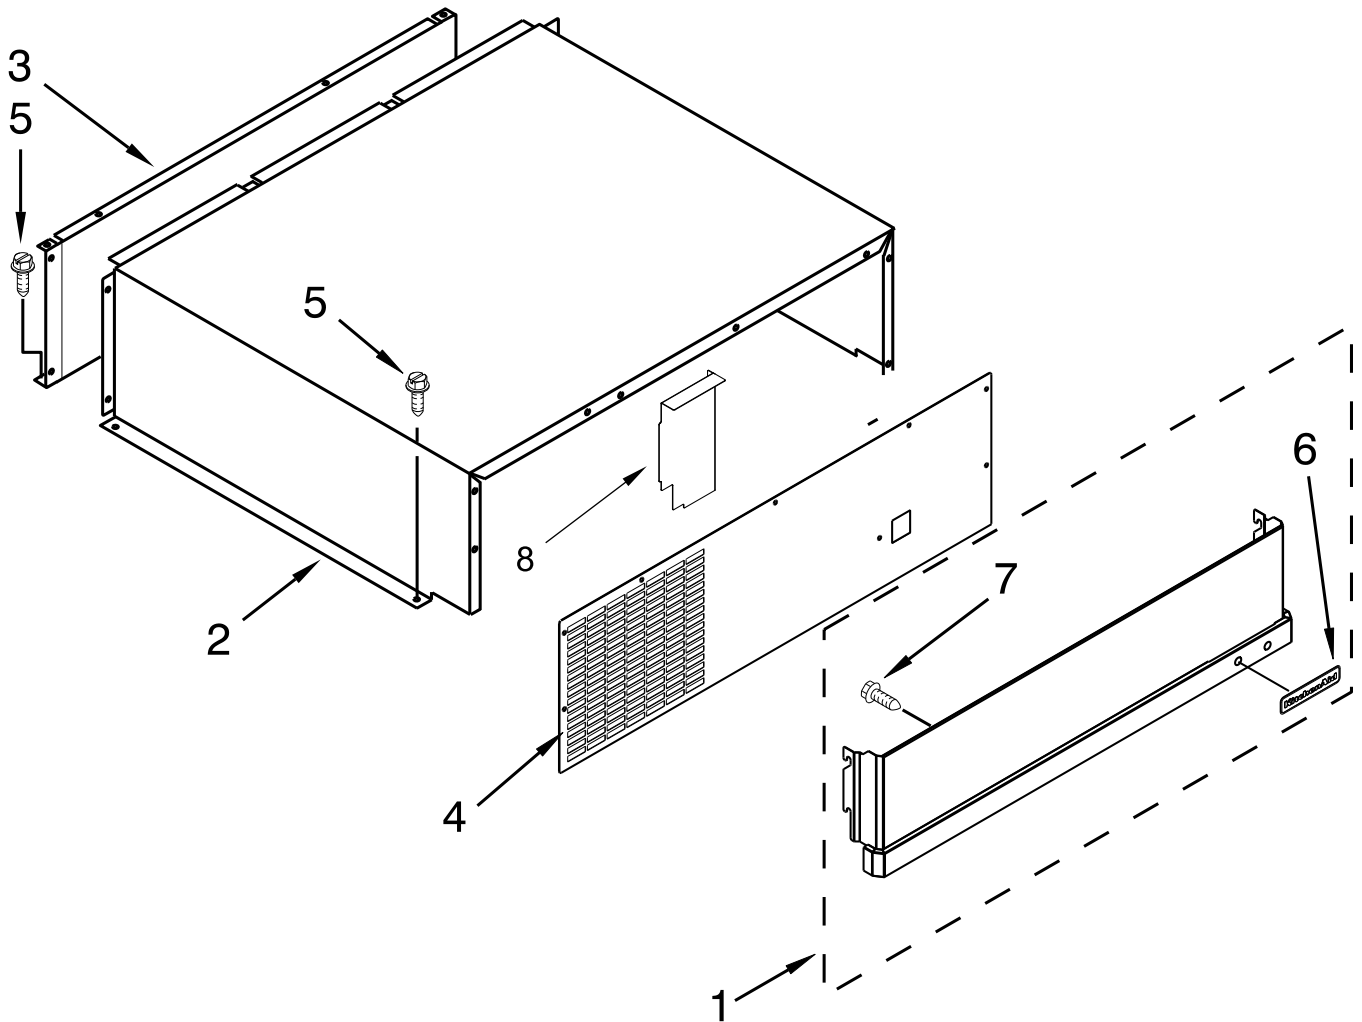

TOP GRILLE AND UNIT COVER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Top Grille	4	W10694109	Cover, Unit Front	7	489399	Screw
	W10761969	Stainless	5	1157158	Screw	8	W10645086	Divider, Unit Air
2	W10545068	Cover, Unit	6		Nameplate			
3	2256466	Panel, Unit Back		W10518672	Grey			


UPPER UNIT PARTS

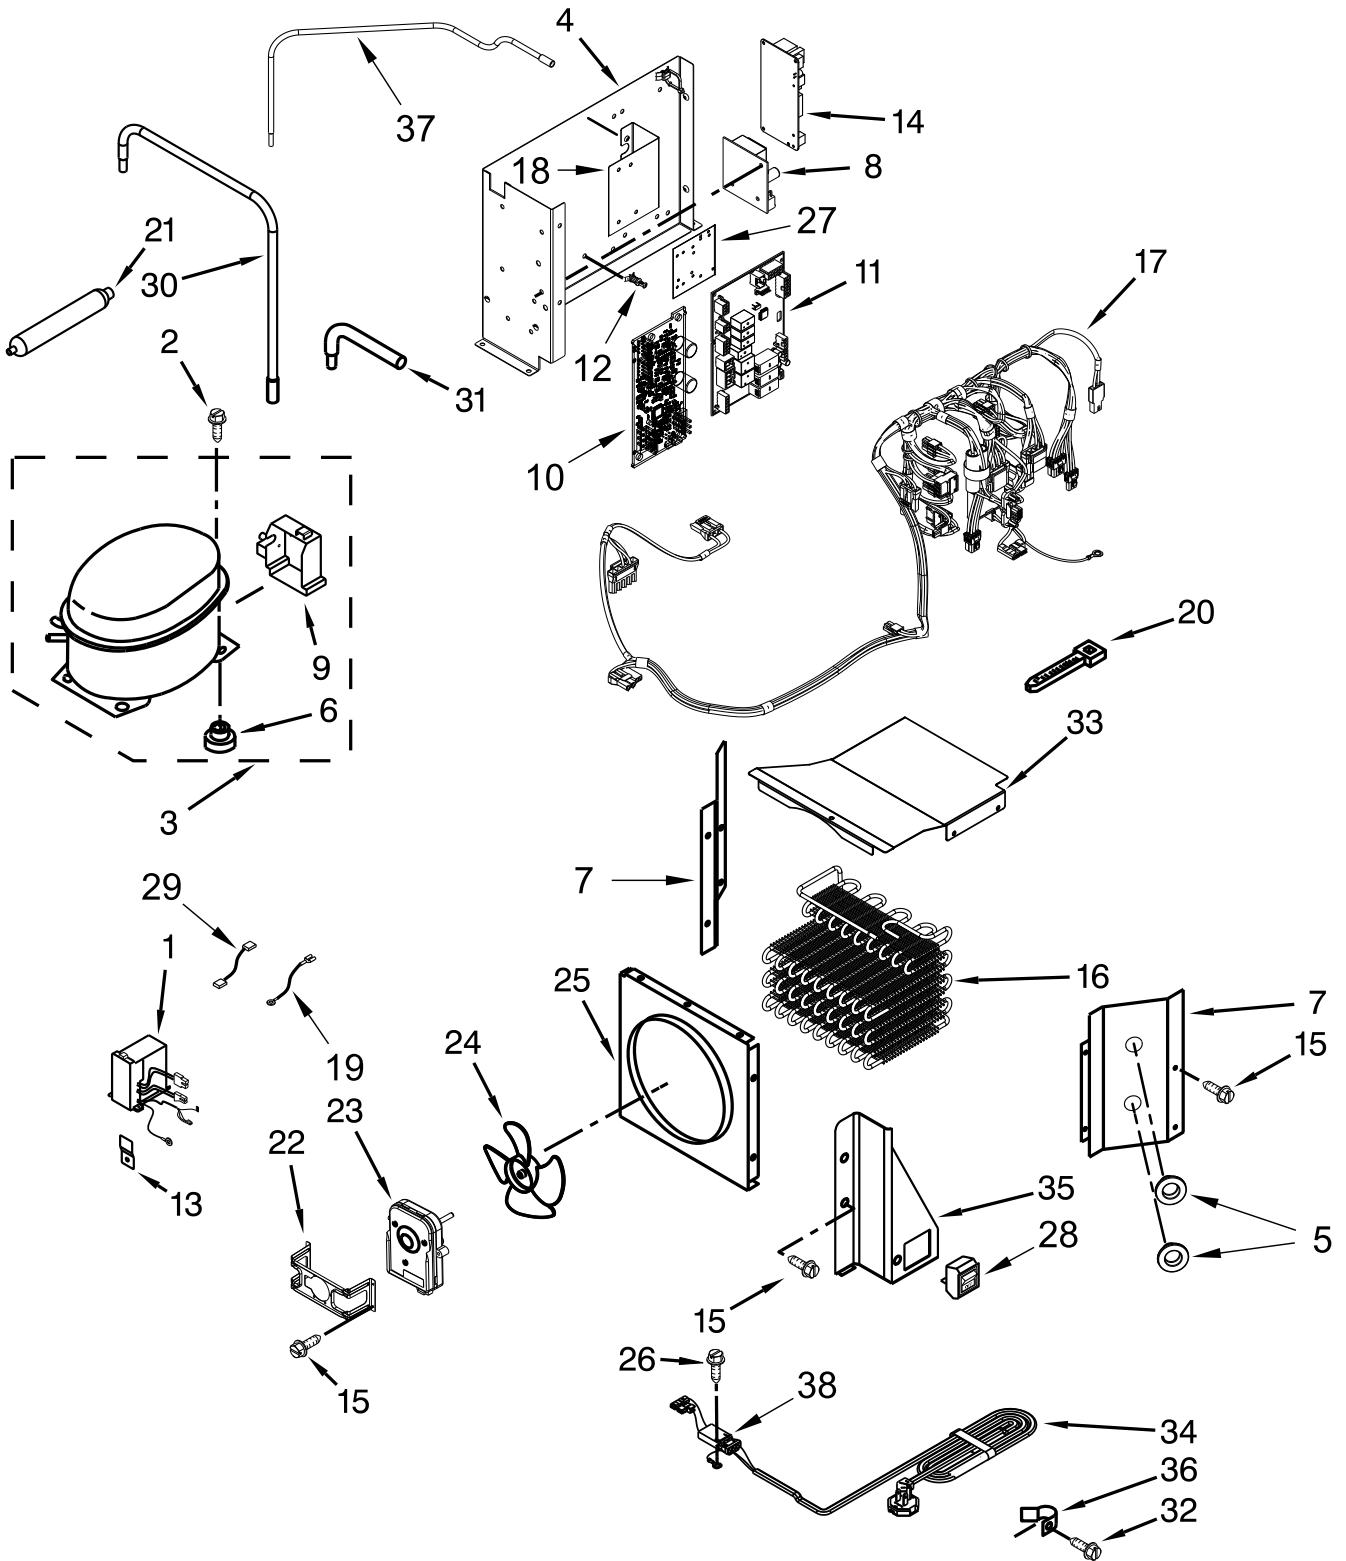

UPPER UNIT PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10449006	Assembly, Inverter Box	17	W10774818	Assembly, Unit Wire	35	W10321055	Bracket, Control Assembly
2	489373	Screw	18	W10761479	Plate, Circuit Board	36	549193	Clamp, Power Cord
3	W10173296	Compressor	19	W10483905	Jumper, Inverter	37	W10625009	Tube, Heat Loop Transition
4	W10550831	Housing, Control Board Mounting	20	2155774	Tie, Wire	38	2310195	Assembly, Jumper Wire (Power Switch to Power Cord)
5	W10587113	Grommet	21	W10175593	Drier			Following Parts Not Illustrated
6	1100826	Grommet	22	W10414681	Bracket, Fan Motor		978025	Valve, Access
7		Support, Condenser	23	W10527155	Motor, Condenser Fan		978026	Valve, Access
	W10525177	Left Hand	24	W10139483	Blade, Fan		978027	Valve, Access
	W10525179	Right Hand	25	W10415670	Orifice, Fan		978028	Valve, Access
8	2259350	Board, Power Supply	26	487294	Screw		978029	Valve, Access
9	2215676	Cover, Terminal	27	W10770059	Plate, Circuit Board (Top)		978030	Valve, Access
10	W10790783	Supply, LED Power	28	2266802	Switch, Power Disconnect		876764	Valve, Access
11	W10200659	Control, Electronic	29	W10495645	Ground, Inverter			REFRIGERANT CHARGE
12	2203075	Spacer	30	W10624944	Tube, Drier Transition			7.25 oz. (R-134A)
13	2256328	Bracket, Inverter Mounting	31	W10528578	Tube, Process			
14	W10624574	Supply, Power	32	486194	Screw			
15	1157158	Screw	33	W10525175	Cover, Condenser Support			
16	W10591457	Condenser	34	2310196	Cord, Power			


LOWER UNIT AND TUBE PARTS

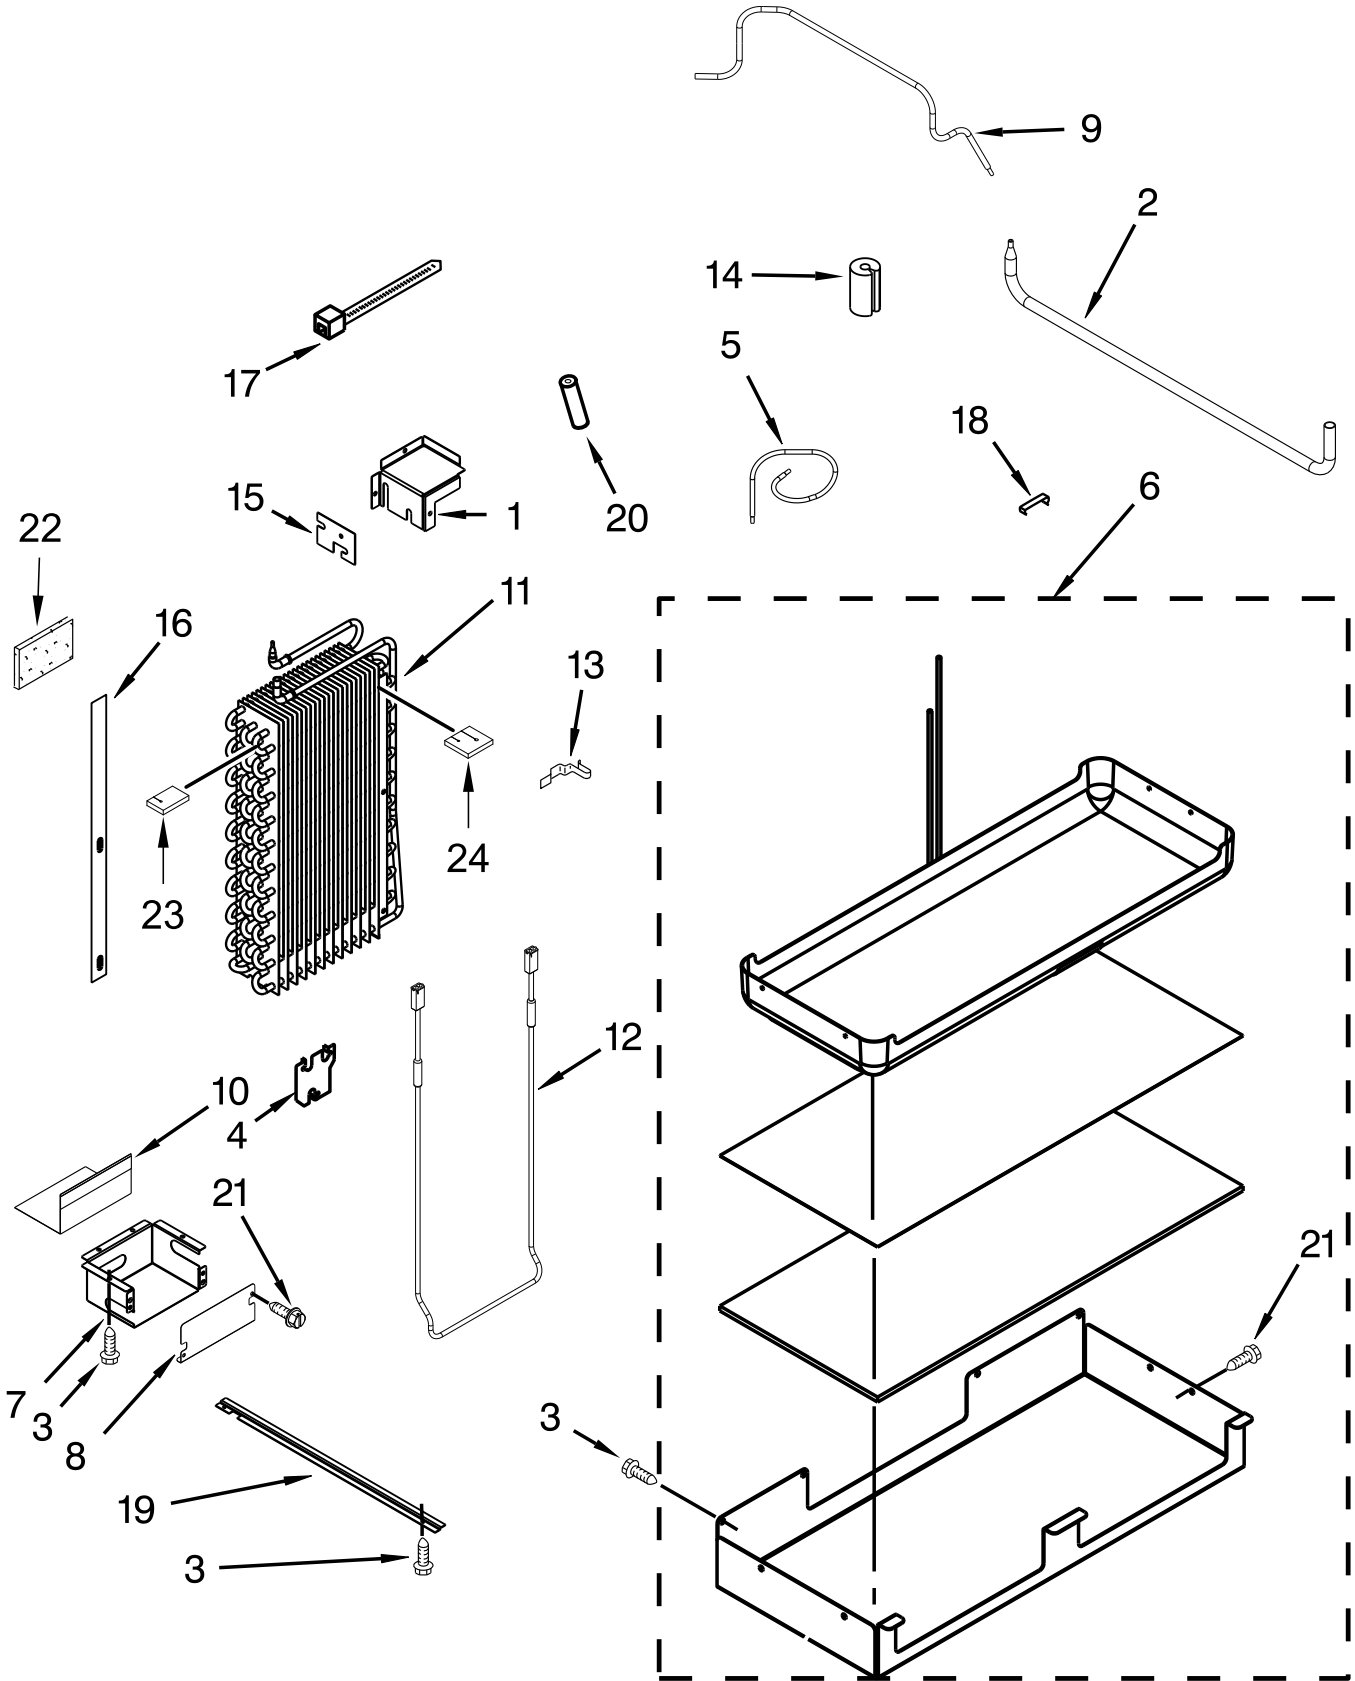

LOWER UNIT AND TUBE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10160981	Assembly, Air Return Bracket	11	W10427993	Evaporator	21	304392	Screw
2	W10388653	Tube, Transition (Drier/Restrictor)	12	W10140162	Heater, Defrost	22	2169104	Sealer, Insulation
3	486194	Screw	13	1113048	Clamp, Heater	23	W10580754	Block, Evaporator Side
4	W10157752	Bracket, Heater	14	W10413009	Grommet, Air Return	24	W10686115	Seal, Return Air
5	W10648568	Tube, Oil Trap Suction	15	W10139908	Cover, Evaporator Seal			
6	W10281063	Assembly, Drain Pan	16	W10432308	Gasket, Evaporator			
7	W10309012	Cover, Wiring	17	2155774	Tie, Wire			
8	W10321048	Cover, Wire Box	18	W10169509	Clip, Heat Exchanger			
9	W10673675	Tube, Discharge	19	2320554	Support, Drain Pan			
10	W10321050	Shelf, Wiring Cover	20	2215648	Dampener			

ICEMAKER PARTS

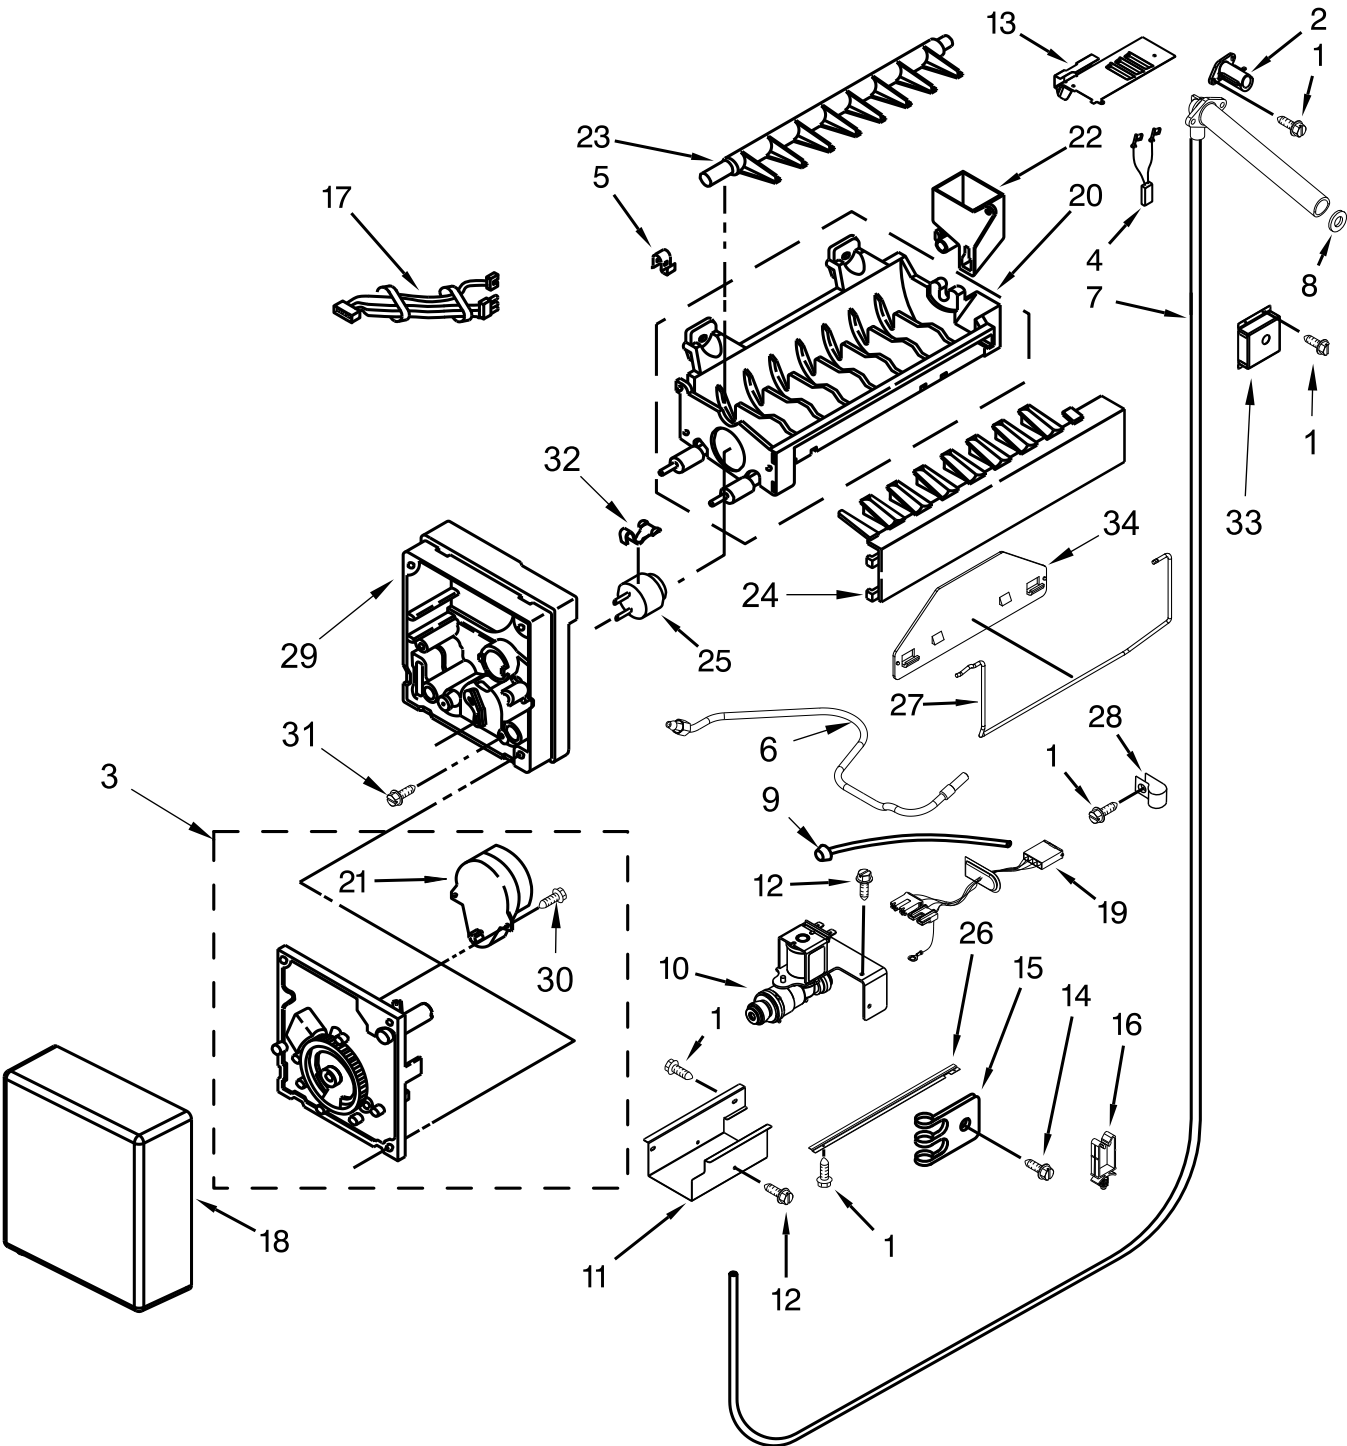

ICEMAKER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	486194	Screw	15	2208136	Clip, Water Tube	29	2195914	Support, Housing
2	2221240	Heater, Fill Tube	16	W10129069	Clip, Wire	30	489276	Screw
3	626691	Assembly, Module and Motor	17	W10508673	Assembly, Ice Maker Wire	31	W10001280	Screw
4	W10482373	Assembly, Fill Tube Heater Wire	18	W10289690	Cover, Ice maker	32	2315522	Retainer, Thermostat
5	628379	Clip, Thermal Fuse	19	W10279393	Assembly, Water Valve Wire	33	2259064	Cover, Fill Tube Heater
6	W10296807	Tube, Filter Inlet	20	628228	Assembly, Mold and Heater (Also Order 542638)	34	2304353	Extension, Shut Off Arm
7	2314049	Assembly, Water Inlet Tube	21		Motor (Not Available, Order #3)	100	W10277450	Complete Ice maker Assembly Following Parts Not Illustrated
8	1106508	Gasket, Seal	22	W10435665	Cup, Water Fill	W10355016		Cleaner, Stainless Steel
9	W10683737	Tube, Filter Outlet	23	627843	Ejector	W10355010		Cleaner, Kitchen & Appliance
10	2307650	Valve, Solenoid	24	W10699925	Stripper, Ice	W10740359		Wipes, Stainless Steel Cleaning
11	W10129653	Shield, Valve Electrical	25	627985	Thermostat	W10740361		Cloth, Microfiber
12	487294	Screw	26	2320559	Support, Valve			
13	2221231	Shield, Heat	27	2304352	Arm, Shut Off			
14	W10001250	Screw	28	2221070	Clamp, Tube			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)
	4392899	Biscuit/Bisque

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350939	Enamel, Black
	285006	Black
	350942	White Primer
	4392901	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

MISCELLANEOUS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	212643	Sealer, Gum (4 Feet)
	479502	Tape, Vinyl (3/4 x 108")
	876370	Insulation (2 Pieces, 3" x 24" x 48")
	876305	Insulation Kit (14 Pieces, 3" x 24" x 48")
	978941	Insulation, Fiberglass (63 1/2" x 35 1/2" x 2 5/8")
	876029	Kit, Foam Slab (30" x 32 1/2" x 1 1/2")
	505587	Sealer, Mastic (1 Qt)
	503695	Cork, Sealer
	20000008	Cleaner, Stainless Steel
	542638	Grease, Silicone (1/2 Oz.)
	542639	Cement, Alumilastic (1 1/4 Oz.)
	833938	Kit, Terminal Connector
	8003RP	Kit, Water Inlet

TORX SCREW WRENCH

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	1117510	Torx Key