

INSTALLATION INSTRUCTIONS FOR P1141-L

For LED Wall Mount Fixture

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT ! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DO DISJONCTEUR.

PREPARATION

1. Shut off power at the fuse box or circuit breaker box. If necessary remove the old fixture and mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.

MOUNTING THE FIXTURE (FIG. 1)

3. Using large wire connector, connect the white input wire from the driver (A) to the white wire from the junction box. Using large wire connector, connect the black input wire from driver (A) to the black wire from the junction box and tuck the driver (A) and connected wires carefully inside the junction box. (Note: To be installed with a 4" round or octagon junction box)
4. Secure mounting strap(B)to the junction box using mounting screws (G) (Size: 8-32*1/2"L). The side of the mounting back plate marked "GND" must face out.

CONNECTING THE WIRES (FIG. 2)

5. Using small wire connector, connect the red output wire from driver to the red input wire from the led module. Using small wire connector, connect the black output wire from driver to the black input wire from led module see Fig. 2, making sure that all wire connectors are secured. If your junction box has a ground wire (green or bare copper), using large wire connector, connect the fixtures ground wire to it. Otherwise, connect the fixture ground wire directly to the mounting strap (B) using the green screw (F) provided. . Tuck the wire connections neatly into the junction box.

FINISHING THE INSTALLATION (FIG.1)

6. Align the fixture back plate (D) to the screws (C) and secure with cap nuts (I).
7. Place the rubber washers (H) onto nipple (E). Align the glass (J) to nipple (E) and secure with finial (K).

CAUTION /ATTENTION : When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base or back plate (D) only.

Replacing LED module (Fig. 3)

The LED module can be replaced by a qualified electrician without cutting of wire and without damage to any decorative element to which the fixture is attached. See installation steps for more details (Fig. 3)**Warning: Turn off power at the circuit breaker before replacing LED module or LED driver.**

- a. Remove finial (K) and glass (J).
- b. Remove cap nut (I) to remove fixture back plate (D). Remove the wire nuts located inside the fixture back plate (D), remove screw (Q) on fastener (R) to disconnect the LED module.
- c. Remove threaded nipple (E) from front plate cover (L) and remove hex nut (O) and washers (P) from back plate (D).
- d. Remove screws (N) to remove the LED module (M) from front plate cover (L).
- e. Reverse steps a-c for installing the new LED module.
- f. Note: The LED module should be provided by a specified supplier.
- g. For better heat dissipation the LED module should be applied with thermal grease when re-lamping.

Fig.1

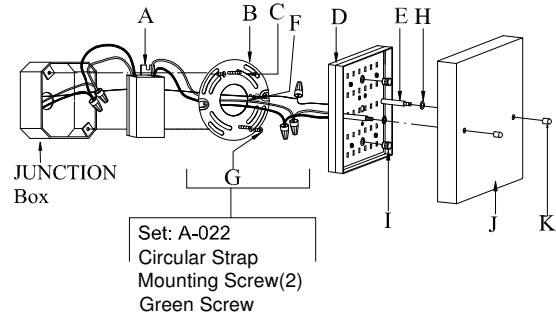


Fig.2


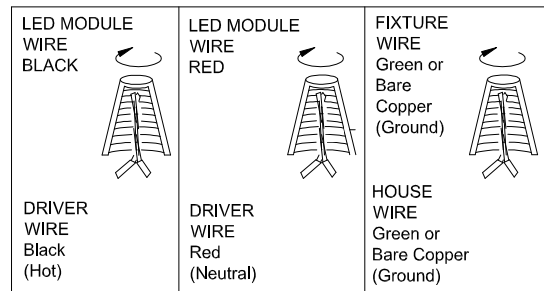


Fig 3

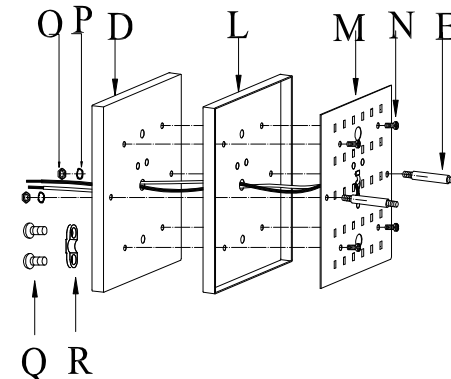

MIN 75°C SUPPLY CONDUCTORS

IMPORTANT: Fixture should be installed by a qualified electrician to ensure proper wiring and installation. Dimmable with C-L (CFL & LED) type and Incandescent/Halogen type dimmers

Brand: Lutron			
Ordering Information <input type="checkbox"/> Boxed <input type="checkbox"/> Clamshell			
Model number	Product name	Control type	Maximum capacity
<input type="checkbox"/> DVCL-153P-	Divia-C-L	Single-pole/3-way dimmer-	150 W CFL/LED or 600 W Incandescent/ Halogen 120 V
<input type="checkbox"/> DVCL-153PH-			
<input type="checkbox"/> DVSCCL-153P-	Divia C-L Satin Colors		
<input type="checkbox"/> CTCL-153P-	Skylark Contour C-L		
<input type="checkbox"/> CTCL-153PH-			
<input type="checkbox"/> AYCL-153P-	Ariadni C-L		
<input type="checkbox"/> AYCL153PH-			

