
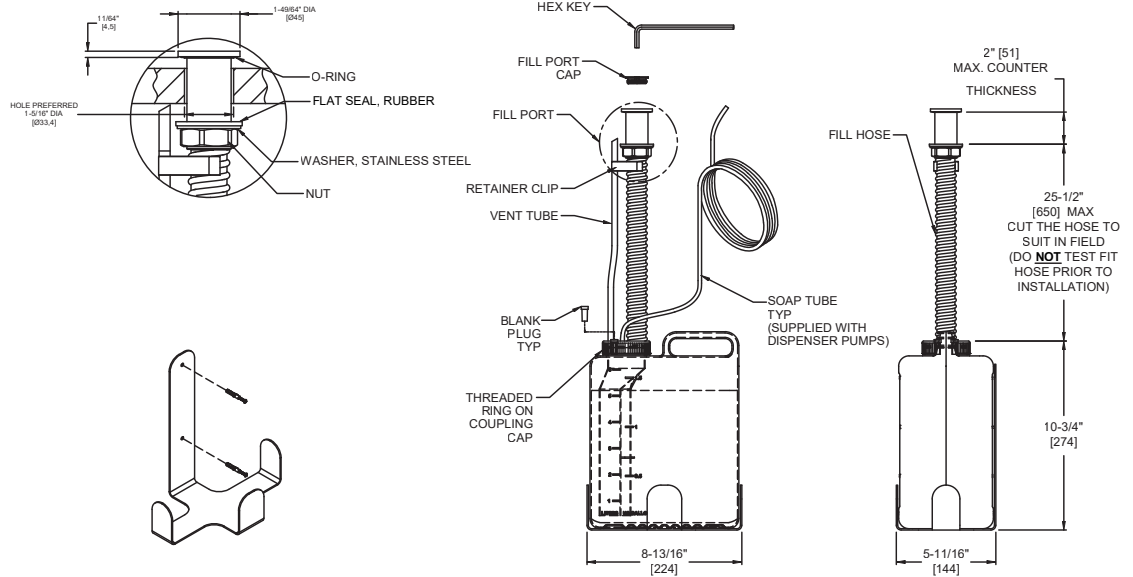


**EZ FILL™ Top-Fill Multi-Feed Kit**

Soap Dispensers

EZ Fill

MasterFormat Section 10 28 13

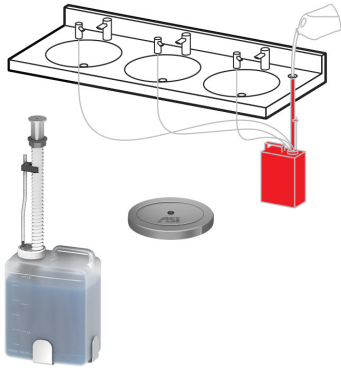

**SUSTAINABILITY/LEED**

**NOTE:**  
ALL DIM'S INCH [MM]  
ILLUSTRATION FOR REF ONLY AND NTS  
SEE SOAP DISPENSER CARE & MAINTENANCE  
DOCUMENT ONLINE FOR CLEANING

**PRODUCT OVERVIEW**

Holds 203 oz (6 L) of liquid soap to supply up to six (6) individual EZ Fill™ vanity mounted automatic soap dispenser units. Tank is made of translucent plastic to show quantity of soap remaining and is molded without a seam ensuring its leak-proof capability. Tank is located under counter and connected to soap distribution tubing and EZ Fill™ Top-Fill Port via a flexible fiber-reinforced soap fill hose. EZ Fill™ Top-Fill Port and cover are made of highly polished chrome plated brass (for matte black finish use suffix -41). Includes: 6 Liter Container, Top Fill Tube, Counter Fill Port with Cover. KIT ONLY, DISPENSER NOT INCLUDED

**KEY FEATURES & SPECIFICATIONS**

- Kit includes 6L Tank, MasterTube, Brass Fill-Port for mounting on the counter top.
- Feeds up to 6 separate dispensers
- Container can be mounted on the wall under the cabinet or can be rested on the floor

**OPERATION & MAINTENANCE**

System shall allow filling soap reservoir from top of vanity without requiring removal of tank under vanity. Up to six (6) individual dispensers will draw soap as required to operate until supply is depleted. Unused transfer ports are blocked with solid plugs (provided) to prevent overflow, contamination and evaporation. Soap is manually replenished on service interval determined by maintenance schedule. Vent tube placed with angled cut end directly under counter surface prevents siphoning and facilitates smooth suction of soap by pumps to reduce priming & feed time. See OM & IG for features and operations.

**TECHNICAL INFORMATION / PRODUCT PROPERTIES**

Property	Value
Dimensions	N/A
Construction	Chrome Plated Brass
Mounting	Vanity/Counter Mount
Options	N/A

**INSTALLATION**

See and review 0390 OM & IG provided with unit in box prior to beginning installation. Mount EZFill™ Top Fill Port to vanity with rubber O-ring (under escutcheon), rubber washer, SS washer and basin nut (supplied) through 1-5/16" Dia [33 dia.] mounting hole in deck (provided by others) within 104" [2643] of furthest dispenser head so that dispenser supply tubing (provided with soap pumps) will reach to bottom of tank. Place tank on vanity cabinet floor or mount tank with bracket (provided) in convenient location under vanity with two (2) screws and wall anchors (supplied with bracket). Connect soap supply flex tubing fill hose (provided attached to EZFill™ tank transfer fitting) to bottom of fill port fitting and screw transfer fitting onto Multi-feed tank. Connect all dispenser heads soap pump supply tubes to individual transfer ports so that each tube end is just above bottom of tank or install blank plugs to seal unused ports. Fill tank from EZFill™ Top-Fill Port with appropriate pH level and viscosity non-abrasive soap to correct level and test system for operation.

**WARRANTY**

Two (2) Years from date of Invoice