

**EZ Fill™ Water Faucet**

Soap Dispensers

EZ Fill


MasterFormat Section 10 28 13



Scan for Information



**SUSTAINABILITY/LEED**

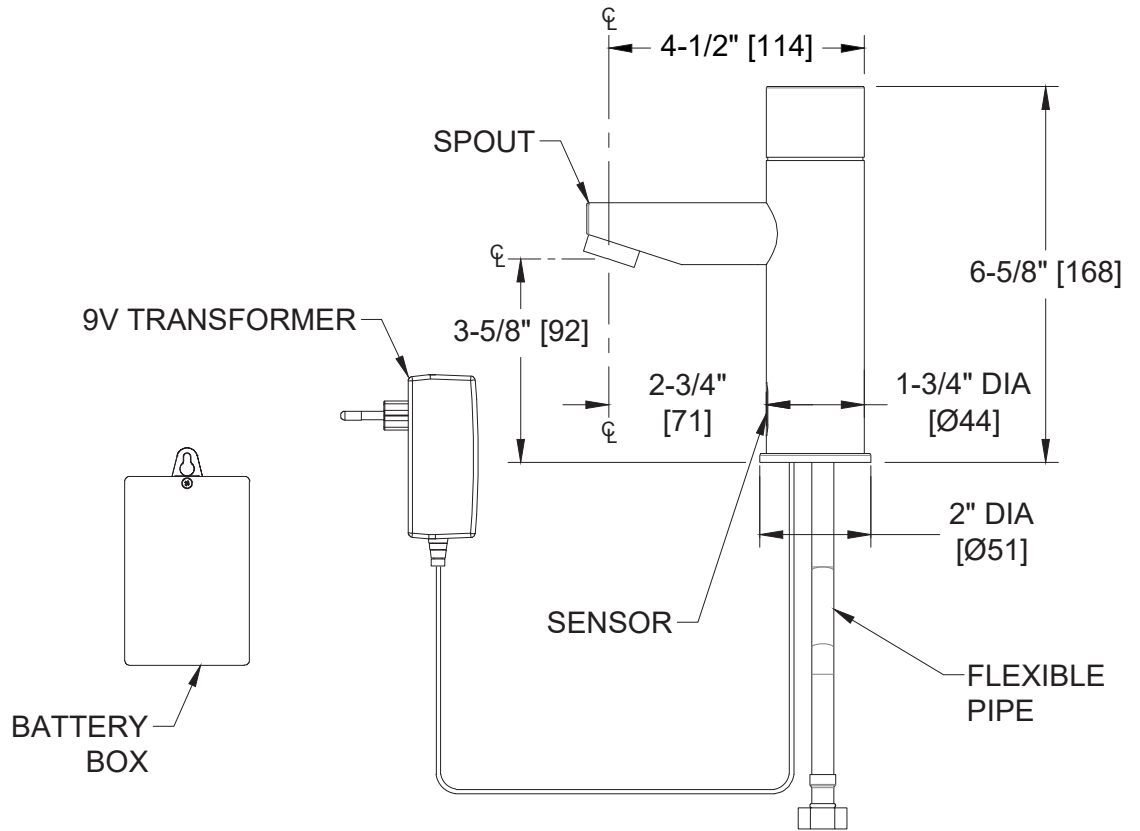

**NOTE:**  
ALL DIM'S INCH [MM]  
ILLUSTRATION FOR REF ONLY AND NTS  
SEE SOAP DISPENSER CARE & MAINTENANCE  
DOCUMENT ONLINE FOR CLEANING

**PRODUCT OVERVIEW**

Matching water faucet for EZ Fill™ soap dispensing system. Constructed of chrome plated spout and battery or AC power operated, hands-free sensor housing with a highly polished finish over all surfaces.

**KEY FEATURES & SPECIFICATIONS**

- FAUCET - Matches the EZ Fill Soap Dispensers
- Cohesive Design
- Vanity Mounted
- Automatic - Battery or AC Option - "No Touch"

**OPERATION & MAINTENANCE**

System shall operate each time an object is positioned within the sensing range of 1-3/16" to 3-15/16" [30 to 100] ± 3/8" [10] directly in front of the spout of the dispenser. Optional remote control unit will allow owner programming of alternate dispense amounts. See Owner's Manual for complete description of functions.

**TECHNICAL INFORMATION / PRODUCT PROPERTIES**

Property	Value
Dimensions	N/A
Construction	Chrome Plated ABS
Mounting	Vanity/Counter Mount
Options	1A - Battery Operation, Bright Chrome 1A-41 - Battery Operation, Matte Black 1AC - AC Operation, Bright Chrome 1AC-41 - AC Operation, Matte Black

**INSTALLATION**

Install spout and sensor housing to vanity deck with anti-rotation kit escutcheon flange, rubber washers and basin nut (supplied) through 1-1/8" diameter [28 dia.] mounting hole and 5/32" diameter [4 dia.] adjacent hole for anti-rotation pin of escutcheon flange. Connect flex tubing from soap dispenser head to fitting on top of foam compressor. Connect com plug from dispenser head to com socket from foam compressor. Mount pump assembly with wall bracket to convenient structure under vanity within 24" [610] of L-fitting on foam compressor bottom with two (2) screws and wall anchors (supplied). Connect flex tubing from L-fitting on air compressor to fitting on top of pump assembly. Connect com plug from foam compressor to com socket from pump assembly. Mount battery compartment in convenient location under vanity deck with two (2) screws and wall anchors (supplied) within easy reach of extension cable length and plug connector into mating inline power connector. Install six (6) 'D'-size 1.5V cells (supplied by others) in under-deck battery compartment according to polarity indication, plug battery cable jack into battery box socket in cover handle and screw lock cover. Alternatively, plug AC Adapter into GFCI power outlet located under vanity within 13.5 ft (412 cm) of pump assembly and plug connector into mating inline power connector. See OM & IG provided in box with unit for complete installation details.

**WARRANTY**

One (1) Year from date of invoice