


















Fixture Name: Pemberley Court 1089-3P RSB

This fixture assembled PO: _____ Date: _____

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.

| PARTS LIST | | Company Name: _____ Co. Account #: _____ to be filled out by retailer | |
|--|---|--|--|
| Canopy 1ea @5-1/2"x1-1/4"  | Wire connectors 3ea P4 Orange  | Loop Assembly Top loop & Center column 1ea @405mm  | |
| Chain 1ea 6ft x4.2mm  | Junction Box Screw 2ea 8/32" x 1"  | Finial 1ea @3/8 x 25mm  | |
| Chain connector 2ea @4.2X50mm  | Canopy Loop with Collar 1ea @3/8 x 40mm x 5mm  | Nipple/Stem With Hex Nut 1ea @3/8 x 55mm/@3/8 x 95mm  | |
| Mounting Strap w/ ground screw 1ea 3/4"x4"  | Hex Nut 2ea/1ea @3/8 x 3mm/@3/8 x 5mm  | Spring Washer 1ea @15 x 2mm  | |
| Bottom Cap 1ea @70 x 26mm  | Flat Washer 2ea @2" x 2mm  | Rubber Washet 2ea @2" x 2mm  | |
| Deco Nut 3ea @10 x 9.5mm  | Deco Screw 3ea @10 x 22mm  | | |
| Part Needed _____ | | Quantity _____ | |
| Part Needed _____ | | Quantity _____ | |
| Reason why _____ | (missing, scratched, broken glass, bent, bad finish) | | |
| Comments _____ | | | |

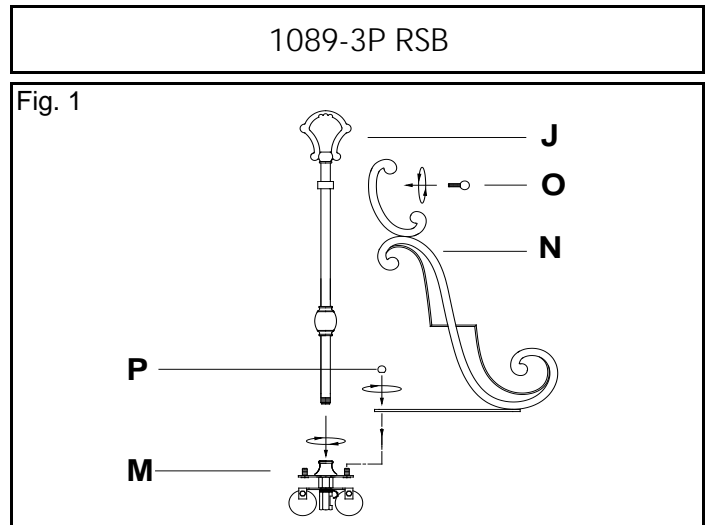
FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

ASSEMBLING THE FIXTURE (Fig. 1)

1. Feed the fixture wires through the Loop Assembly (J) and pull the wires until taut.
2. Then screw the Loop Assembly (J) into the coupling of Socket Assembly (M) until tight.

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.



PARTS & ASSEMBLY SHEET

Fixture Name: Pemberley Court 1089-3P RSB

3. Pass the holes on the bottom of the Side Arms (N) over bolt of the Socket Assembly (M) and line up the holes on the top ends onto mounting holes on the side of the Loop Assembly (J). Thread Deco Nut (P) onto bolts and thread Deco Screws (O) into mounting holes the secure Side Arms (N) until tight.

4. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (K) then remove the excess Chain (K) and discard it.

5. Use one chain connector (L) to attach one end of the chain to the Top loop (J) and close the chain connector.

6. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.

7. Slip Canopy loop collar (H) over the chain, then do the same with the canopy (G).

8. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (F) and close the chain connector.

9. Make sure the weight of the chandelier will be supported by the chain-not the electrical wire.

* You may now install the fixture.

Note: Complete these remaining steps after the fixture is hung.

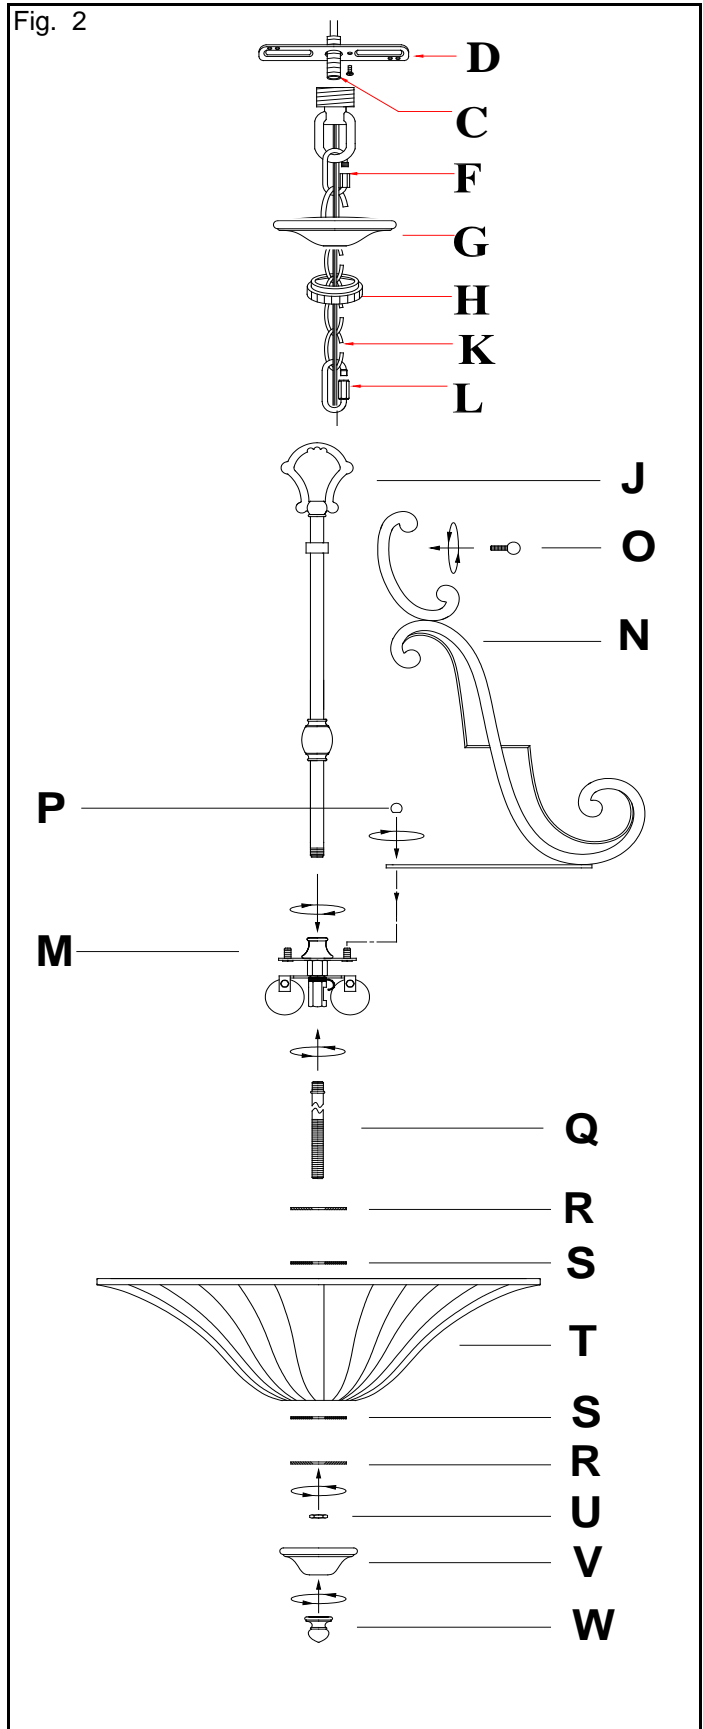
10. Thread the Stem With Hex Nut (Q) onto the Socket assembly coupler until tight.

11. Install the light bulbs in accordance with the fixture's specifications.

12. Slide the Flat Washer (R), Rubber Washer (S), Glass shade (T), Rubber Washer (S) and Flat Washer (R) over the Stem With Hex Nut (Q), secure in place with the Hex nut (U). Slide the Bottom cap (V) over the Stem With Hex Nut (Q), secure in place with the Finial (W).

(DO NOT EXCEED MAXIMUM WATTAGE RATING)

Fig. 2



For Customer Service, contact the place of purchase to arrange for replacement parts.

WARNING ! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig. 1)

- Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
- Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
- Thread Nipple (C) into Canopy Loop (F) until snug.
- Thread other end of the Nipple (C) with Canopy Loop attached into Mounting Strap (D).
- Place Lock Washer (B) over end of Nipple (C) protruding through Mounting Strap (D) and thread Hex Nuts (A) onto Nipple until tight.
- Take this mounting strap assembly and mount to ceiling junction box with junction box Screws (E). Tighten screw securely with screw driver.
- Unscrew the Canopy loop collar (H) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximately one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar.
- Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
- Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.

CONNECTING THE WIRES (Fig. 2)

- Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
 - Attach the GROUND wire (GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.
- NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.
- Tuck these wire connections neatly into the Junction Box.
 - Raise Canopy (G) to the ceiling and secure in place by tightening the Canopy loop collar (H) into the Canopy Loop (F).
 - Install the light bulbs and shade as per the fixture assembly sheet.

Fig. 1

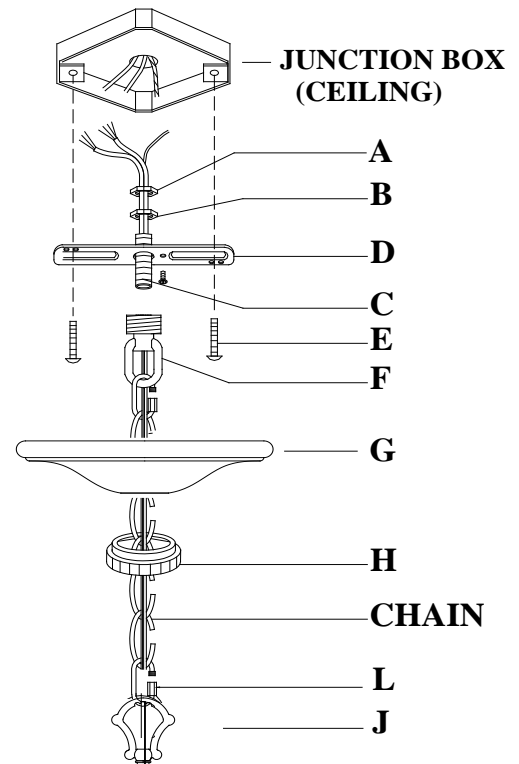
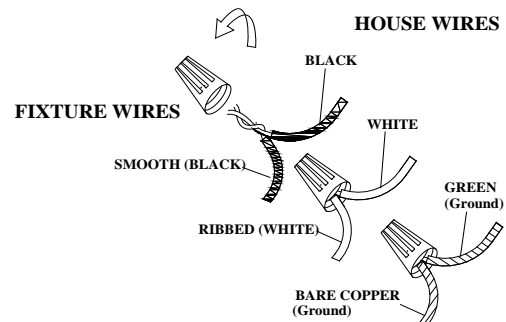


Fig. 2



**YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX
AND TEST THE FIXTURE.**