


# Assembly Instructions: 1821-9

## IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, please contact the place of purchase.

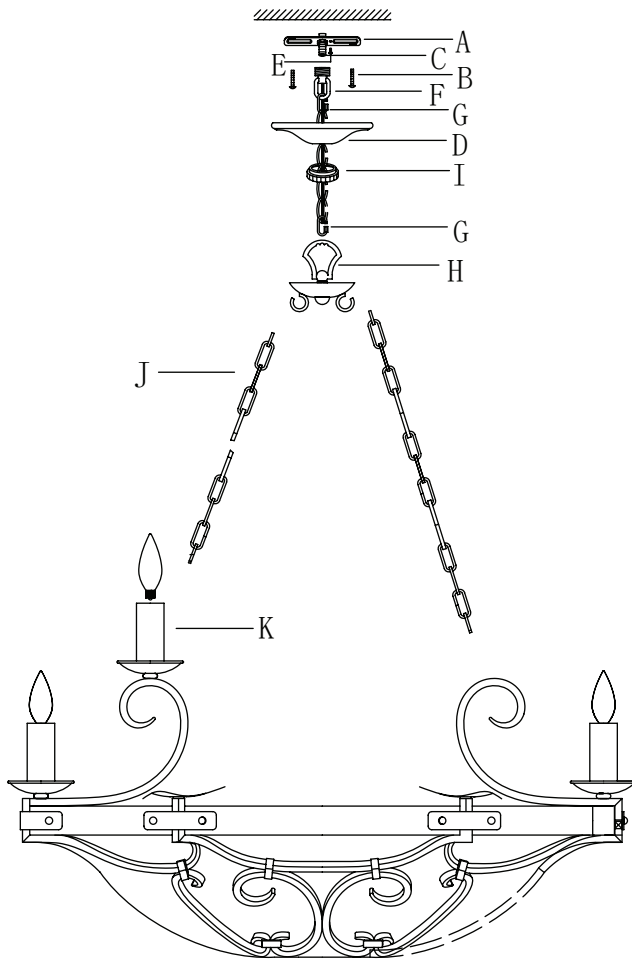

## PREPARING FOR INSTALLATION

Remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

1. Take the mounting strap assembly from the parts bag. One end of the nipple (C) should be attached to mounting strap (A) with a washer and hex nut. The other end should have canopy loop (F) attached.
2. Use a screwdriver and mounting screws (B) to attach mounting strap (A) to the junction box. About half of the exterior threads of nipple (C) should be exposed, allowing the canopy loop (F) to fit snugly onto nipple (C). Test to ensure that with canopy (D) in place, canopy loop (F) fits onto nipple (C).
3. Remove the canopy and set aside for later. Pull house wires through the center of the mounting strap (A).

## ASSEMBLING THE FIXTURE


4. Measure to determine the number of chains needed for proper hanging height. If necessary use a chain opener to remove excess chain. Attach one chain connector (G) to each end of the chain. Attach one end of the chain with chain connector to the top loop (H). Attach the remaining chain with chain connector to the canopy loop (F). Close the chain connectors (G) to secure. Feed fixture wires through the top loop (H) and up the chain (every three links or so). Feed the remaining wires through the canopy loop (F) and canopy (D). Pull the wires until taut. Slide the canopy (D) and canopy loop collar (L) down the chain for now.

## CONNECTING THE WIRES

5. Have an assistant support the weight of the fixture while completing the wiring. Cut away any excess wire while leaving a 8 to 10 inches of wire for installation. Attach the fixture's wires to the house wires which were pulled earlier from the junction box through the mounting strap (A). Connect black to black (transparent wire with black inner thread or smooth); white to white (transparent wire with white inner thread or ribbed); ground to ground (green, transparent wire with green inner thread, or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) coming from the junction box, locate ground screw (E) on the mounting strap and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

### How to Identify the Fixture's Wires

Hot	Neutral	Ground
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread
Black	White	
Black Inner Thread	White Inner Thread	

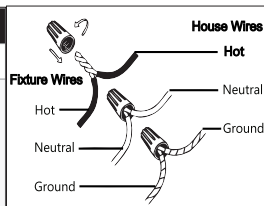

## FINISHING THE INSTALLATION

6. Attach one end of each decorative chains (J) to the hooks found on the bottom of the top loop (H).
7. Push canopy (D) up to the ceiling and slide canopy loop collar (L) up beneath the canopy. Tightly thread canopy loop collar (L) onto canopy loop (F) to secure canopy (D) in place.

Install light bulbs (not included) into sockets (K) in accordance with the fixture's specifications. Do not exceed maximum recommended wattage.

Your installation is now complete. Turn on the power and test the fixture.

### CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.

