

Jeremiah Lighting

28329-ABZ

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

GENERAL

Remove all parts and hardware from the box and the mounting package and make sure that none are missing by referencing the illustrations provided.

ASSEMBLY AND INSTALLATION

1. Pull the SUPPLY WIRES (4 & 6) and the SUPPLY GROUND WIRE (9) out from the OUTLET BOX (1) (not included) and attach the MOUNTING STRAP (2) assembly to the OUTLET BOX (1) using the slotted holes of the MOUNTING STRAP (2) and the OUTLET BOX SCREWS and WASHERS (3). [See Fig. 1]
2. Place the CANOPY (11) over the OUTLET BOX (1) to determine the amount of adjustment necessary; the FIXTURE SCREWS (12) should come through holes in CANOPY (11) just enough so that DECORATIVE NUTS (14) fit flush when fixture is mounted. Adjust the 1/8" IPS HEX NUTS (12) with the surface of the CANOPY (11). Remove the CANOPY (11) and tighten both 1/8" IPS HEX NUTS (12) down on the MOUNTING STRAP (2). [See Fig. 1]
3. Unravel the FIXTURE LEAD WIRES (5 & 7) and FIXTURE GROUND WIRE (8). Slide the FIXTURE LOOP (17) down the fixture wires and then thread onto the threaded rod at the top of the CENTER COLUMN (18) until tight. [See Fig. 2]
4. Attach one CONNECTING CHAIN LINK (15) to each end of the CHAIN (16) and then attach one end of the CHAIN (16) to the FIXTURE LOOP (17). [See Fig. 1 & 2]
5. Thread the FIXTURE LEAD WIRES (5 & 7) and FIXTURE GROUND WIRE (8) through every other link of the CHAIN (16) starting with the chain link attached to the FIXTURE LOOP (17). Feed the FIXTURE GROUND WIRE (8) first and then the FIXTURE LEAD WIRES (5 & 7), one by one, through threaded rod in CANOPY (11). Pull the FIXTURE LEAD WIRES (5 & 7) and the FIXTURE GROUND WIRE (8) upward to remove any excess slack. [See Fig. 1]
6. Attach the power supply wires to the fixture lead wires by connecting the BLACK SUPPLY WIRE (4) to the SMOOTH FIXTURE LEAD WIRE (5) and the WHITE SUPPLY WIRE (6) to the RIBBED FIXTURE LEAD WIRE (7). Loop the SUPPLY GROUND WIRE (9) around the GROUND SCREW (13) on the MOUNTING STRAP (2). [Note: Be sure to provide an extra 3in. length of the SUPPLY GROUND WIRE (9) for connection to the FIXTURE GROUND WIRE (8).] Tighten the GROUND SCREW (13). Connect the remaining SUPPLY GROUND WIRE (9) to the FIXTURE GROUND WIRE (8). Use a WIRE CONNECTOR (10) for all wire connections. Push wiring and connections inside the OUTLET BOX (1). [See Fig. 1]
7. Attach the other end of the CHAIN (16) to the loop at the bottom of the CANOPY (11) and close both of the CONNECTING CHAIN LINKS (15). Place CANOPY (11) onto the FIXTURE SCREWS (12) and secure it with the DECORATIVE NUTS (14).

ASSEMBLY & INSTALLATION (Continued)

8. Thread CENTER COLUMN (18) into the FIXTURE (21).
9. Attach the GLASS SHADES (19) to FIXTURE (21) with the SOCKET RINGS (20).
10. Install bulbs, **MAXIMUM 60W** each.

INSTALLATION IS NOW COMPLETE

SHEPPARD


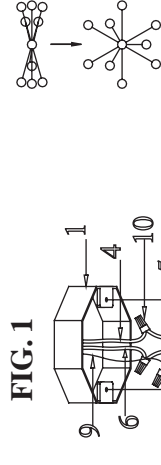


FIG. 2

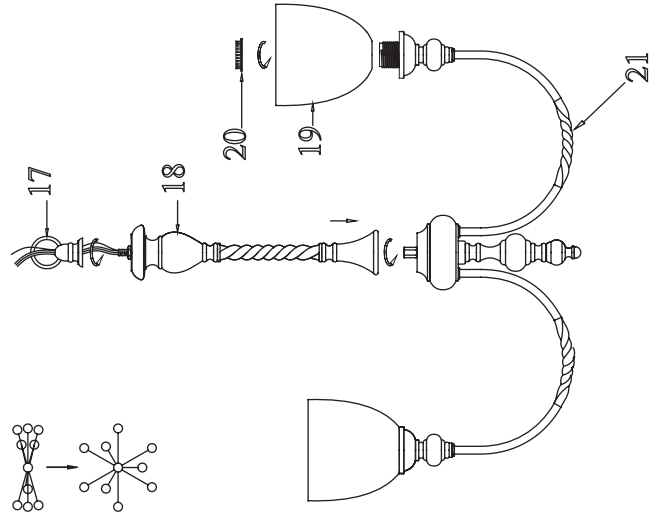

9-LIGHT CHANDELIER

- | | |
|---|---------------------------------|
| 1. OUTLET BOX (NOT INCLUDED) | 13. GROUND SCREW (pre-attached) |
| 2. MOUNTING STRAP | 14. DECORATIVE NUTS |
| 3. OUTLET BOX SCREW and WASHER (pre-attached to outlet box) | 15. CONNECTING CHAIN LINK |
| 4. BLACK SUPPLY WIRE (not included) | 16. CHAIN |
| 5. SMOOTH FIXTURE LEAD WIRE | 17. FIXTURE LOOP |
| 6. WHITE SUPPLY WIRE (not included) | 18. CENTER COLUMN |
| 7. RIBBED FIXTURE LEAD WIRE | 19. GLASS SHADE |
| 8. FIXTURE GROUND WIRE | 20. SOCKET RING |
| 9. SUPPLY GROUND WIRE (not included) | 21. FIXTURE |
| 10. WIRE CONNECTOR | |
| 11. CANOPY | |
| 12. FIXTURE SCREWS and HEX NUTS (pre-installed) | |