

# INSTALLATION INSTRUCTIONS

Item#4305 (New. 12/31/2011)

READ AND SAVE THESE INSTRUCTIONS

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**

**AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.**

## ASSEMBLING THE FIXTURE (Fig.1)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the old fixture including the mounting hardware.
2. Carefully remove the new fixture from the carton and check that all parts are included as shown in the illustration.
3. Attach the center column (E) onto the coupling (D) of the fixture body.

## HANGING THE FIXTURE (Fig. 3)

4. Thread the nipple (C) into ceiling loop (F) until snug.
5. Thread the other end of nipple (C) with the loop into the crossbar (D) until snug.
6. Place the lock washer (B) over the end of nipple protruding through crossbar and secure with hex nut (A).
7. Take the crossbar assembly and mount to the ceiling junction box with junction box screw (E) (Size: #8-32N\*L0.5"). Tighten screws securely with a screwdriver. The side of crossbar marked "GND" must face out.
8. Use a pair of chain pliers to open one end link of the chain and connect to the fixture loop (J). Close the link.
9. By measuring, determine the correct number of links needed for desired hanging height. Using the chain pliers, disconnect and discard remaining chain.
10. Carefully lace the fixture wires through the chain.
11. Slip the loop collar (H) and the canopy (G) over the chain.
12. Open the other end link of the chain and connect to the ceiling loop (F), then close the link.
13. Carefully feed the fixture wires through the ceiling loop (F) and nipple (C) and pull until tight.

## CONNECTING THE WIRES (See Fig.2)

14. Connect the electrical wire as shown in figure 2, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect your fixture's ground wire to the crossbar using the green screw provided. Tuck the wire connections neatly into the ceiling junction box.


## COMPLETING THE INSTALLATION (Fig. 1)

15. Raise the canopy (G) over ceiling loop (F). Then raise loop collar (H) and thread onto the ceiling loop (F).
16. Place the glass shade (B) over the socket (C) and secure with the socket ring (A).
17. Install the light bulb(s) (not included) in accordance with the fixture's specification. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!)** (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).

Your installation is now complete. Return power to the junction box and test the fixture.

**Note:** Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

Fig.1

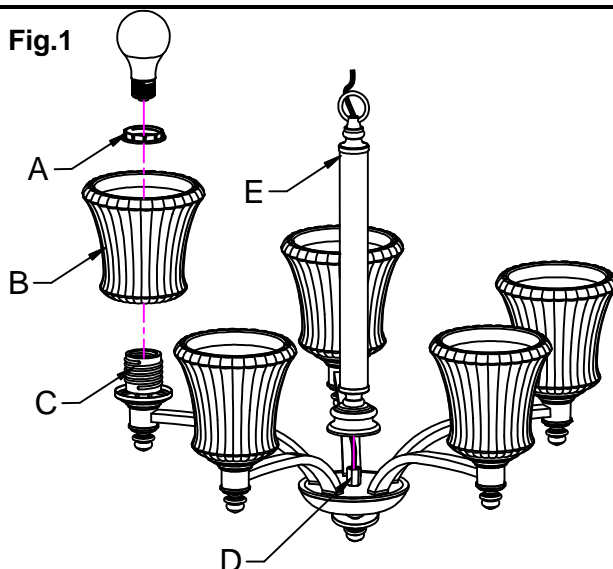

Screw shell # SKT-RING-26 (#A)

Fig. 2


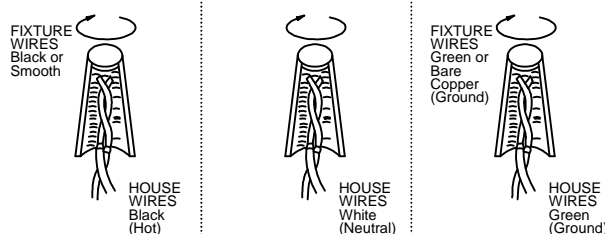


Fig.3



Chain# HCH2072

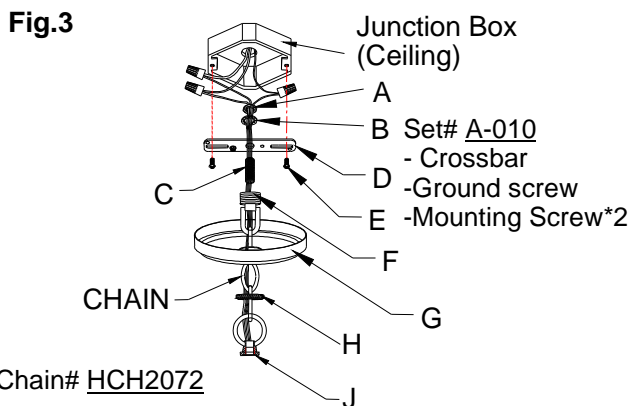

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.



LA-2165E