


# INSTALLATION INSTRUCTIONS

## wall mounting bracket

### horizontal electric unit heaters models HER, PTE


#### Application

For easier installation of horizontal electric unit heaters where ceiling suspension is not feasible, a wall-mounting bracket is available for horizontal delivery models HER 50 through HER250, and PTE300 through PTE500. The bracket saves installation time with built-in wall clearance and provides an inexpensive and convenient wall-mounting method. The one-point suspension permits swiveling the unit horizontally for most effective air direction (180 degrees for HER, 90 degrees for PTE).

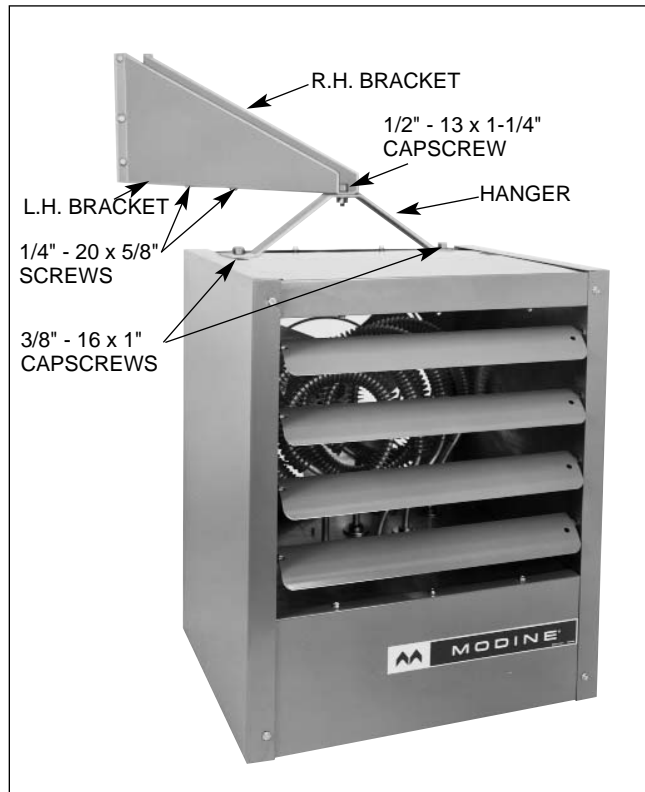

#### Model HER Mounting

1. Assemble L.H. side bracket to R.H. side bracket and fasten with 1/4" - 20 x 5/8" screws (by Modine) to weldnuts inside R.H. side bracket. Securely fasten this assembly to wall, as shown. Wall fasteners must be furnished by the installer.
2. Fasten hanger to top of unit heater with two 3/8" - 16 X 1" cap screws (by Modine).
3. Raise unit into position and fasten hanger to wall bracket with 1/2" - 13 X 1-1/4" cap screw and washer (by Modine). Swivel unit heater to desired position before tightening cap screw.

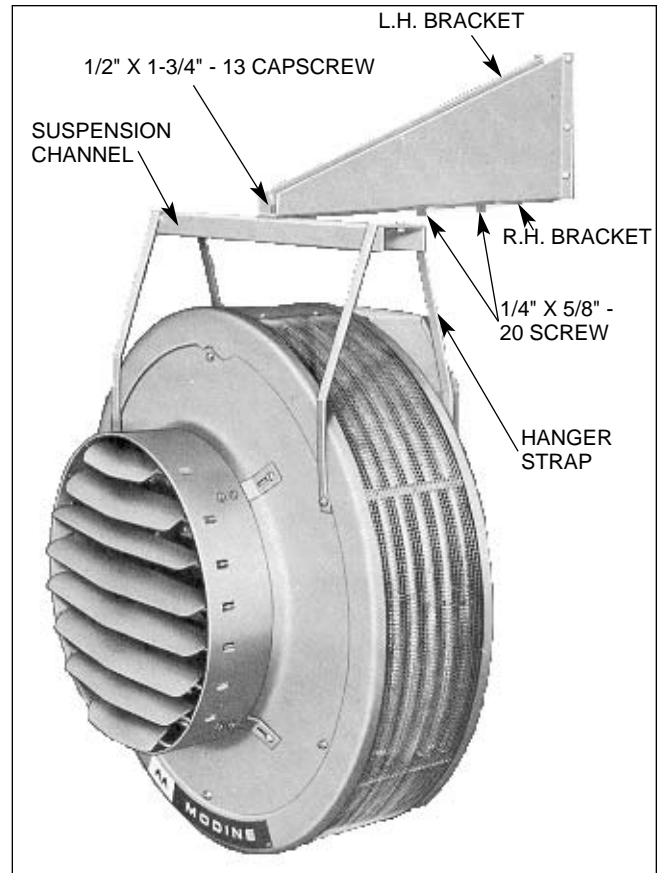

#### Model PTE Mounting

1. Assemble L.H. side bracket to R.H. side bracket and fasten with 1/4" - 20 X 5/8" screws (by Modine) to weld nuts inside R.H. side brackets. Securely fasten this assembly to wall, as shown. Wall fasteners must be furnished by the installer.
2. Assemble the two hanger straps to suspension channel with one 1/4" - 20 X 5/8" screw (by Modine) at each side.
3. Remove all four 5/16"-18 nuts from the through-bolts. Remove "L-shaped" brackets on both front and back of the heater. Place hanger straps over through-bolts and replace the 5/16"-18 nuts.
4. Raise unit into position and fasten suspension channel to wall bracket with 1/2" - 13 X 1-1/4" cap screw and washer (by Modine). Swivel unit heater to desired position before tightening cap screw.