

Please go to www.quoizel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (7) G9 Xenon Clear Bulbs (supplied), 40W Maximum

Estimated Assembly Time: 45-60 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.


Do not touch the bulb with bare hands use a cloth or glove.

Package Contents

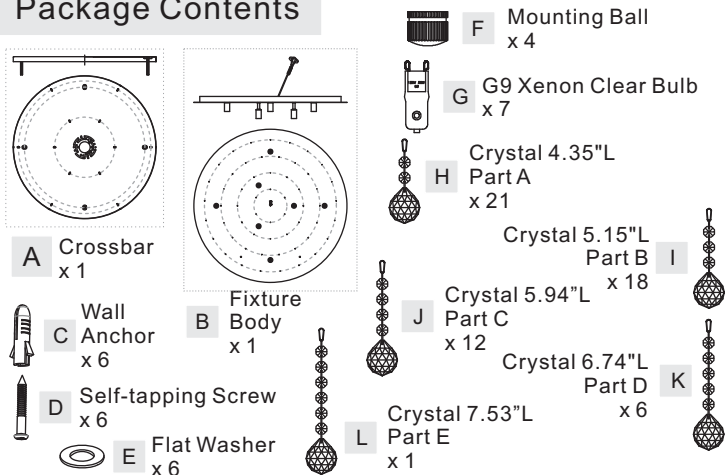


STEP 1 – Attach Inner Backplate to Outlet Box

- A. Place the Crossbar (A) onto the Ceiling surface and line up one set of holes onto mounting holes on Outlet Box. Using a pencil, mark the locations for Wall Anchors (C).
- B. Remove the Crossbar (A) and drill holes from the marks and then push the Wall Anchors (C) into the holes.
- C. Position the Crossbar (A) back onto the Ceiling. Thread the Outlet Box Screws (not supplied) into the mounting holes on the Outlet Box to secure it. Hand tighten until snug.
- D. Pass the Flat Washers (E) over the Self-tapping screws (D) and then thread the self-tapping screws (D) into the Wall Anchors (C). Hand tighten until snug.

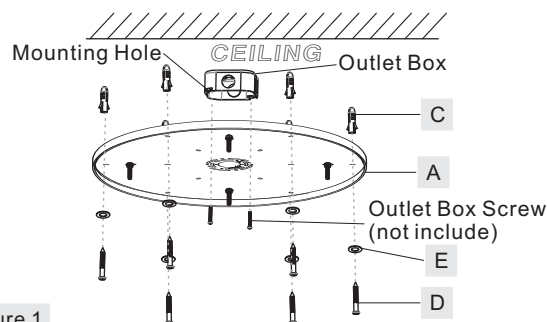


STEP 2 – Attach Lanyard

- A. The purpose of the lanyard is to provide the installer a means to support the fixture from the junction box while connecting the electrical wires. This enables the fixture to hang from the junction box and your hands are free to make the wire connections.
- B. Turn the Button Stop so it may be inserted into the Crossbar slot. Make sure the Button Stop is completely inside the Crossbar. Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps in the next step. Once you are complete with the wiring there is nothing to do with Lanyard. The Lanyard will push into the junction box when the fixture is placed for final mounting.

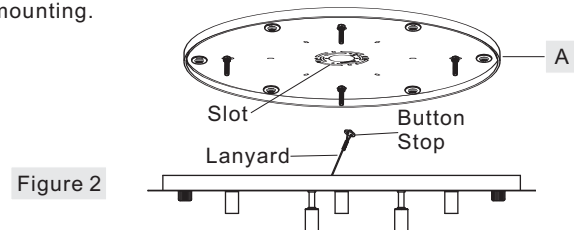

STEP 3 - Wire Connections

- A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

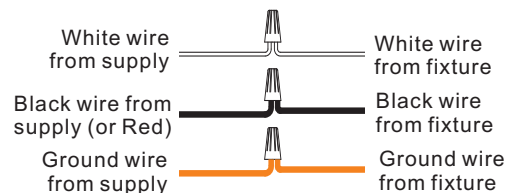


STEP 4 - Attach Ceiling Canopy to Mounting Screw

- A. Remove Protective Film from Ceiling Canopy. Note: Gloves are required to avoid leaving fingerprints or scratches on Ceiling Canopy.
- B. Place the Ceiling Canopy on the Fixture Body (B) over the Mounting Screws and secure with Mounting Balls (F). Hand tighten until snug.

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com


Step 4 Continued

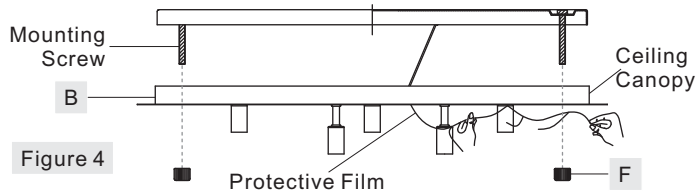

STEP 5 -Install Bulb

- A. This fixture uses G9 Xenon Clear Bulbs (G). Maximum 40 watts.
- B. Insert bulb and seat properly into place.


IMPORTANT: Do not touch the bulb with bare hands use a cloth or glove.

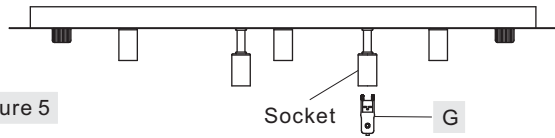

STEP 6 – Install Crystal to Fixture

- A. Insert Crystal 7.53"L Part E (L) to the hole on the center of Ceiling Canopy, Crystal 6.74"L Part D (K) to the hole on the ring D of Ceiling Canopy, Crystal 5.94"L Part C (J) to the hole on the ring C of Ceiling Canopy, Crystal 5.15"L Part B (I) to the hole on the ring B of Ceiling Canopy, Crystal 4.35"L Part A (H) to the hole on the outside ring of Ceiling Canopy.

Your fixture is now assembled and ready to use. Enjoy!





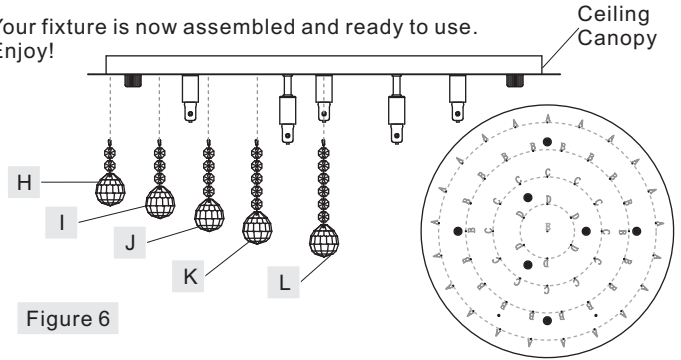


CAUTION FOR BULB REPLACING

- A. When replace bulb, turn off power and allow lamp to cool. For safety purpose, wear gloves and eye protection.
- B. If bulb is scratched or cracked, DO NOT use the lamp to avoid breakage during use or installation.
- C. Use only in fixtures rated for lamps wattage and voltage.
- D. Lamp operate under high pressure generating intense heat. Prevent contact with liquid and combustible materials.

BRX1626C

FINISH: POLISHED CHROME

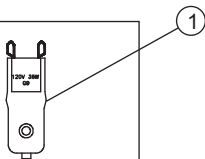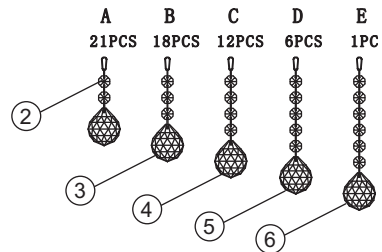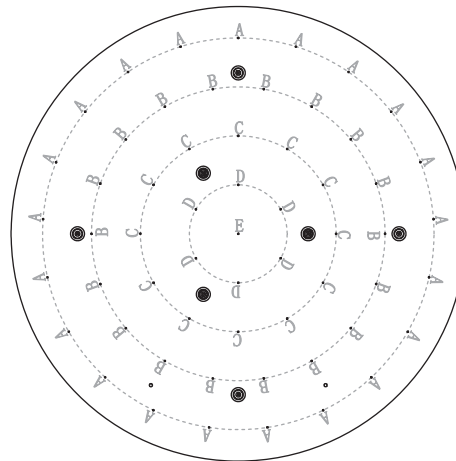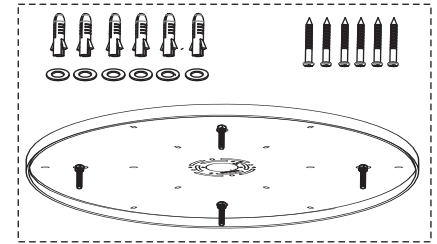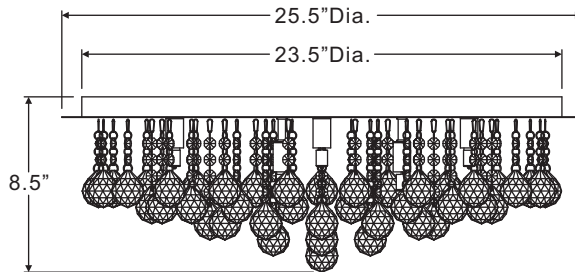

(7)40W Maximum G9 Xenon Clear Bulbs (Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	I1202SC	G9 XENON CLEAR BULB	7
2	G11928CR	DECORATIVE CRYSTAL BALL PART "A"	21
3	G11929CR	DECORATIVE CRYSTAL BALL PART "B"	18
4	G11930CR	DECORATIVE CRYSTAL BALL PART "C"	12
5	G11931CR	DECORATIVE CRYSTAL BALL PART "D"	6
6	G11932CR	DECORATIVE CRYSTAL BALL PART "E"	1

Thank you for purchasing a Quoizel product.
 Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoise.com