Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. guoizel. com

Assembly Instruction Sheet #IS-CCT2814WT For Style CCT2814WT

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (1) A 19 Medium Base bulb 100W Maximum or

(1) Medium Base G40 Vintage bulb is recommended but not supplied.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


 $Note: This\ CONVERTIBLE\ fixture\ can be mounted\ as\ pendant\ light\ or\ semi-flus\ h\ light.\ Refer\ to\ respective\ installation\ steps\ for\ installations.$

$oldsymbol{\Delta}$ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

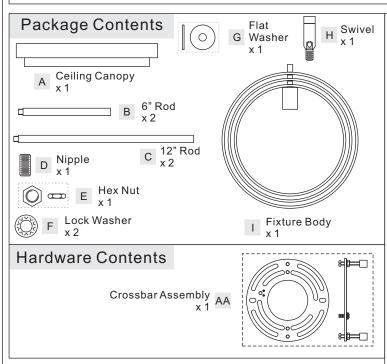

STEP 2A - Assemble Rods and the Ceiling Canopy


- A. Determine Rods (B/C) to be assembled to Fixture Body (I) according to your hanging height.
- C. Pass supply wires and ground wire through the chosen rods (B/C) and Ceiling Canopy (A). Thread Fixture Body (I), the chosen Rods (B/C) and the Swivel (H) together. Hand

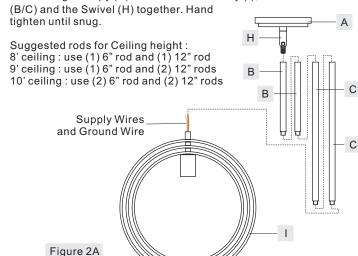

Assembly Instructions for Pendant Light (Step 1A - Step 7A)

STEP 1A - Attach Swivel and Ceiling Canopy together

- A. Thread Nipple (D) onto the Swivel (H).
- B. Place Ceiling Canopy (A), Flat Washer (G) and Lock Washer (F) over the Nipple (D). Secure by threading Hex Nut (E) onto the Nipple (D), tighten until sung with screwdrivers.

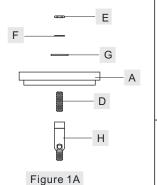

STEP 3A - Install Crossbar Assembly

A. Pass the supply wires through the Crossbar Assembly (AA). Attach the Crossbar Assembly (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

Outlet Box Screws Ground Wire (not included)

Outlet

Box

Figure 3A

STEP 4A - Test Fitting Ceiling Canopy to Crossbar Assembly

A. Remove mounting balls from Crossbar Assembly (AA). Fit Ceiling Canopy (A) to Crossbar Assembly (AA) and secure with mounting balls. Note: The Ceiling Canopy (A) should be snug against the ceiling and the mounting balls. If Not, adjust the length of mounting

Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184

or visit us on-line at www.quoizel.com

Released Date: 2016-11-21


(Step 4A Continued)

screws on the Crossbar Assembly (AA) by unscrewing the preassembled hex nut and lock washer and then screwing mounting screws in or out of the crossbar until the correct length is achieved. Once the Ceiling Canopy (A) is secure, remove mounting balls and Ceiling Canopy (A) and proceed to Step 5A.

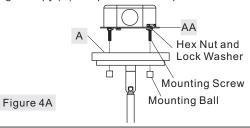


STEP 5A - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.



STEP 6A - Install Fixture Body


A. Carefully tuck all wires into the outlet box and position Ceiling Canopy (A) over the outlet box. Align the holes in Ceiling Canopy (A) with mounting screws, then attach Ceiling Canopy (A) using the previously removed mounting balls. Hand tighten until snug.

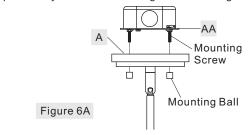

STEP 7A - Install Bulbs and Adjust Rings


- A. Insert bulb onto socket and screw snugly into place.
- B. Adjust Rings to your desired locations.

Your fixture is now assembled and ready to use. Enjoy!

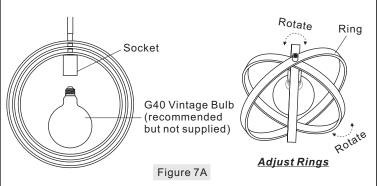

Assembly Instructions for Semi-flush Light (Step 1B - Step 6B)

Part B, Part C and Part H will not be used in the assembly of the Semi-Flush Light fixture. Please set aside these parts.




STEP 1B - Install Ceiling Canopy to Fixture Body

A. Pass supply wires with ground wire through Nipple (D), Ceiling Canopy (A), Flat Washer (G), Lock Washer (F) and Hex Nut (E).

Thread Nipple (D) onto Fixture
Body (I). Place Ceiling Canopy
(A), Flat Washer (G) and Lock
Washer (F) onto Nipple (D).
Secure by threading Hex Nut (E)
onto Nipple (D). Hand tighten
until snug. Cut the wires leaving
approximately 6" of wire
extending from the Ceiling
Canopy.

B. Optional Swivel: Install the swivel to Fixture Body (I) and then attach Nipple (D) and Ceiling Canopy (A) to the Swivel using the Flat Washer (G), Lock Washer (F) and Hex Nut (E) as in step A.

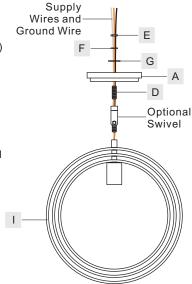

STEP 2B - Install Crossbar Assembly

Figure 1B

A. Pass the supply wires through the Crossbar Assembly (AA). Attach the Crossbar Assembly (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.


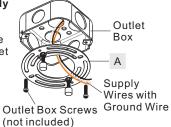


Figure 2B

STEP 3B - Test Fitting Ceiling Canopy to Crossbar Assembly

A. Remove mounting balls from Crossbar Assembly (AA). Fit Ceiling Canopy (A) to Crossbar Assembly (AA) and secure with mounting balls. Note: The Ceiling Canopy (A) should be snug against the ceiling and the mounting balls. If Not, adjust the length of mounting screws on the Crossbar Assembly (AA) by unscrewing the preassembled hex nut and lock washer and then screwing mounting

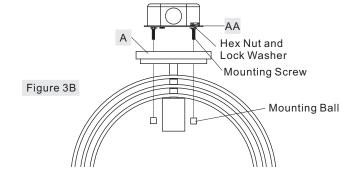

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com

© 2016 Quoizel Inc.


Released Date: 2016-11-21

(Step 3B Continued)

screws in or out of the crossbar until the correct length is achieved. Once the Ceiling Canopy (A) is secure, remove mounting balls and Ceiling Canopy (A) and proceed to Step 4B.


STEP 4B - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

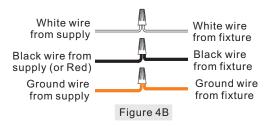

STEP 5B - Install Fixture Body


A. Carefully tuck all wires into the outlet box and position Ceiling Canopy (A) over the outlet box. Align the holes in Ceiling Canopy (A) with mounting screws, then attach Ceiling Canopy (A) using the previously removed mounting balls. Hand tighten until snug.

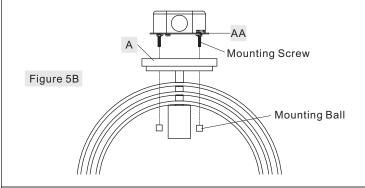

STEP 6B - Install Bulbs and Adjust Rings

- A. Insert bulb onto socket and screw snugly into place.
- B. Adjust Rings to your desired locations.


Your fixture is now assembled and ready to use. Enjoy!

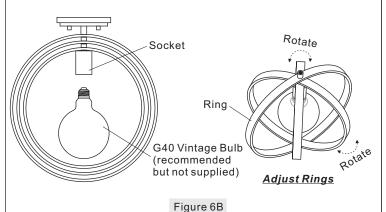


CCT2814WT


FINISH: WESTERN BRONZE

PENDANT LIGHT



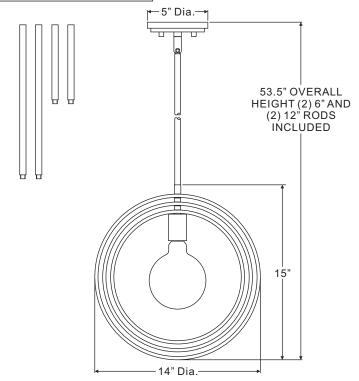

SEMI-FLUSH

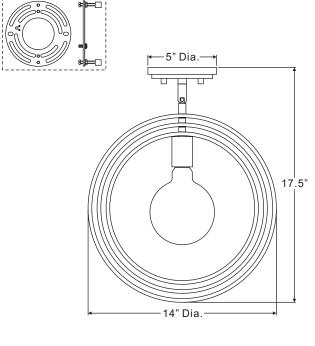

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com