


ASSEMBLY INSTRUCTIONS

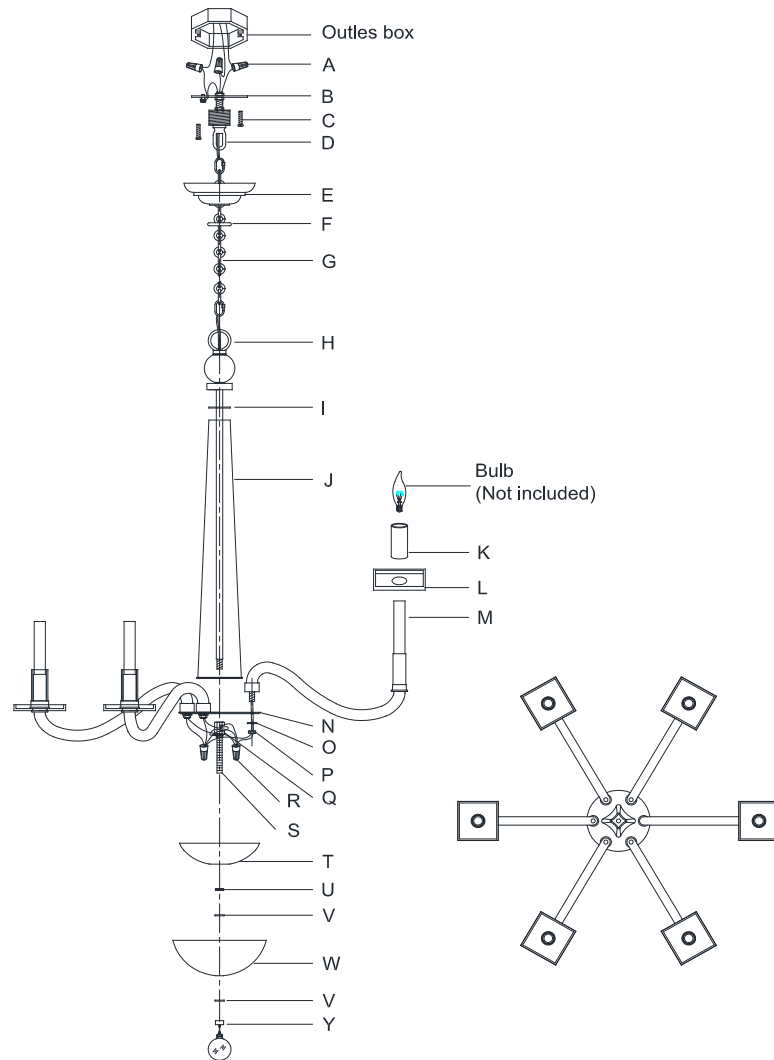

Robinson Medium Chandelier

Item # CHC 1140

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.


NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

1. Carefully remove all parts from the box.
2. Install the mounting plate (B) with ceiling loop (D) to the outlet box by using mounting screws (C).
3. Attach the plastic washer (I), center plate (N) to the center column (J) and secure with top ring (H) and hickey (Q).
4. Unscrew the threaded collar on the chain end link and attach it to the top ring (H).
Secure the threaded collar to secure the fixture body.
5. Let canopy (E) and lock collar (F) go through the chain (G).
6. With the fixture dimension as a guide, shorten the chain (G) as needed using a pair of chain pliers.
7. Unscrew the threaded collar on the other chain end link, raise the fixture then attach chain end link to the ceiling loop (D). Secure the threaded collar to secure the chain.
8. Gently set the wired arm (M) to the center plate (N) and secure with the spring washer (O) and lock nut (P). Check that the arms are spaced evenly before final tightening.
9. Connect the hot wire (smooth edge, markings) from the arms to the main wire (smooth edge, markings) from the center plate (N) using wire nut (R).
10. Connect the neutral wire (ribbed, no markings) from the arms to the main wire (ribbed, no markings) from the center plate (M) using wire nut (R).
11. Wrap all connections individually with electrical tape.
12. Attach the metal bowl (T) to the center plate (N) and secure with thread washer (U).
13. Let plastic washer (V) & glass bowl (W) go through the thread pipe (S), then secure with finial (Y).



VISUAL COMFORT & Co. Est. 1987

ASSEMBLY INSTRUCTIONS

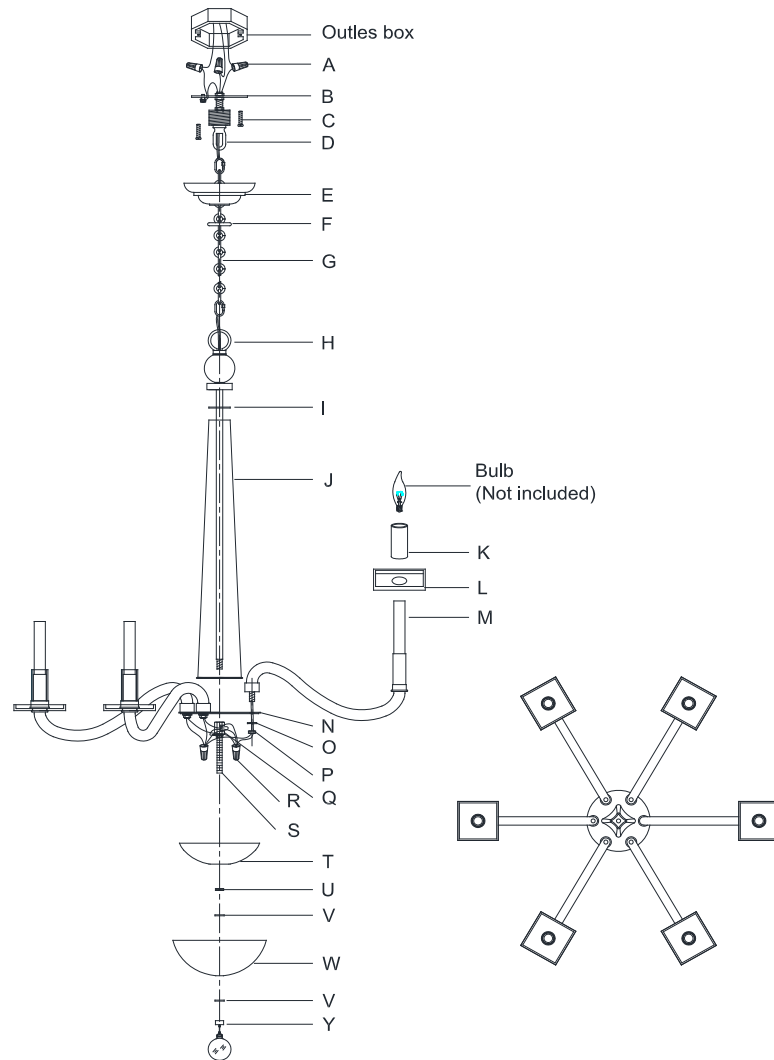

Robinson Medium Chandelier

Item # CHC 1140

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

14. Unwrap the wiring from the top of the fixture body. Weave the power supply cord and the ground wire through the chain (G).
15. When you reach the canopy and ceiling loop, measure the wires then cut. Be certain to leave enough to connect inside of the outlet box.
16. Strip the insulation back on the two power supply wires about 5/8".
17. Twist the power supply and ground wire together and push through the center hole of the ceiling loop (D).
18. Connect the fixture Ground (bare) wire with the ground wire from the outlet box using wire nut (A). If your house does not have ground wire, then attach this wire to the green grounding screw inside of the outlet box.
- IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
19. Connect the fixture Neutral (ribbed, no markings) wire with the neutral wire from the outlet box using wire nut (A).
20. Connect the fixture Hot (smooth edge, markings) wire with the hot wire from the outlet box using wire nut (A).
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
21. Tuck these wire connections neatly into the outlet box to secure.
22. Put canopy (E) to ceiling loop (D), and secure with lock collar (F).
23. Put the disk (L) and tube (K) onto the arm (M).
24. Insert bulbs (not included) into the sockets.
25. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.



VISUAL COMFORT & Co. Est. 1987