




42" SIDE BY SIDE BUILT IN REFRIGERATOR

MODELS:

KBSD612ESS00 (Stainless Steel)


CABINET PARTS

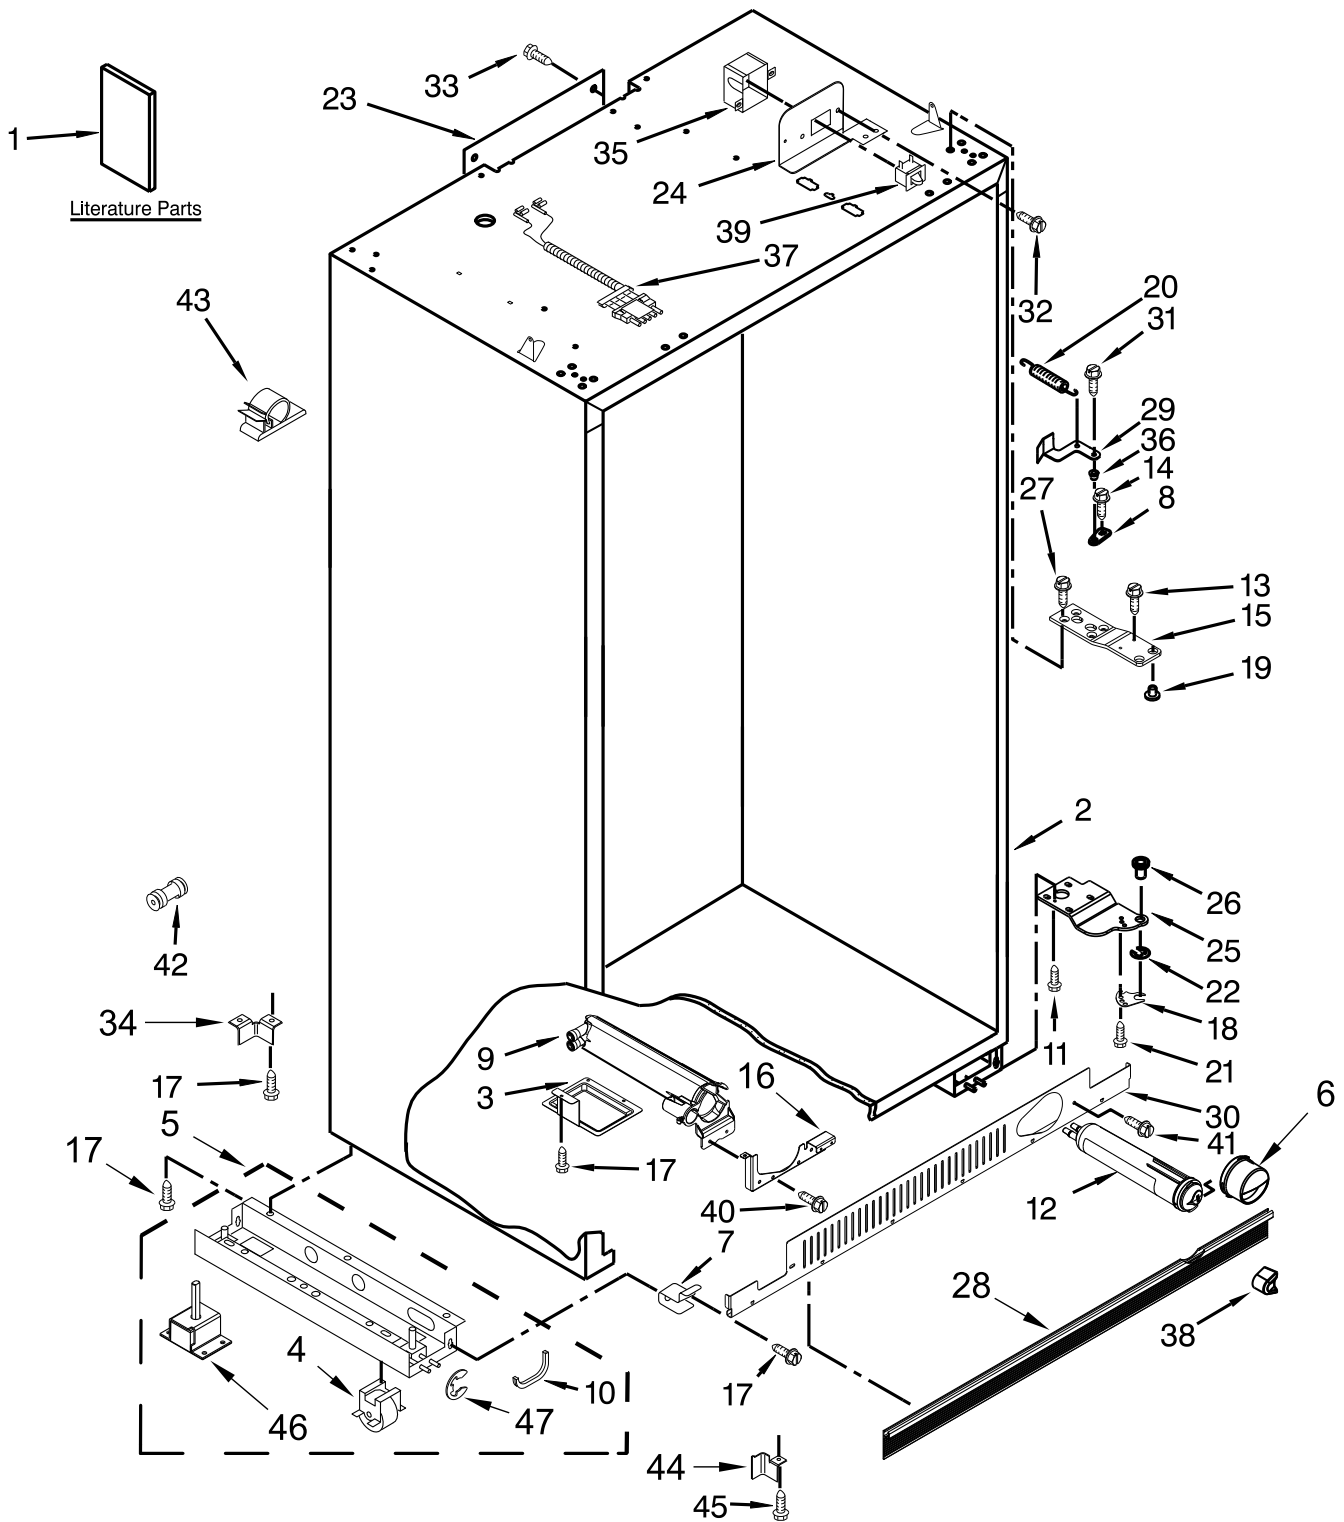

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	15	2257644	Hinge, Top	32	487415	Screw
	W10763009	Use and Care Guide	16	W10674648	Bracket, Filter	33	486194	Screw
	W10859714	Energy Guide	17	W10001250	Screw	34	2006617	Bracket, Base Support (Rear)
	W10763010	Installation Instructions	18	2004994	Lock, Bushing	35	2215938	Cover, Switch
		Tech Sheet	19	W10484913	Bushing, Top Hinge	36	2316859	Bushing, Extension Arm
	W10762990	English	20	2221242	Spring, Door Closure (Green)	37	W10780213	Assembly, Switch Wire
	W10762992	French	21	3400230	Screw	38		Button, Water Filter
2		Cabinet (Not Serviced)	22	2005008	Ring, Bushing Retaining		2260503B	Black
3	2318189	Tray, Filter Drip	23	2215612	Cover, Air Duct	39	1118894	Switch, Rocker Arm
4	W10138054	Assembly, Roller	24		Bracket, Switch		1115373	Switch, Rocker Arm Combination (Freezer)
5		Assembly, Support Base		W10741112	Left Hand	40	8281163	Screw (Stainless)
	W10279275	Left Hand		W10741111	Right Hand			
	W10138423	Right Hand	25		Hinge, Bottom	41	W10005050	Screw
6		Cap, Water Filter		2006779	Left Hand	42	W10271541	Connector, Union
	W10797527	Black		2006780	Right Hand	43	W10663352	Clip
7	2307640	Bracket, Grill Mounting	26	2302876	Bushing, Adjustable	44		Bracket, Support
8	2320509	Stop, Door	27	8533913	Screw		2006616	Left Hand
9	W10121140	Housing, Water Filter	28		Skirt, Bottom Grille		2006556	Right Hand
10	2307584	Grommet, Crossover		W10188549	Black	45	W10141604	Screw
11	3400525	Tube	29		Arm, Extension	46	2005032	Leveler, Adjustable
12	W10121146	Filter, Water		W10709785	Left Hand	47	2006841	Ring, Retainer
13	8281164	Screw (Stainless)		W10728112	Right Hand			
14	W10485630	Screw	30		Grille, Bottom			
				W10182717	Black			
			31	W10485630	Screw			


CABINET TRIM PARTS

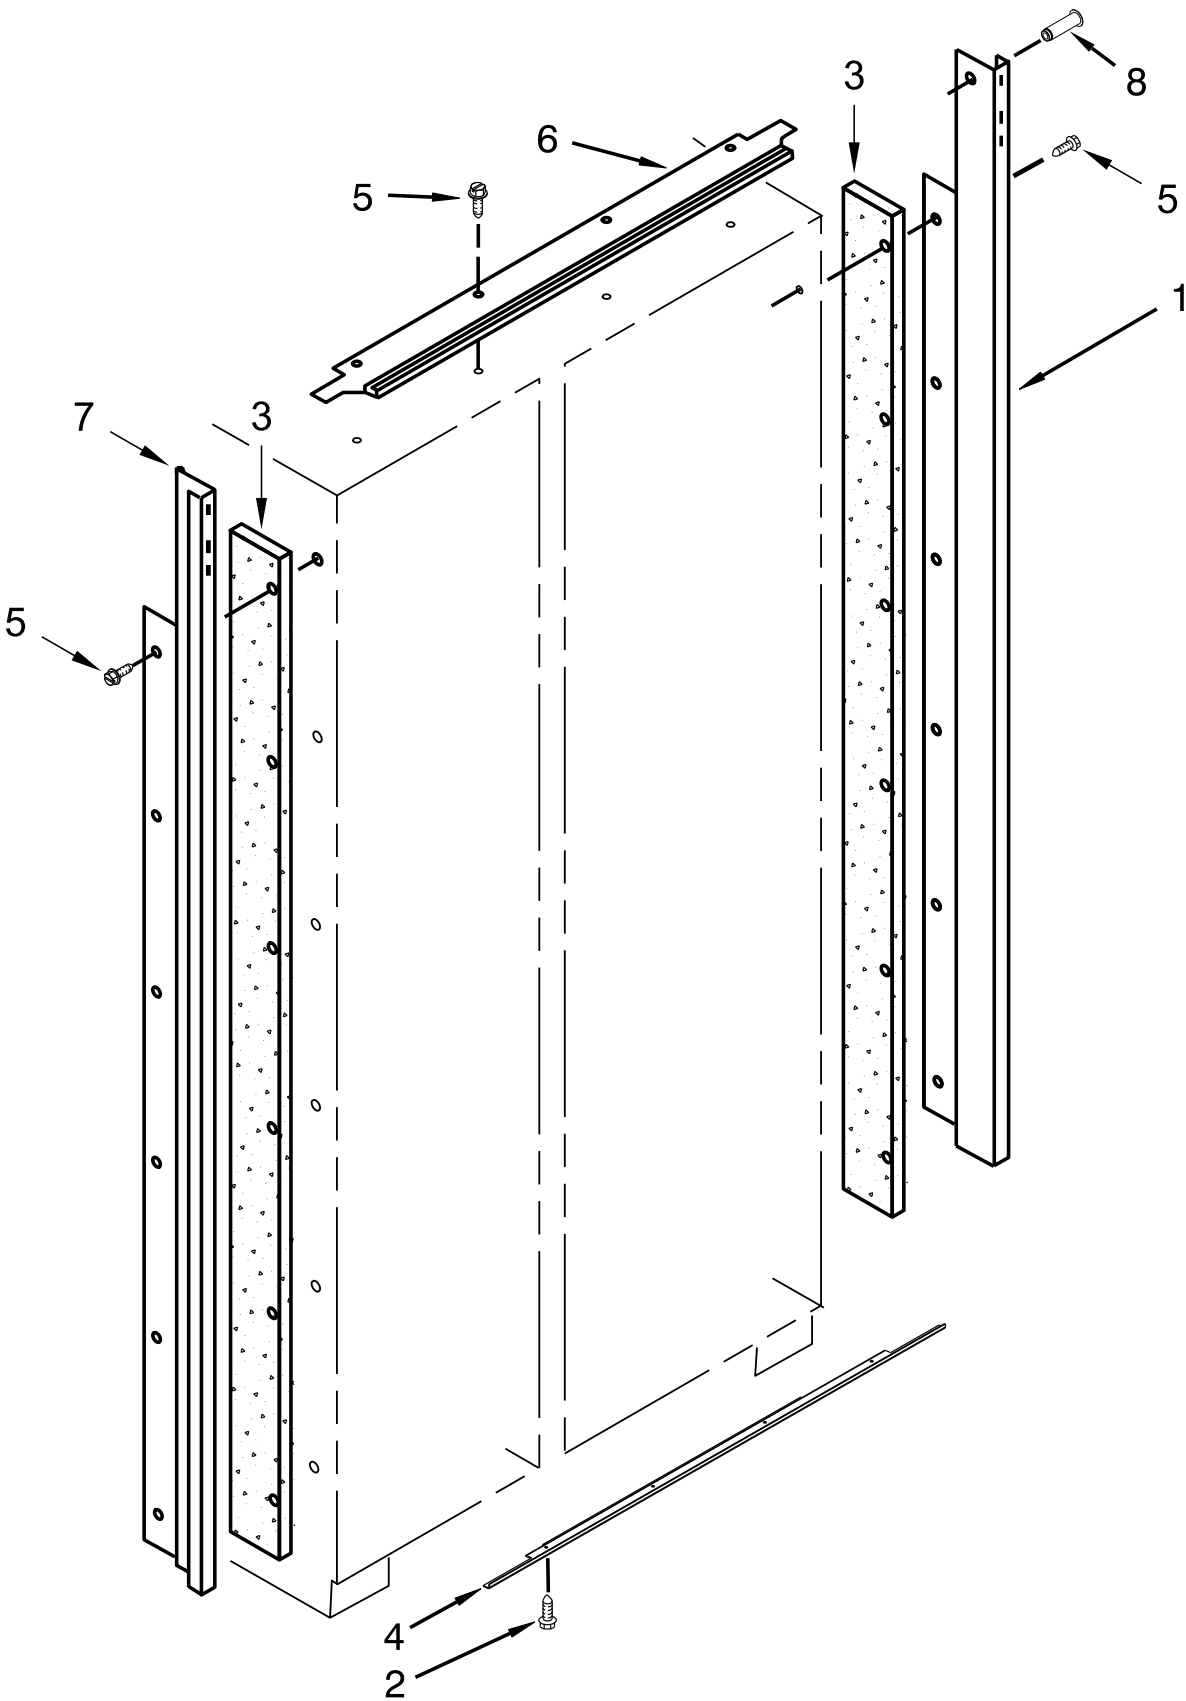

CABINET TRIM PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Cabinet Side	4		Trim, Bottom Cabinet	7		Trim, Cabinet Side
		Right Hand		2316687	Aluminum			Left Hand
	W10568005	Aluminum	5	486194	Screw		W10568007	Aluminum
2	W10001250	Screw	6		Trim, Top Cabinet	8	W10121451	Insert, Blind Threaded
3	2005925	Seal, Side Trim		2314017	Aluminum			


REFRIGERATOR LINER PARTS

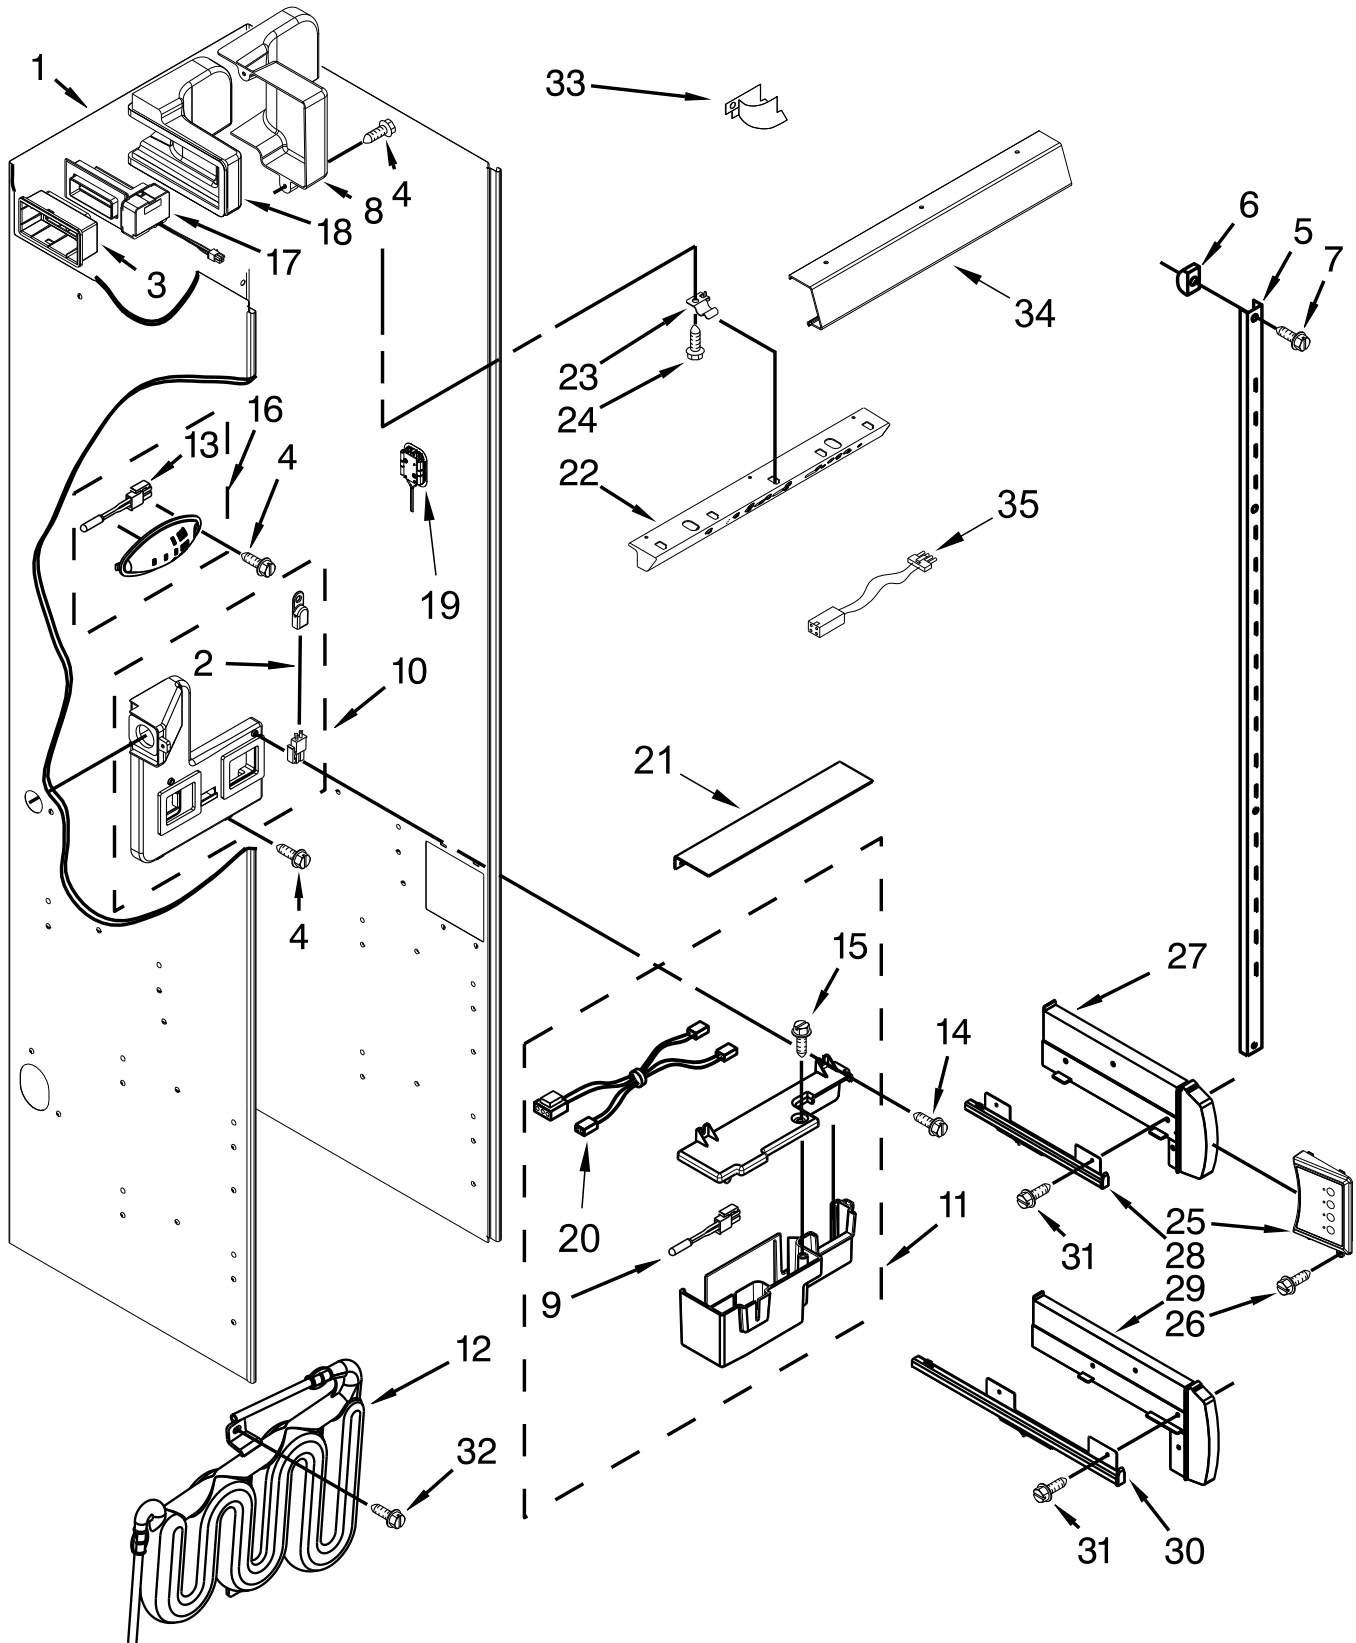

REFRIGERATOR LINER PARTS



<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not Serviced)	18	2309222	Assembly, Air Diffuser	29		Spacer, Crisper
2	2306010	Thermistor	19	W10607479	Assembly, LED Module		2256223	Left Hand
3	2208970	Duct, Air	20	2310205	Assembly, Meat Pan	30	2256222	Right Hand
4	487539	Screw (Stainless)			Wire			Slide, Crisper
5	2259077	Ladder, Shelf	21	W10159487	Diverter, Crisper Cover		2302956	Left Hand
6	520965	Support, Ladder	22	W10798004	Assembly, Control Box	31	2302957	Right Hand
7	2006475	Screw (White)	23	2317000	Clip, Control Box			Screw
8	2309087	Cover, Air Diffuser	24	8281163	Screw (Stainless)		8533928	Left Hand
9	2302937	Thermistor						Screw
10	W10475010	Assembly, Spacer	25	W10760791	Assembly, User Interface		8533929	Right Hand
11	W10169528	Assembly, Control Baffle	26	W10142283	Screw (White)	32	W10141518	Screw (Stainless)
12	W10645131	Reservoir, Water	27		Spacer, Meat Pan	33	2003577	Screw
13	2188820	Thermistor		2256243	Left Hand	34	W10780413	Guard, Air Return
14	8533929	Screw (Stainless)		2256244	Right Hand	35	W10458299	Bracket, Control Box
15	486194	Screw	28		Slide, Meat Pan			Wire, Jumper
16	2317844	Assembly, Thermistor		2302954	Left Hand			
17	2221296	Assembly, Air Baffle		2302955	Right Hand			

FREEZER LINER AND AIR FLOW PARTS

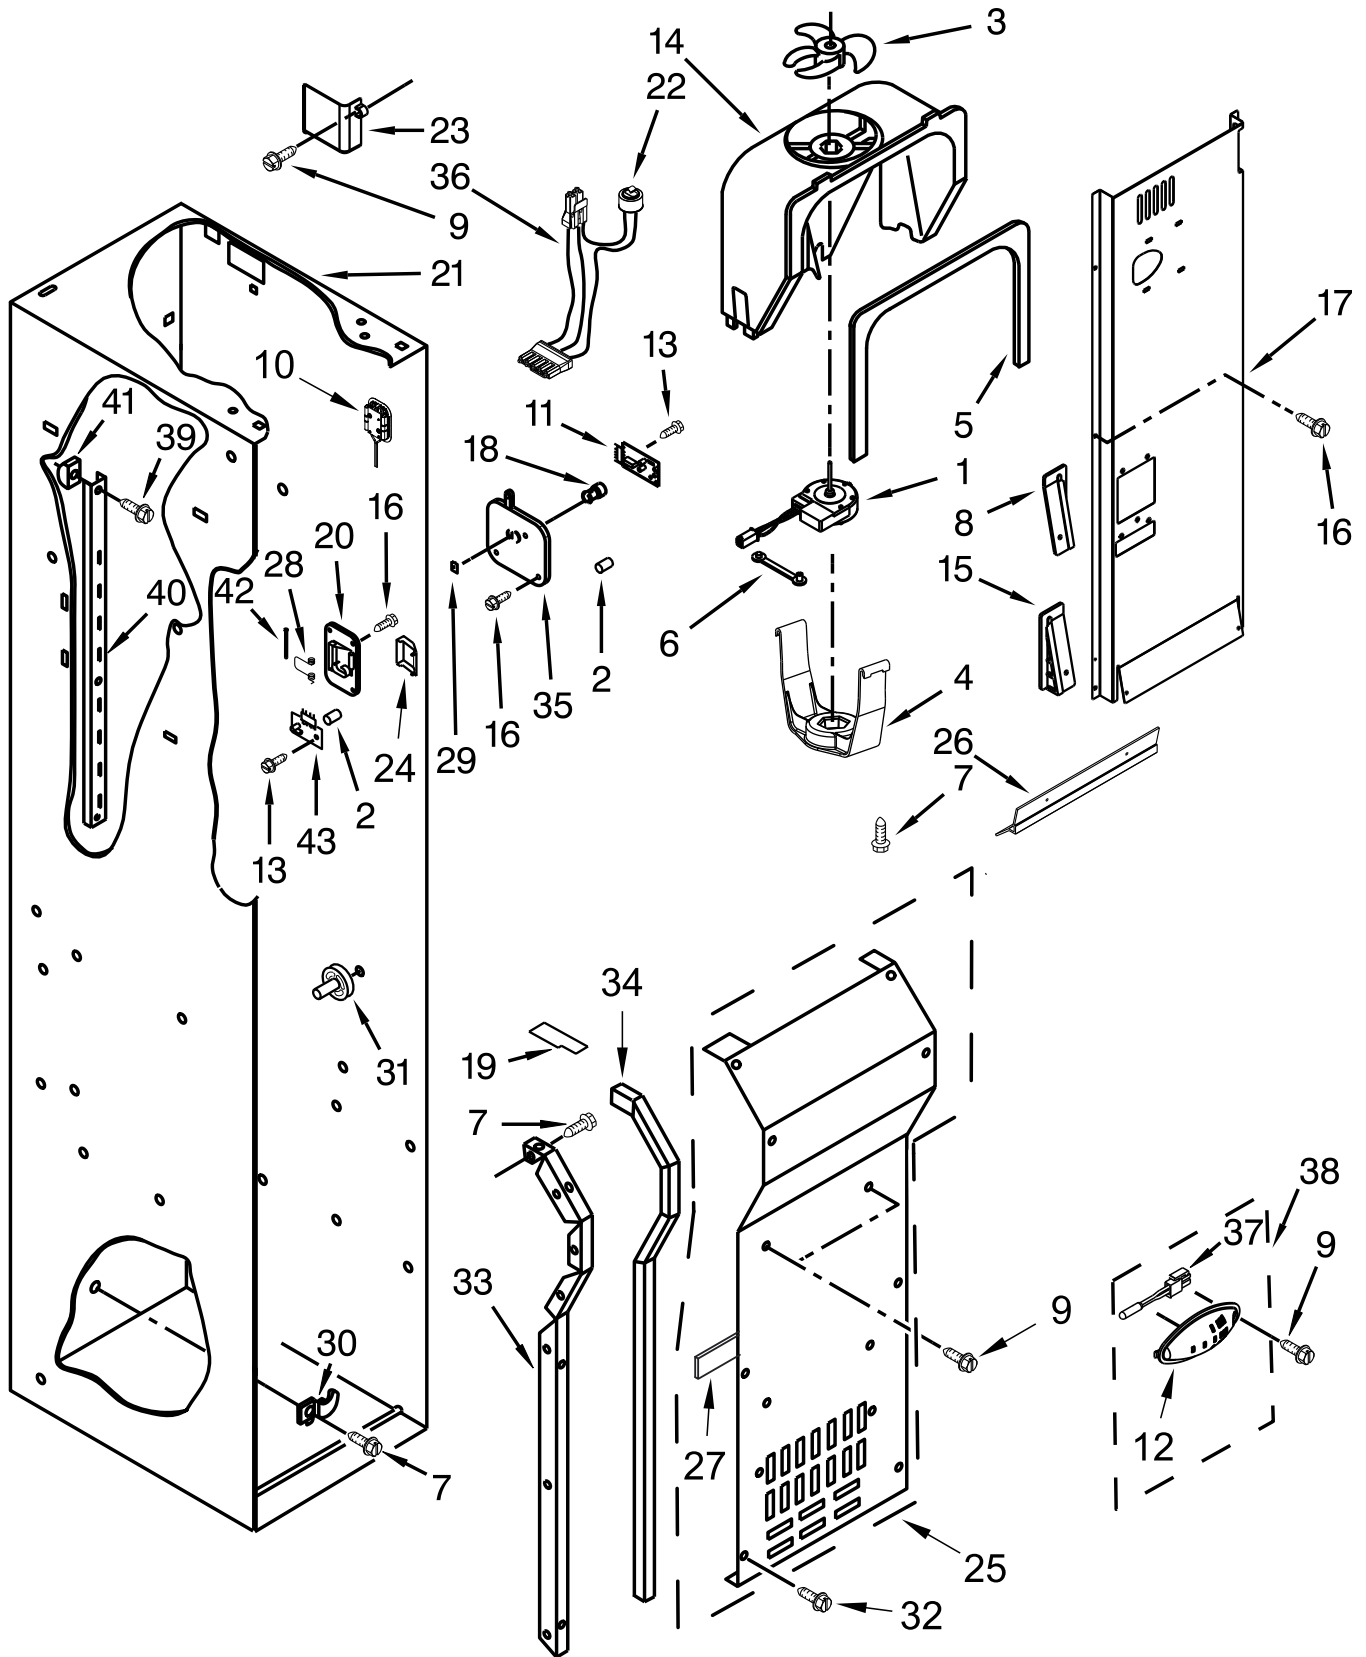

FREEZER LINER AND AIR FLOW PARTS


<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10436861	Motor, Fan	17	2307774	Duct, Air	31	W10173127	Assembly, Shelf Stud
2	2198665	Tube, Circuit Board	18	2198643	Lens, Receiver	32	8281163	Screw (Stainless)
3	2169142	Blade, Fan	19		Block, Fan Scroll	33		Rail, Evaporator Cover
4	W10260421	Retainer, Fan Motor		2209066	Left Hand		2221107	Left Hand
5	2302817	Gasket, Scroll Assembly		2209480	Right Hand		2259355	Right Hand
6	W10321090	Grommet, Motor	20	2215650	Cover, Emitter	34	2220904	Gasket, Evaporator Cover
7	486194	Screw	21		Liner (Not Serviced)	35	2259493	Cover, Receiver
8	2259464	Wedge, Right Air Duct	22	W10160570	Bi-Metal, Defrost	36	W10482187	Harness, Bi-Metal Wire
9	487539	Screw (Stainless)	23	2259025	Cover, Air Outlet	37	2306010	Thermistor
10	W10607479	Assembly, LED Module	24	2198633	Flipper, Shut Off	38	2317844	Assembly, Thermistor
11	W10290817	Board, Receiver Circuit	25	W10813094	Assembly, Evaporator Cover	39	2006475	Screw (White)
12	2317105	Cover, Thermistor	26	2302850	Support, Air Duct	40	2259032	Ladder, Shelf
13	489214	Screw	27	W10581988	Gasket, Evaporator Cover	41	2259445	Support, Ladder
14	2182120	Scroll, Fan	28	2198635	Spring, Door	42	2198634	Pin, Door
15	2259465	Wedge, Left Air Duct	29	2255563	Slide, Icemaker Shut Off	43	W10193840	Board, Emitter Circuit
16	W10142283	Screw (White)	30	1112260	Support, Evaporator			

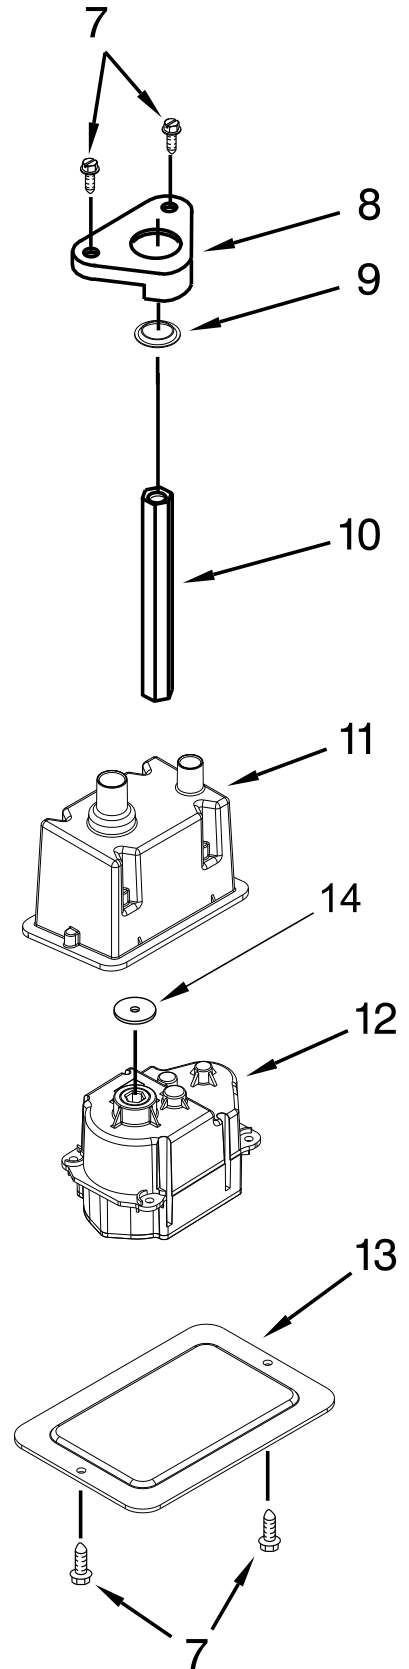

MOTOR AND ICE CONTAINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	2222965	Bin, Ice	7	8281163	Screw (Stainless)	12	2315547	Motor, Dispenser
2	W10134774	Bin, Crusher	8	2188919	Clip, Shaft	13	2318028	Cover
3	W10749207	Button, Bin	9	2198628	Seal	14	W10254073	Washer
4	W10134783	Latch, Bin	10	2318082	Shaft, Drive	15	W10769115	Assembly, Ice Container
5	2198608	Spring, Latch	11	2318011	Enclosure, Motor			
6	2198671	Screw (Stainless)						


REFRIGERATOR SHELF PARTS

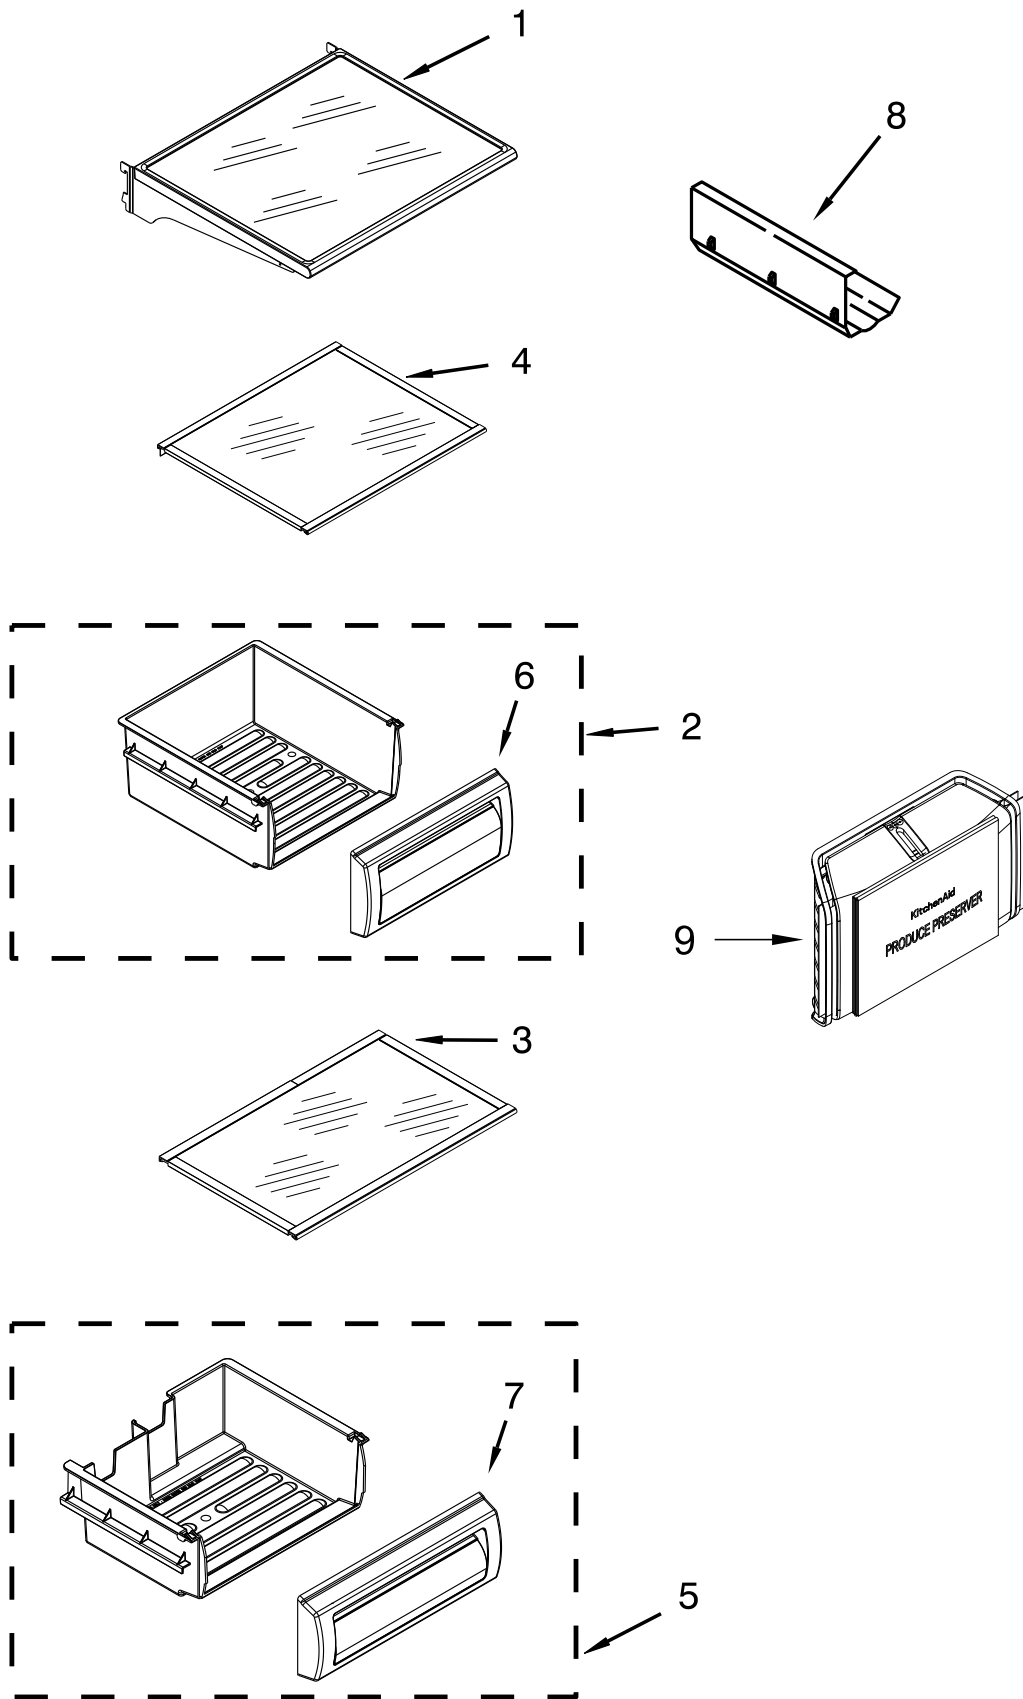

REFRIGERATOR SHELF PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10568584	Assembly, Shelf	5	W10407627	Assembly, Meat Pan	8	W10701859	Rack, Wine
2	W10407624	Pan, Crisper	6	2256248	Front, Crisper Pan	9	W10593207	Assembly, Produce Preserver
3	W10556312	Assembly, Meat Pan Cover	7	2256366	Front, Meat Pan			
4	W10556775	Assembly, Crisper Cover						

FREEZER SHELF PARTS

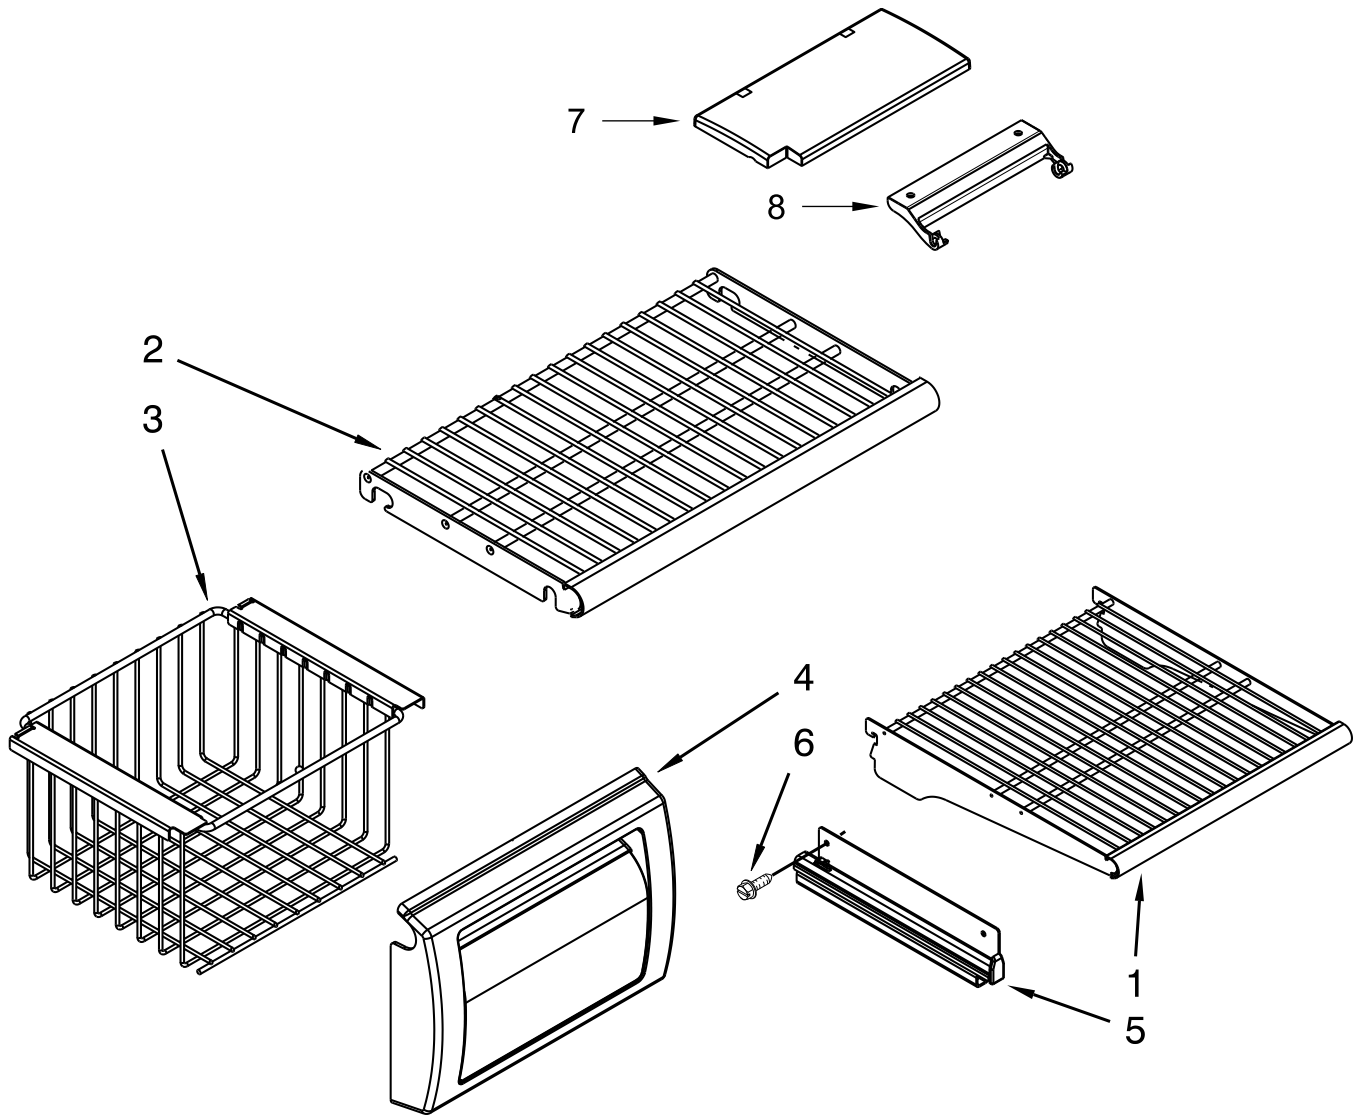


FREEZER SHELF PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10759084	Shelf, Wire
2	W10759069	Shelf, Fixed
3	2259082	Basket, Freezer
4	2256270	Front, Basket

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Slide, Basket
	2259318	Left Hand
	2259317	Right Hand
6	8533928	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10504753	Cover, Icemaker
8	2198641	Bracket, Icemaker Cover


REFRIGERATOR DOOR PARTS

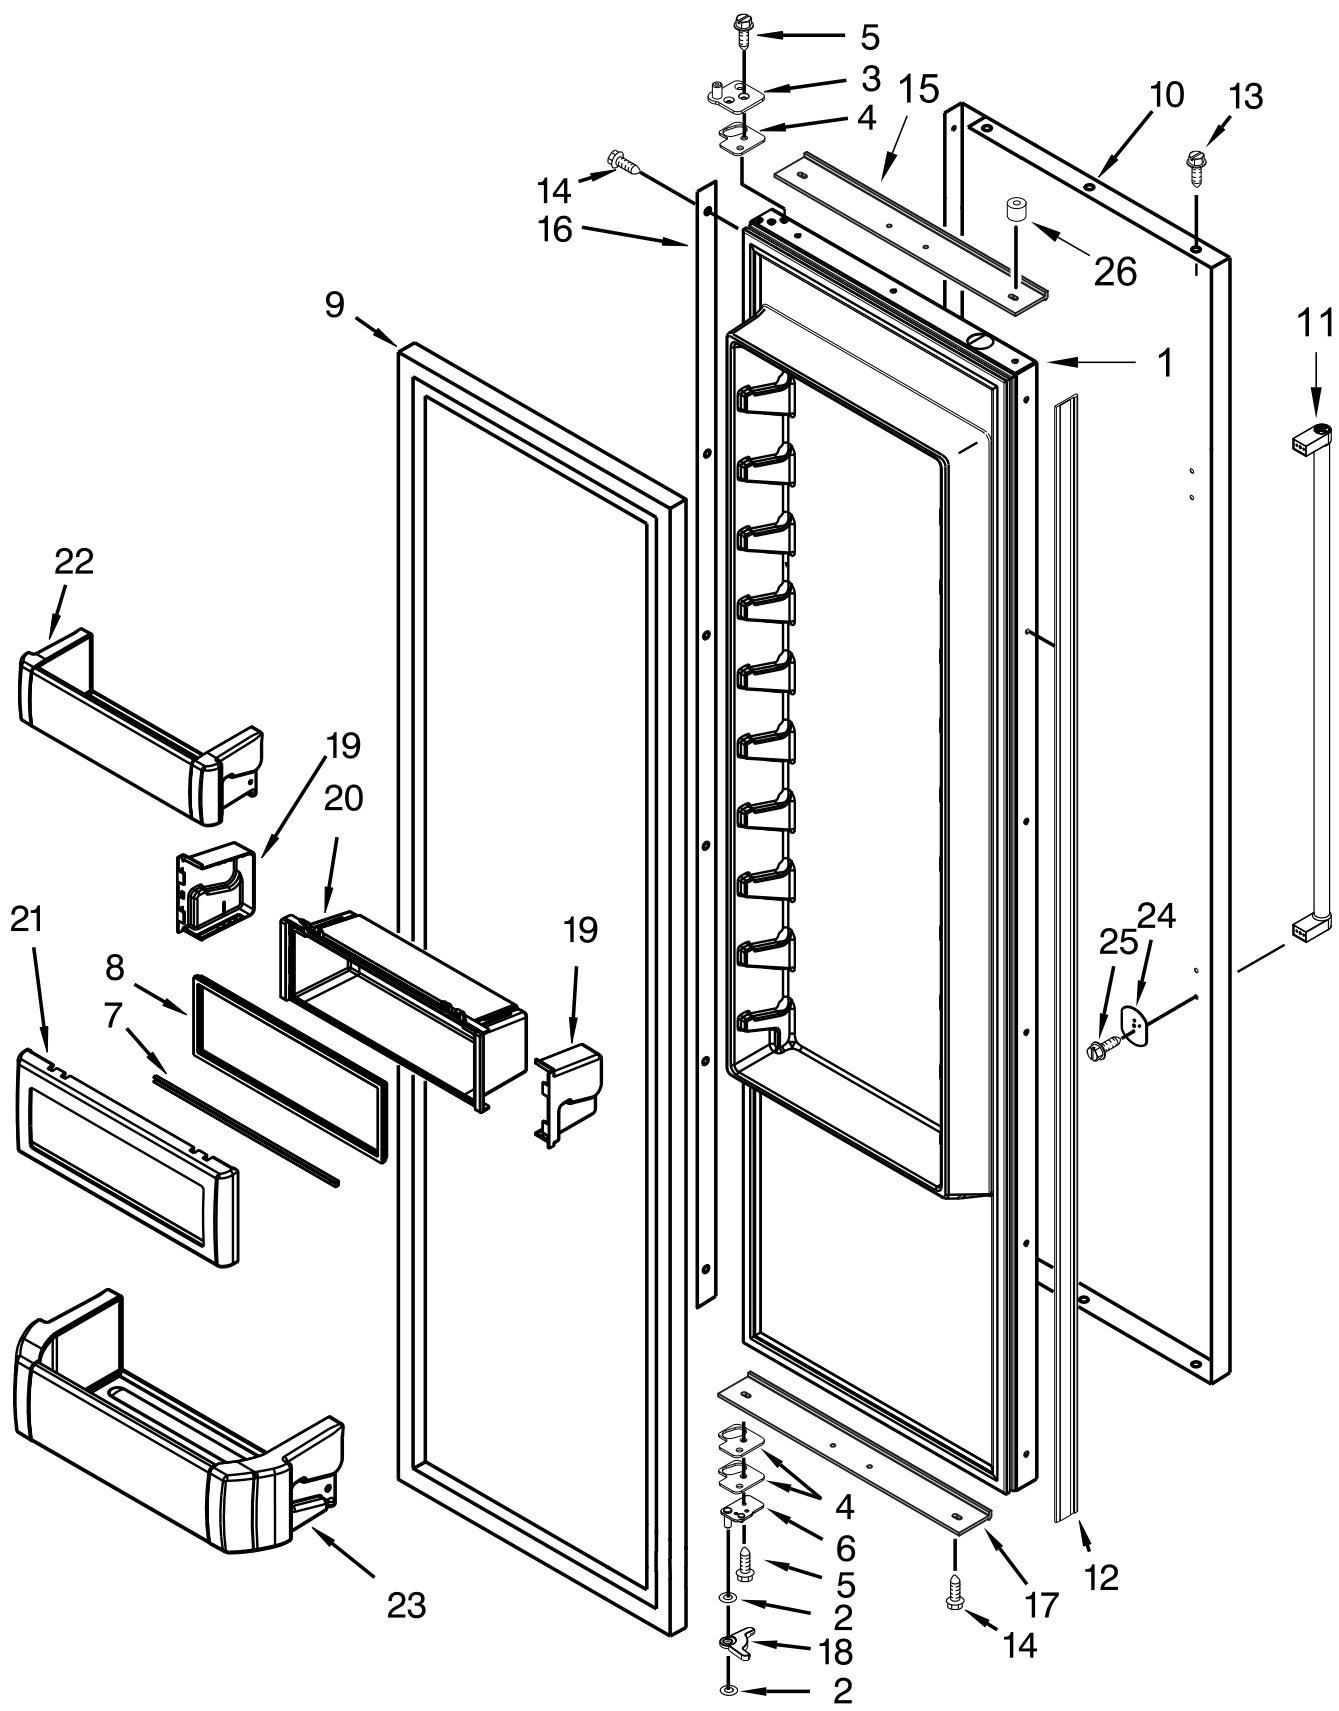

REFRIGERATOR DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10761878	Door, Refrigerator	10		Skin, Door	19		Endcap, Utility Bin
2	2006346	Washer, Extension Arm		W10859716	Stainless		W10769395	Left Hand
3	W10485980	Assembly, Hinge (Top)	11		Handle, Door		W10768112	Right Hand
4	2316804	Spacer, Door Hinge		W10541592	Stainless	20	W10323036	Bin, Center Utility
5	W10162602	Bottom Screw	12	W10758113	Spacer, Handle Side Door	21	2257616	Door, Utility Bin
6	2302878	Assembly, Hinge (Bottom)	13	488568	Screw (Stainless)	22	W10323599	Bin, Shallow Door
7	2222796	Rail, Lid	14	8281250	Screw (Stainless)	23	W10323747	Bin, Gallon Door
8	2222982	Gasket, Utility Bin	15	W10761896	Spacer, Door Skin (Top)	24	W10127710	Plate, Handle Door
9		Gasket, Door	16	W10756209	Spacer, Hinge Side Door	25	308544	Screw
	W10764832	Grey	17	W10761936	Spacer, Door Skin Bottom	26	2005433	Spacer, Door Skin (Top)
			18	W10482554	Cover, Bottom Gap			


FREEZER DOOR PARTS

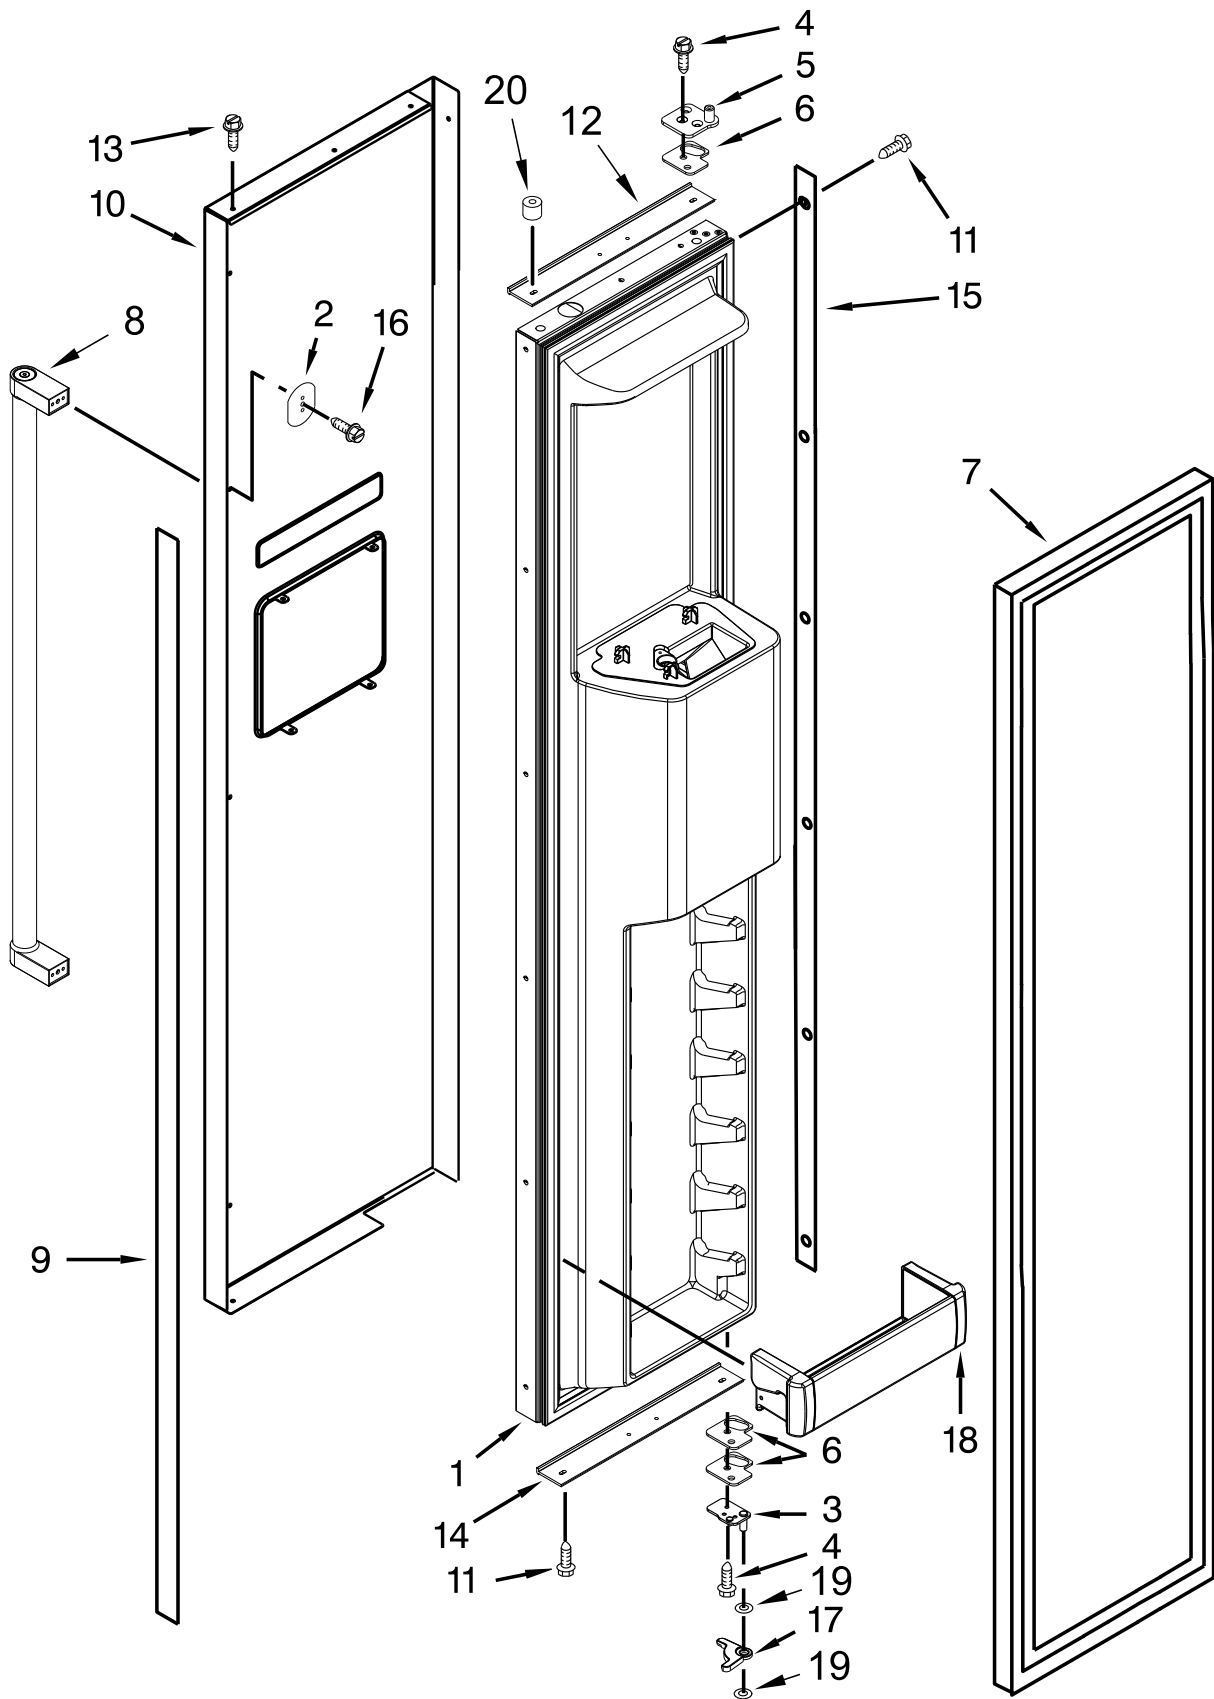

FREEZER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10775462	Assembly, Freezer Door (Includes Dispenser Parts)	7		Gasket, Door	13	488568	Screw (Stainless)
2	W10127710	Plate, Handle Door		W10761964	Grey	14	W10758119	Spacer, Door Skin Bottom
3	2302879	Assembly, Hinge (Bottom)	8		Handle, Door	15	W10756209	Spacer, Hinge Side Door
4	W10162602	Screw		W10541592	Stainless	16	308544	Screw
5	W10485980	Assembly, Hinge (Top)	9	W10758113	Spacer, Handle Side Door	17	W10482554	Cover, Bottom Gap
6	2316804	Spacer, Door Hinge Bottom	10		Skin, Door	18	W10323602	Bin, Shallow
				W10859718	Stainless	19	2006346	Washer, Extension Arm
			11	8281250	Screw (Stainless)	20	2005433	Spacer, Door Skin (Top)
			12	W10758117	Spacer, Door Skin (Top)			


DISPENSER PARTS

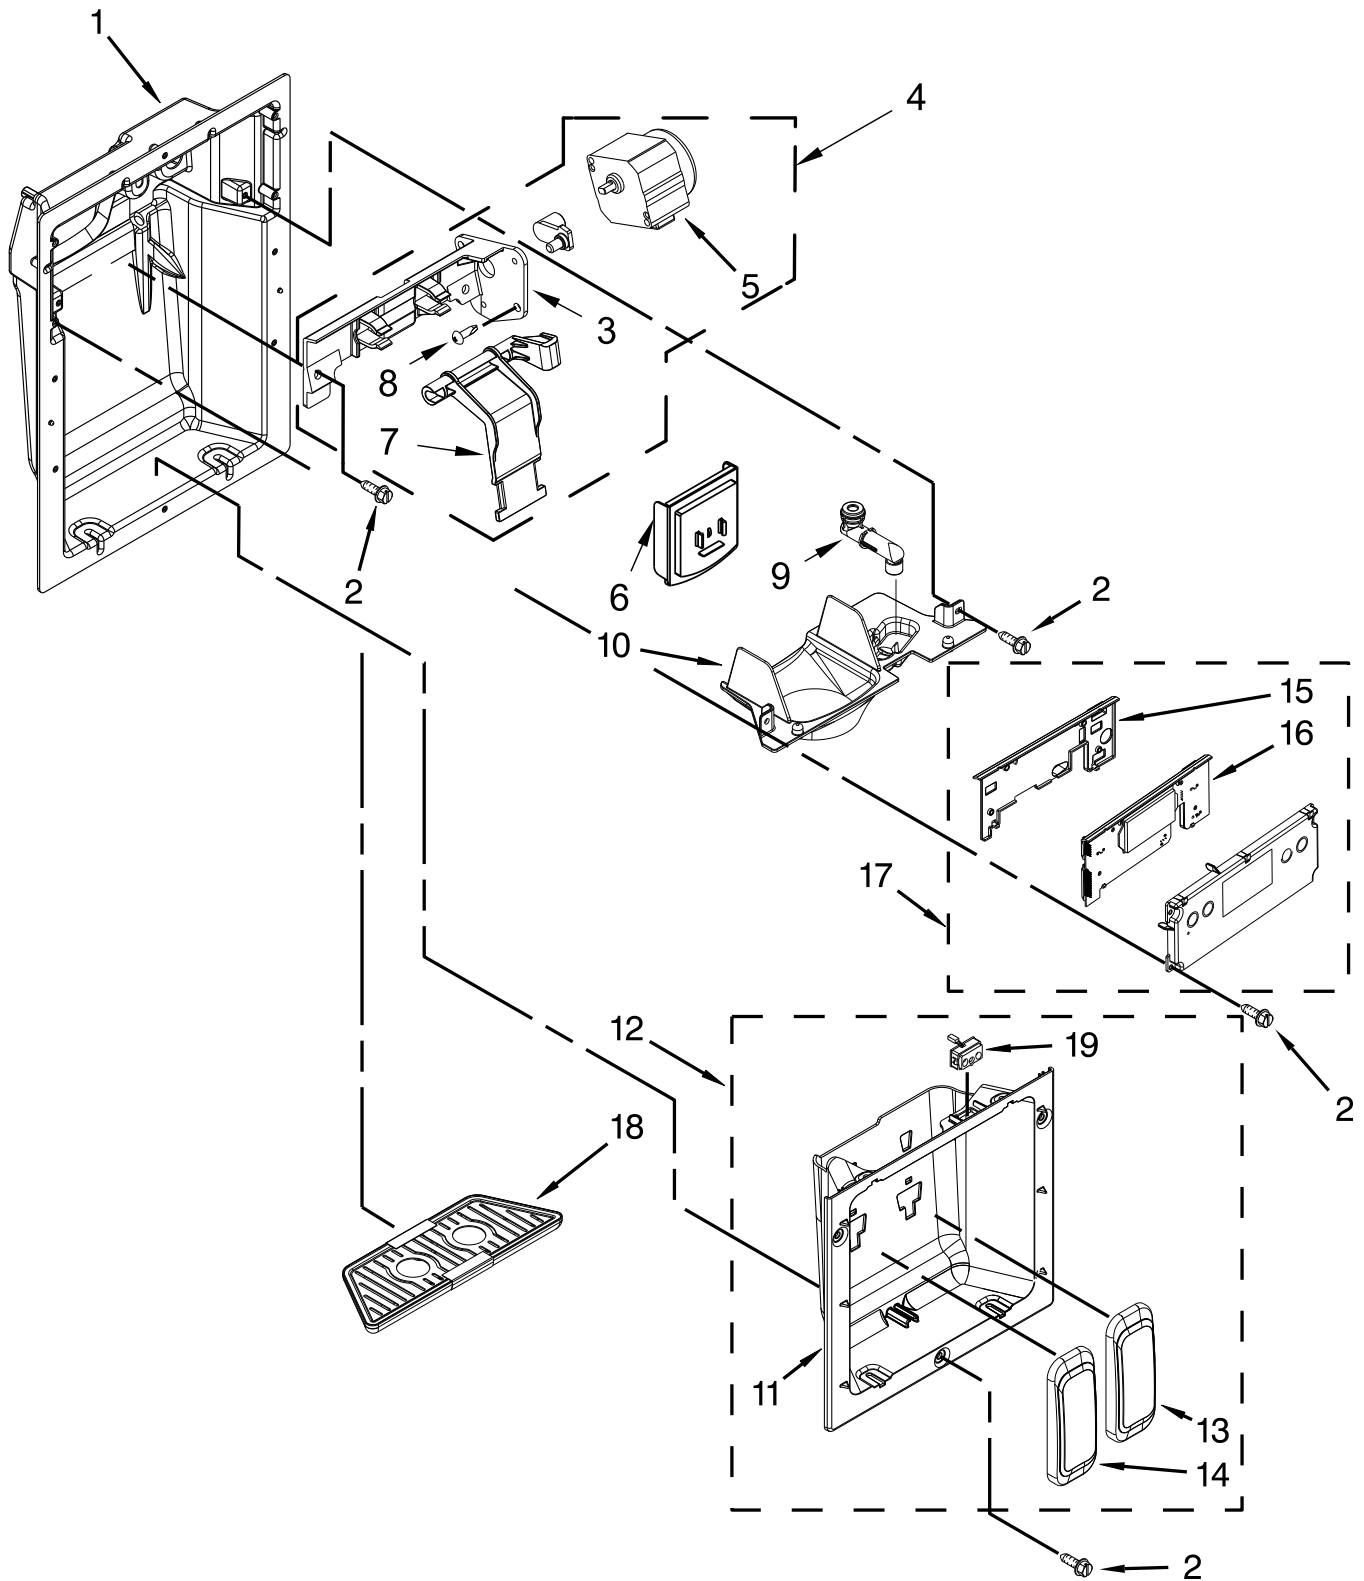

DISPENSER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Housing, Dispenser (Not Serviced)	9	2305235	Assembly, Spigot	15	2305219	Cover, Control
2	8281163	Screw (Stainless)	10	2318017	Assembly, Separator	16	2321746	Assembly, User Interface Control Cover
3	W10542660	Bracket, Motor	11		Housing, Middle (Not Available Order Item 12)	17	W10151236	Assembly, User Interface
4	W10546285	Assembly, Motor and Bracket	12	W10260622	Assembly, Housing	18		Housing, Tray
5	W10205979	Motor, Ice Door	13		Assembly, Water Paddle	2318062US		Universal Silver
6	W10504458	Door, Ice		2305307GN	Universal Silver	19	2305342	Assembly, LED
7	W10542663	Support, Ice Door	14		Assembly, Ice Paddle			
8	4449745	Screw		2305306GN	Universal Silver			

TOP GRILLE AND UNIT COVER PARTS

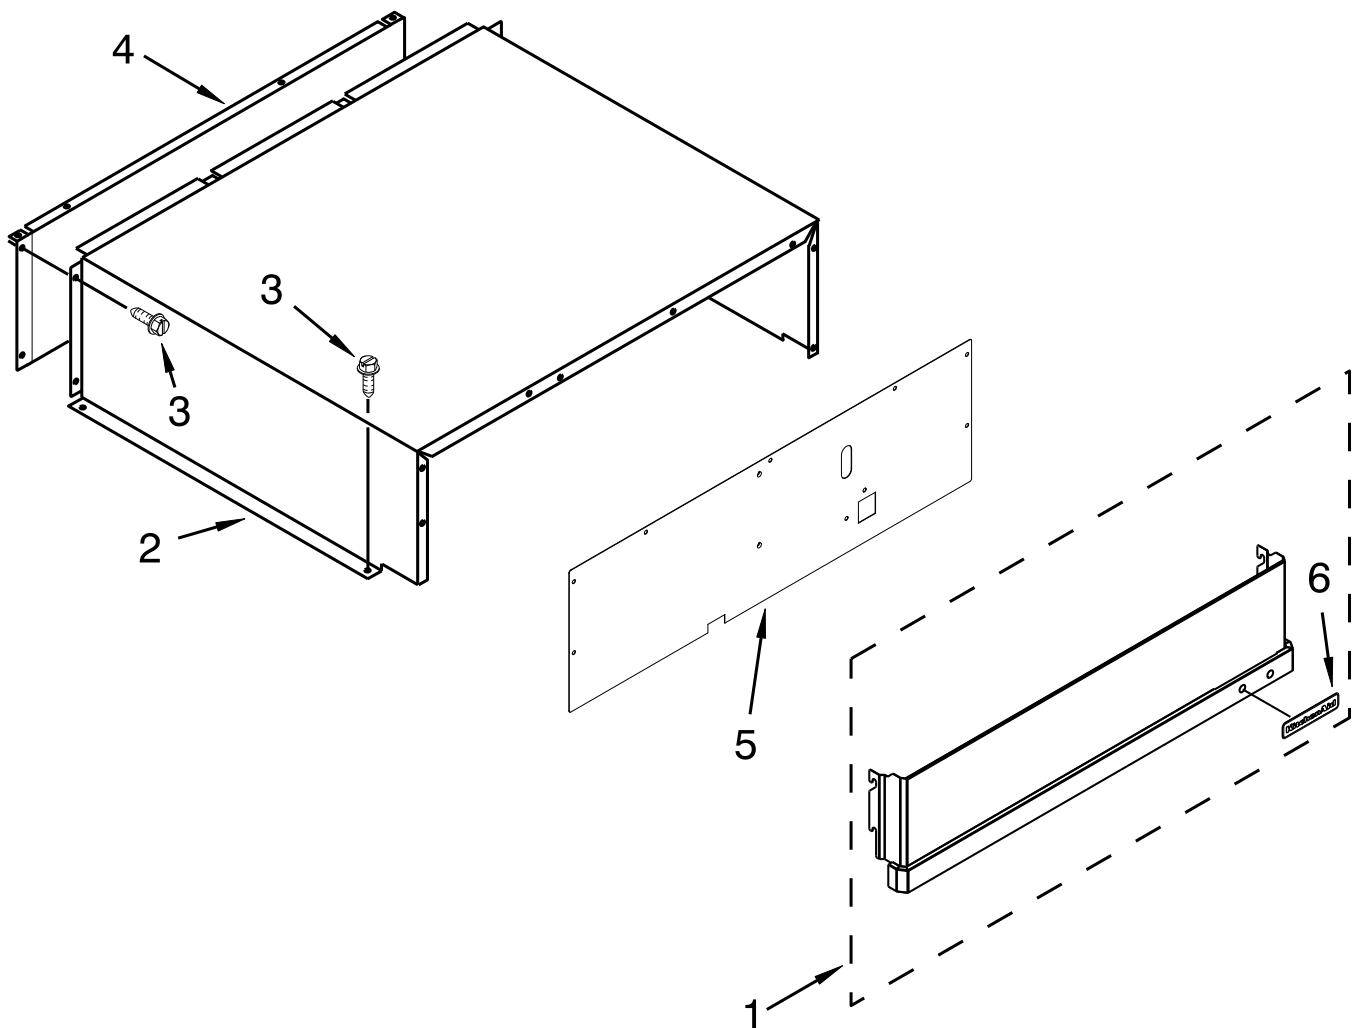


TOP GRILLE AND UNIT COVER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Top Grille
	W10645404	Stainless
2	W10545068	Cover, Unit

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	1157158	Screw
4	2256466	Panel, Unit Back
5	W10694109	Cover, Unit Front

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6		Nameplate
	W10518672	Grey


UPPER UNIT PARTS

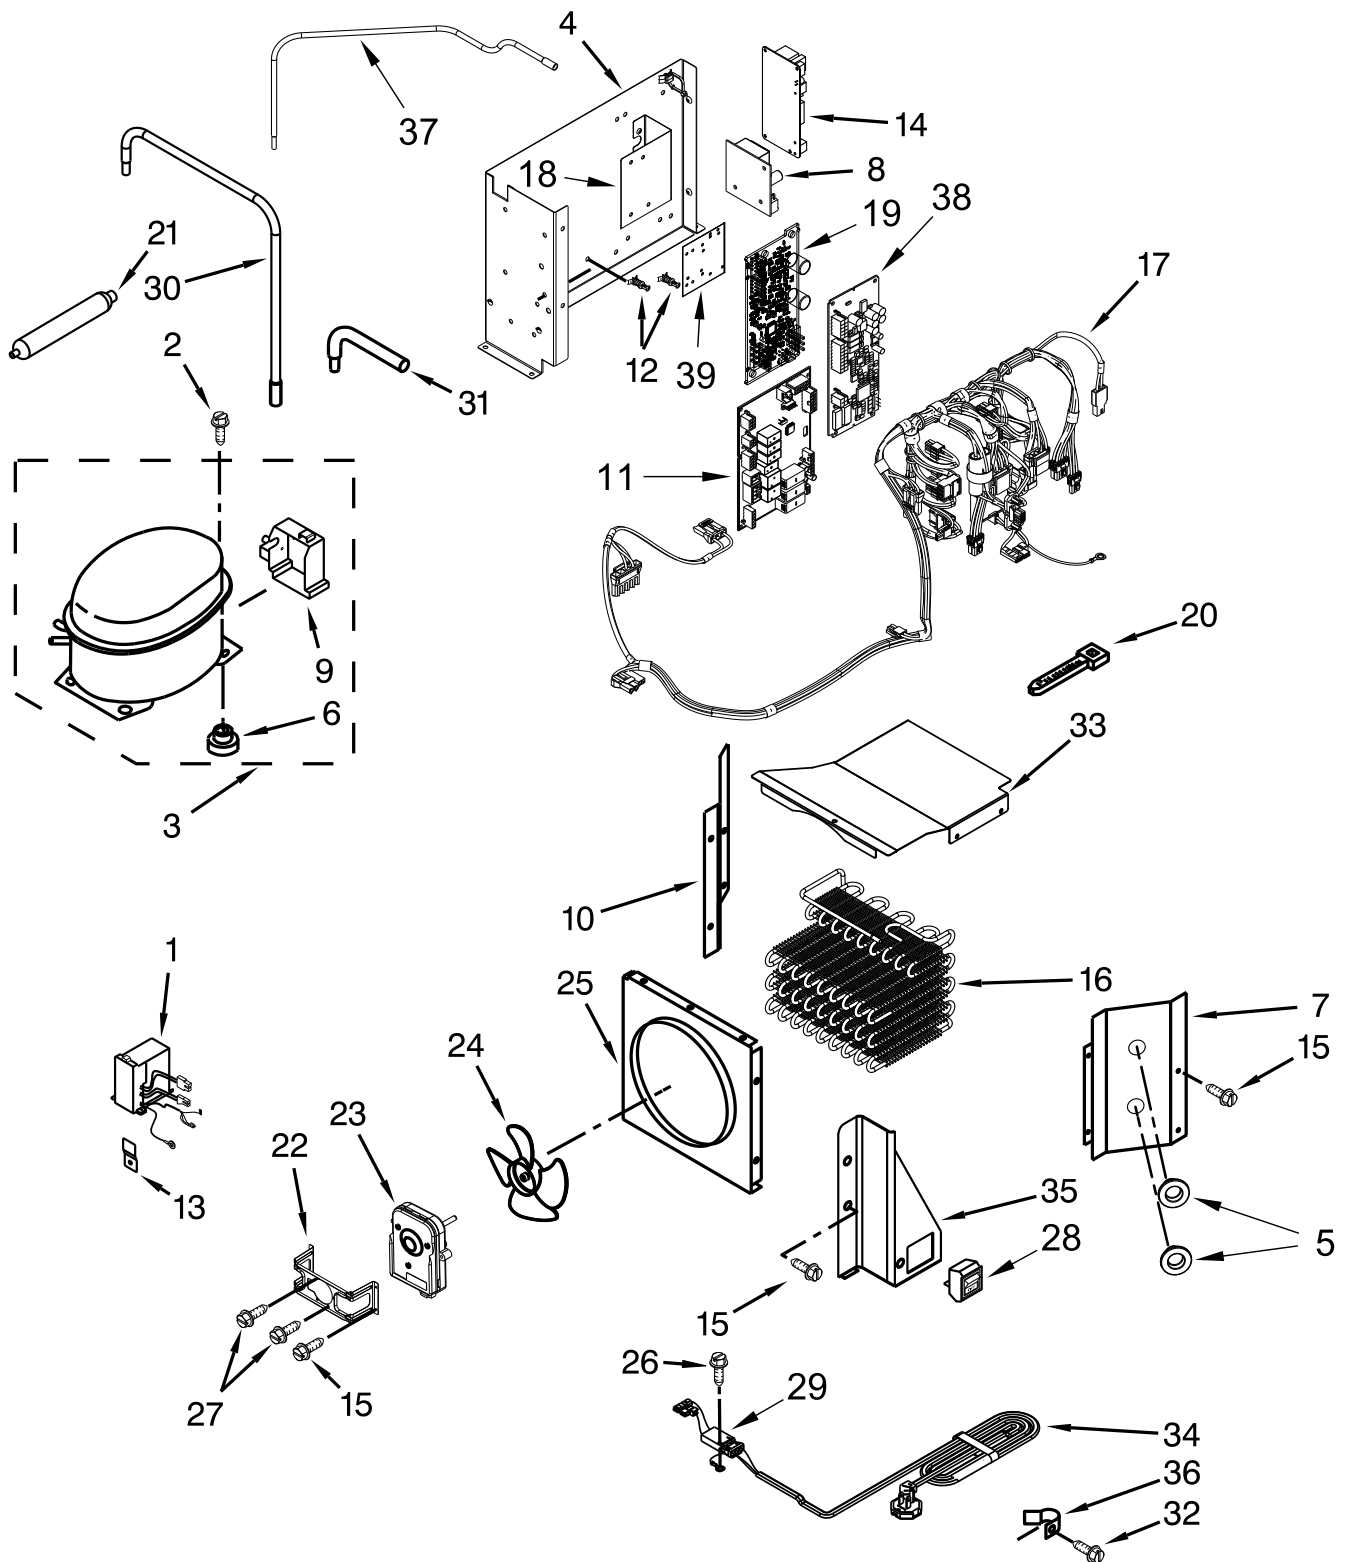

UPPER UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10645666	Assembly, Inverter Box	17	W10775849	Assembly, Unit Wire	34	2310196	Cord, Power
2	489373	Screw	18	W10761479	Plate, Circuit Board	35	W10321055	Bracket, Control Assembly
3	W10653005	Compressor	19	W10790783	Supply, LED Power	36	549193	Clamp, Power Cord
4	W10550831	Housing, Control Board Mounting	20	2155774	Tie, Wire	37	W10648264	Tube, Heat Loop Transition
5	W10587113	Grommet	21	W10175593	Drier	38	2318054	Control, Electronic
6	1100826	Grommet	22	W10414681	Bracket, Fan Motor	39	W10770059	Plate, Circuit Board (Top)
7		Support, Condenser	23	W10527155	Motor, Condenser Fan			Following Parts Not Illustrated
	W10525179	Right Hand	24	W10139483	Blade, Fan		978025	Valve, Access
8	2259350	Board, Power Supply	25	W10415670	Orifice, Fan		978026	Valve, Access
9	2215676	Cover, Terminal	26	487294	Screw		978027	Valve, Access
10		Support, Condenser	27	W10146359	Screw		978028	Valve, Access
	W10525177	Left Hand	28	2266802	Switch, Power Disconnect		978029	Valve, Access
11	W10200659	Control, Electronic	29	2310195	Assembly, Jumper Wire (Power Switch to Power Cord)		978030	Valve, Access
12	2203075	Spacer	30	W10624944	Tube, Drier Transition		876764	Valve, Access
13	2256328	Bracket, Inverter Mounting	31	W10528578	Tube, Process			REFRIGERANT CHARGE
14	W10624574	Supply, Power	32	486194	Screw			6.75 oz. (R-134A)
15	1157158	Screw	33	W10525175	Cover, Condenser Support			
16	W10591457	Condenser						

LOWER UNIT AND TUBE PARTS

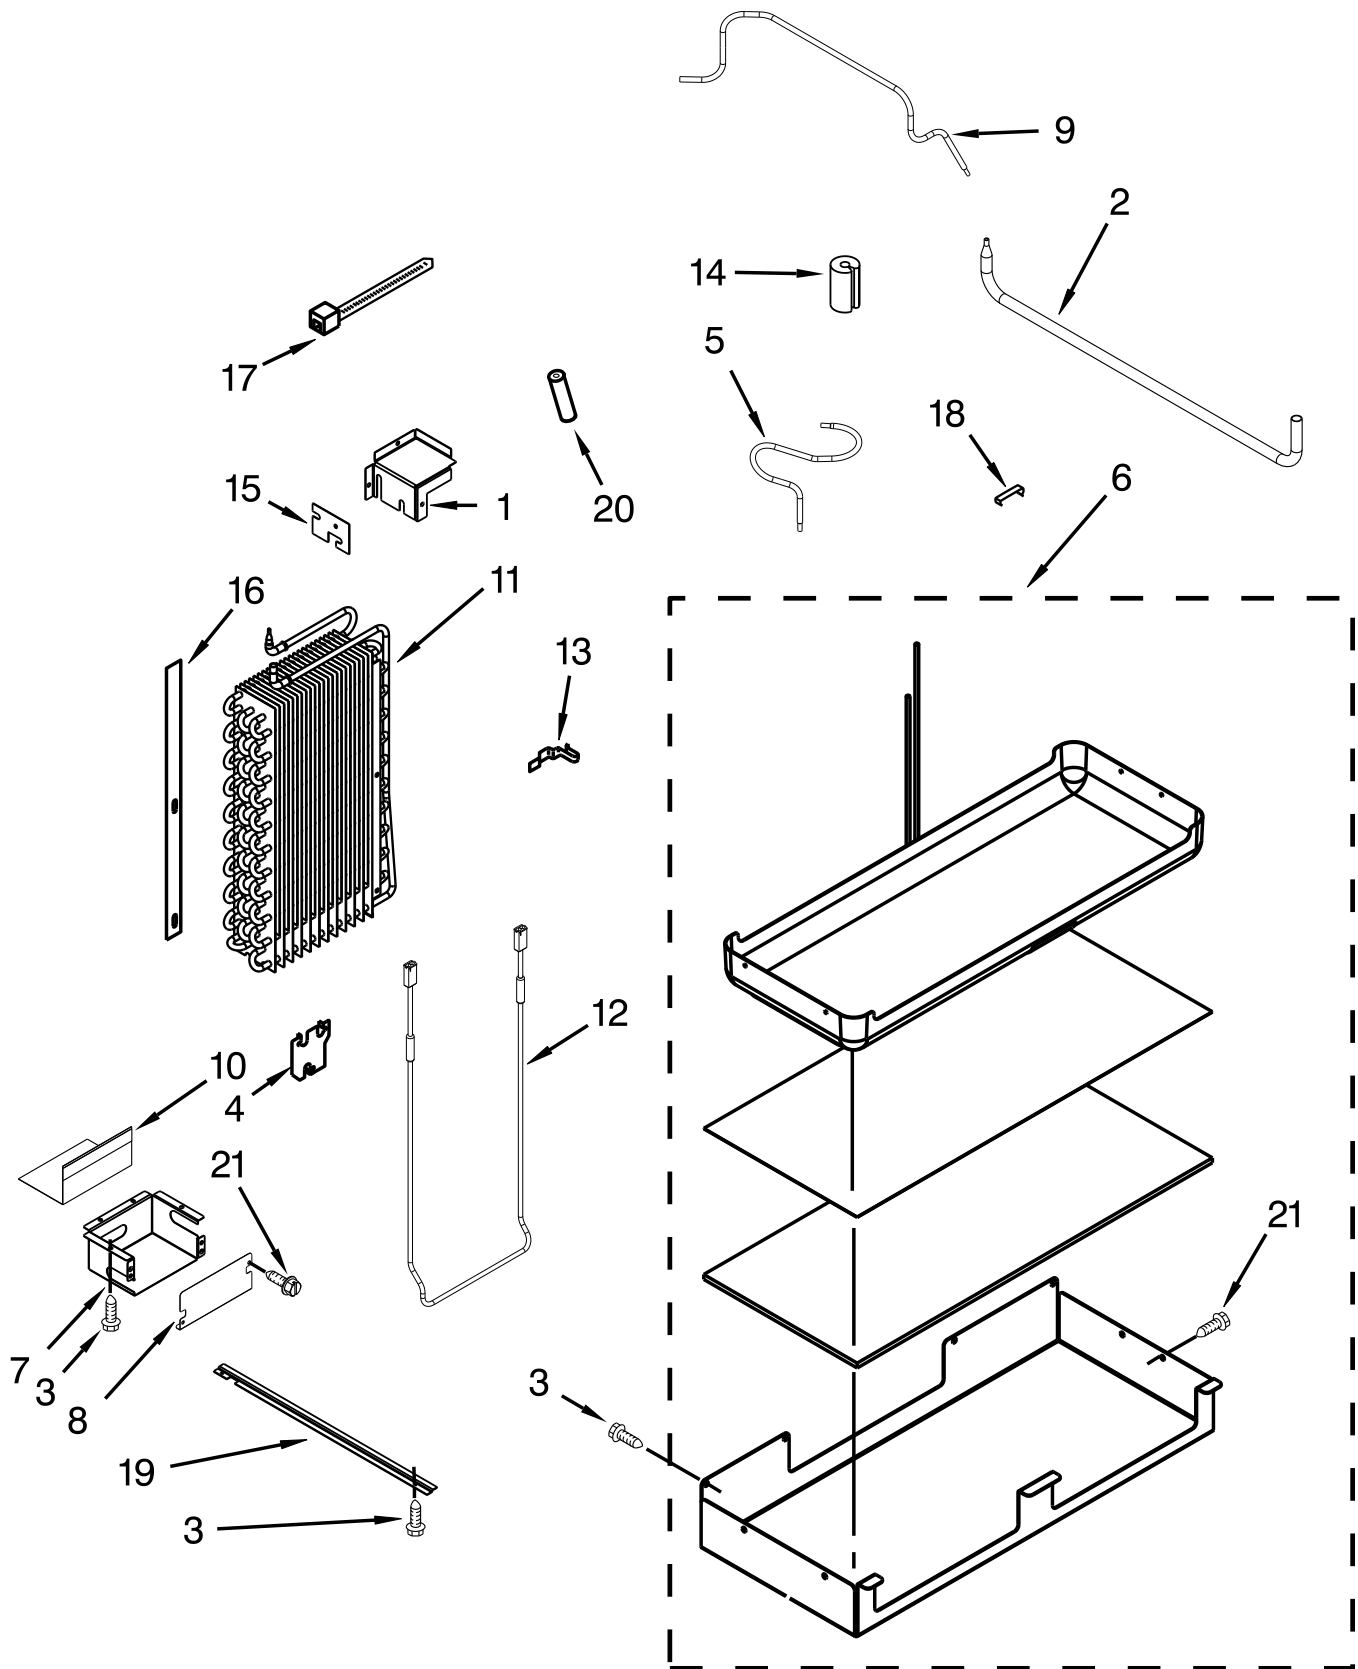


LOWER UNIT AND TUBE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10160981	Assembly, Air Return Bracket
2	W10388653	Tube, Transition (Drier/Restrictor)
3	486194	Screw
4	W10157752	Bracket, Heater
5	W10648568	Tube, Oil Trap Suction
6	W10281063	Assembly, Drain Pan
7	W10309012	Cover, Wiring

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10321048	Cover, Wire Box
9	W10499596	Tube, Discharge
10	W10321050	Shelf, Wiring Cover
11	W10427992	Evaporator
12	W10140161	Heater, Defrost
13	1113048	Clamp, Heater
14	W10413009	Grommet, Air Return
15	W10139908	Cover, Evaporator Seal

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
16	W10432308	Gasket, Evaporator
17	2155774	Tie, Wire
18	W10169509	Clip, Heat Exchanger
19	2320554	Support, Drain Pan
20	2215648	Dampener
21	304392	Screw

ICEMAKER PARTS

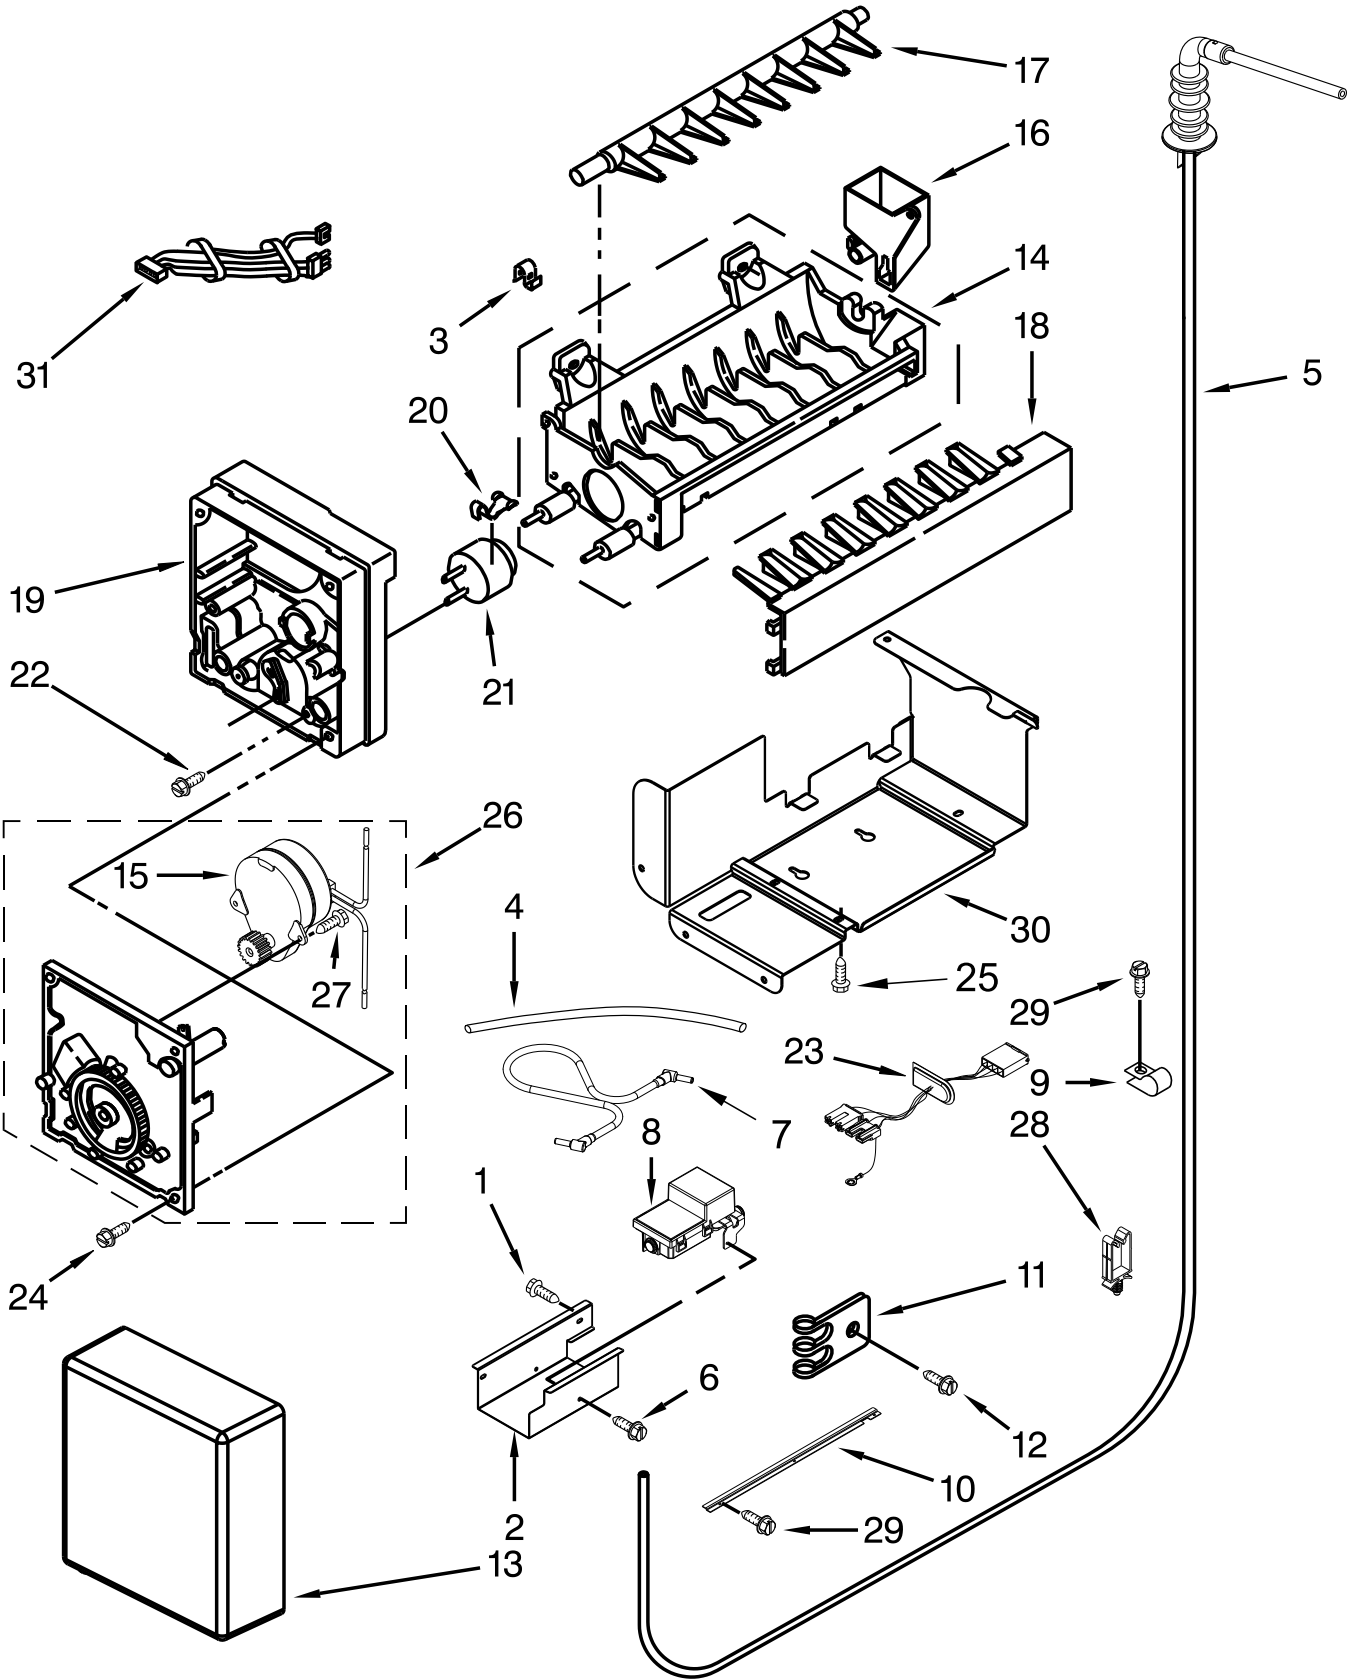

ICEMAKER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	304392	Screw	14	628228	Assembly, Mold and Heater (Also Order 542638)	26	W10223929	Assembly, Module and Motor
2	2320601	Shield, Water Valve				27	489136	Screw
3	628379	Clip, Thermal Fuse	15		Motor (Not Serviced, Order Item 26)	28	W10129069	Clip, Wire
4	W10296807	Tube, Filter Inlet	16	W10377998	Cup, Fill	29	486194	Screw
5	W10357286	Fitting, Water	17	627843	Ejector	30	2252228	Bracket, Ice maker Mounting
6	487294	Screw	18	W10272161	Stripper, Ice	31	W10508659	Assembly, Ice maker Wire
7	W10683737	Tube, Filter Outlet	19	2194712	Support, Housing	100	W10774430	Complete Ice maker Assembly
8	W10820321	Valve, Inlet	20	2315522	Retainer, Thermostat			Following Parts Not Illustrated
9	2221070	Clamp, Tube	21	W10290336	Thermostat		W10355016	Cleaner, Stainless Steel
10	2320559	Support, Valve	22	W10001280	Screw		W10355049	Wipes, Stainless Steel Cleaning
11	2208136	Clip, Water Tube	23	W10279391	Assembly, Smart Valve Wire		W10355010	Cleaner, Kitchen & Appliance
12	W10141645	Screw	24	489276	Screw			
13	W10289690	Cover, Ice maker	25	W10001250	Screw			