front

back

OUTSIDE TRIM INSTALLATION:
1. Determine the handing of the door and select the matching template below.
2. Ø1-7/8" hole on outside of door will only need to be drilled for the classroom function.

EDGE OF DOOR
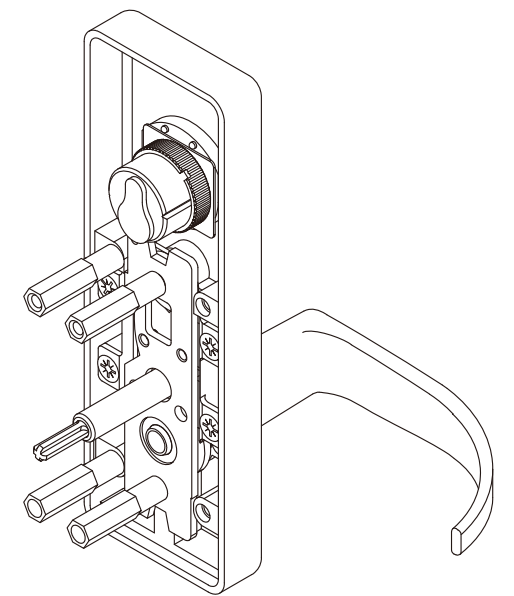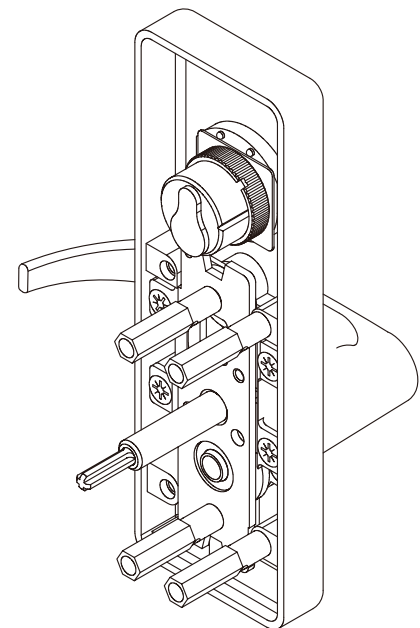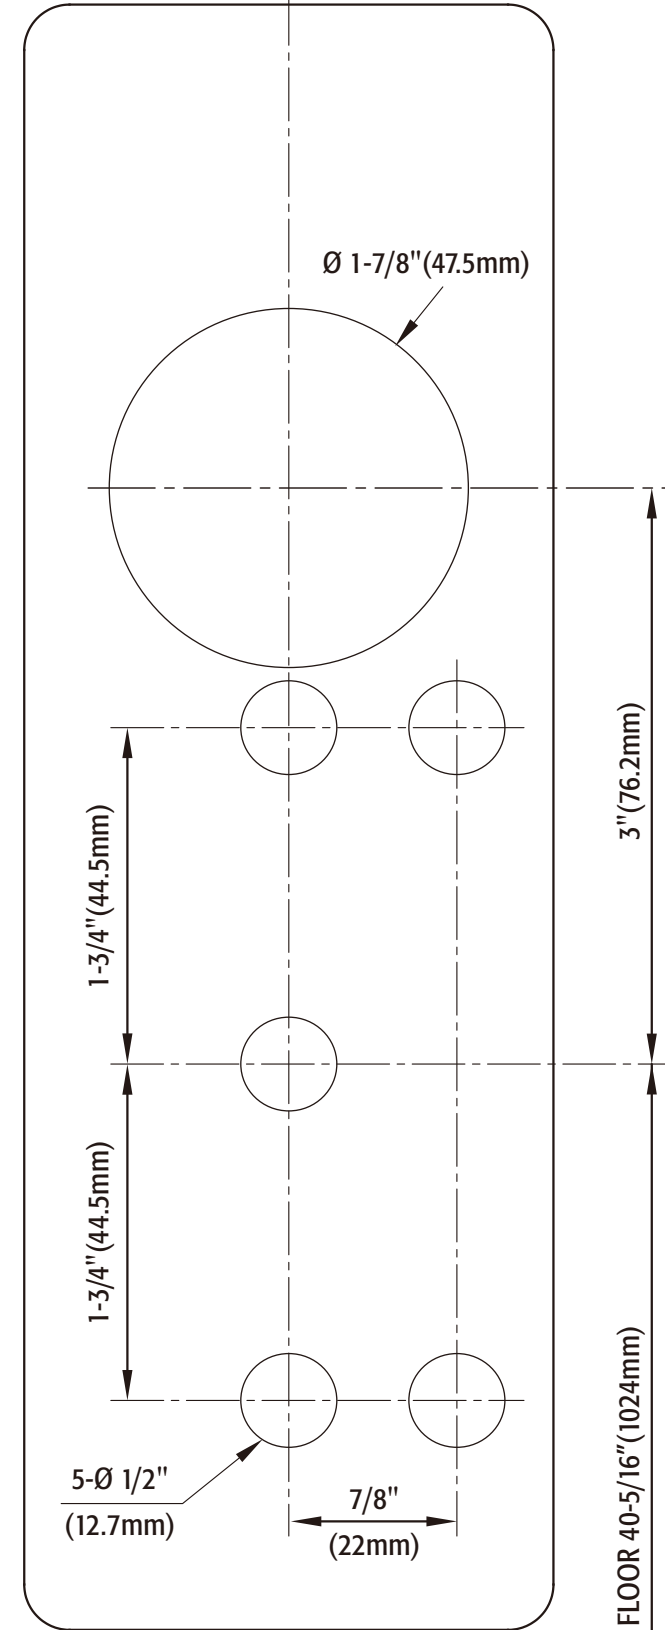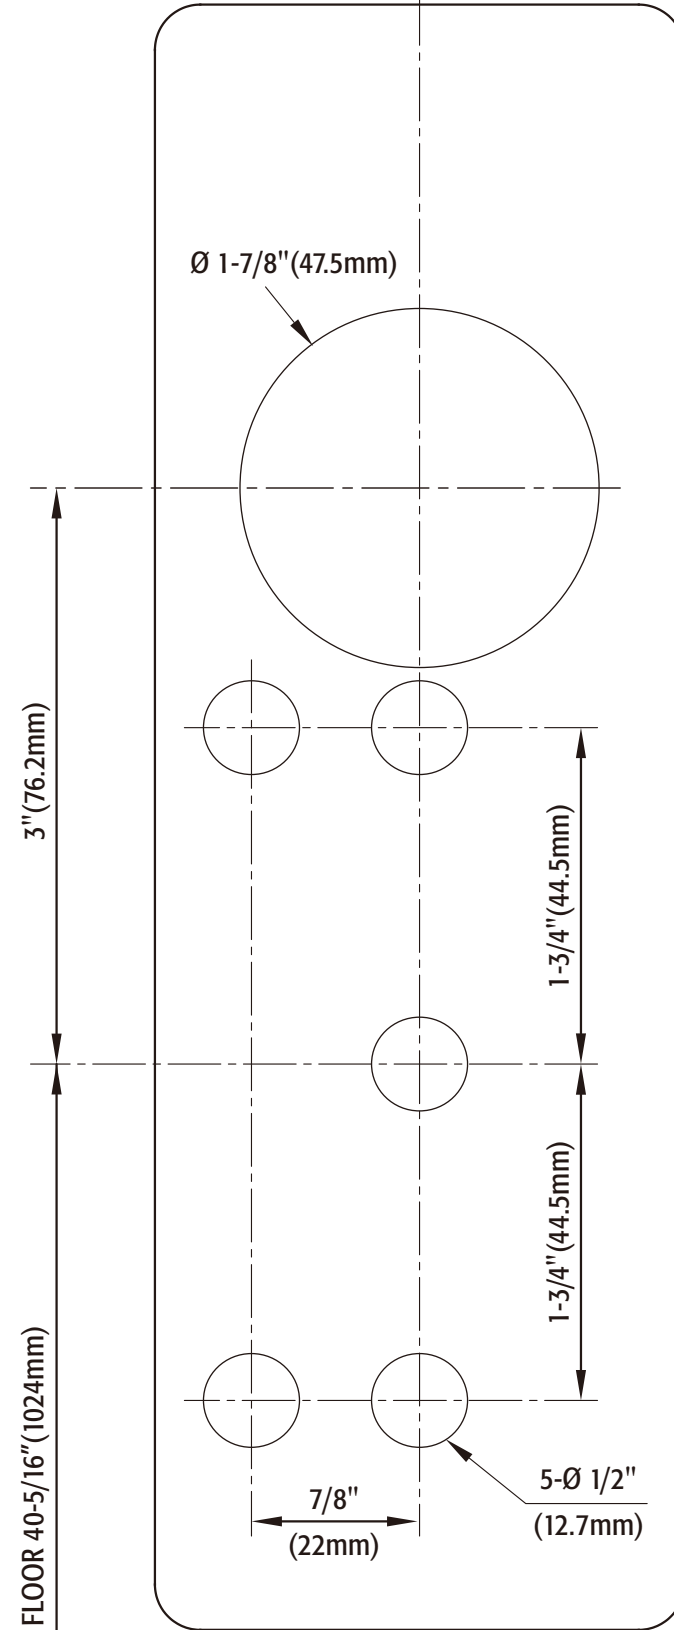
RHR

LHR

EDGE OF DOOR

INSIDE OUTSIDE

1-3/4" ~ 2-1/4"

6/8"

1-3/4" ~ 2-1/4"

INSIDE OUTSIDE

6/8"

Per exit device instructions

Per exit device instructions

Ø 1-7/8"(47.5mm)

Ø 1-7/8"(47.5mm)

3"(76.2mm)

1-3/4"(44.5mm)

1-3/4"(44.5mm)

1-3/4"(44.5mm)
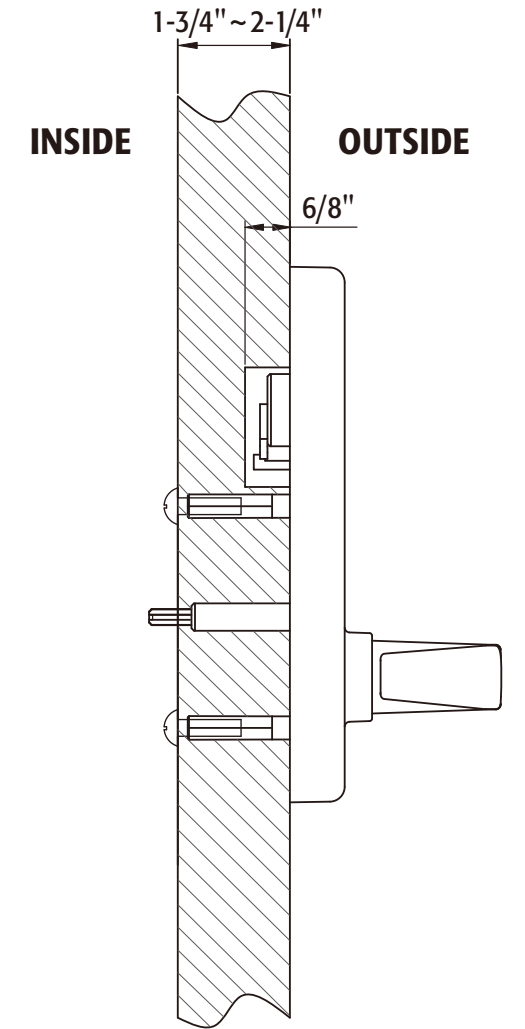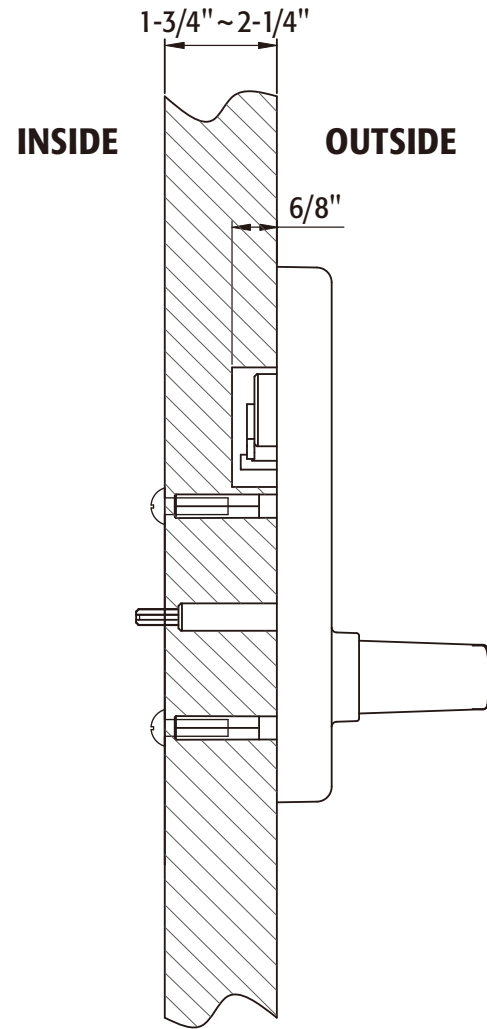
1-3/4"(44.5mm)

3"(76.2mm)

TO FINISHED FLOOR 40-5/16"(1024mm)

TO FINISHED FLOOR 40-5/16"(1024mm)

7/8"
(22mm)

5-Ø 1/2"
(12.7mm)

5-Ø 1/2"
(12.7mm)

7/8"
(22mm)