WS BATH COLLECTIONS
1051 Lea Drive - Collegeville, PA 19426
Tel. 215.513.9400 - Fax 610 831 0215
www.wsbathcollections.com - info@wsbathcollections.com

Ice
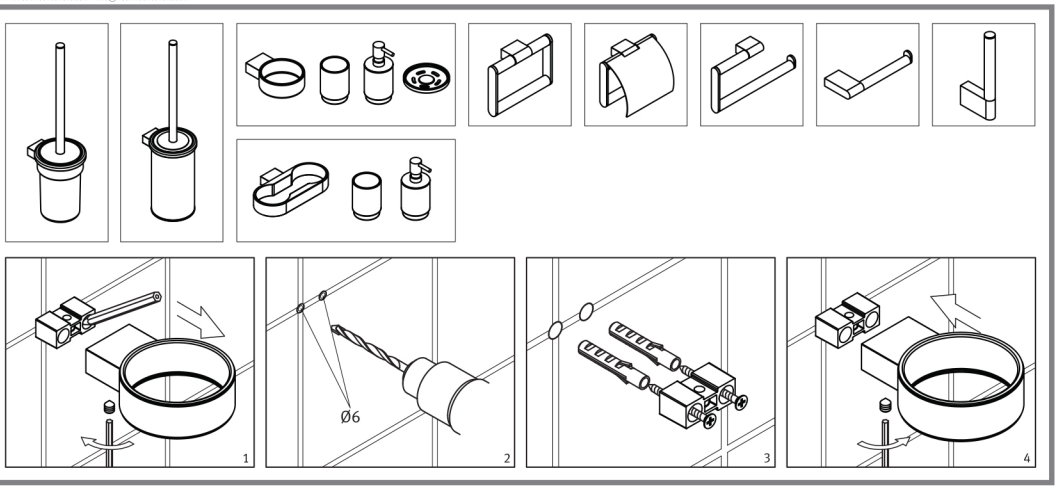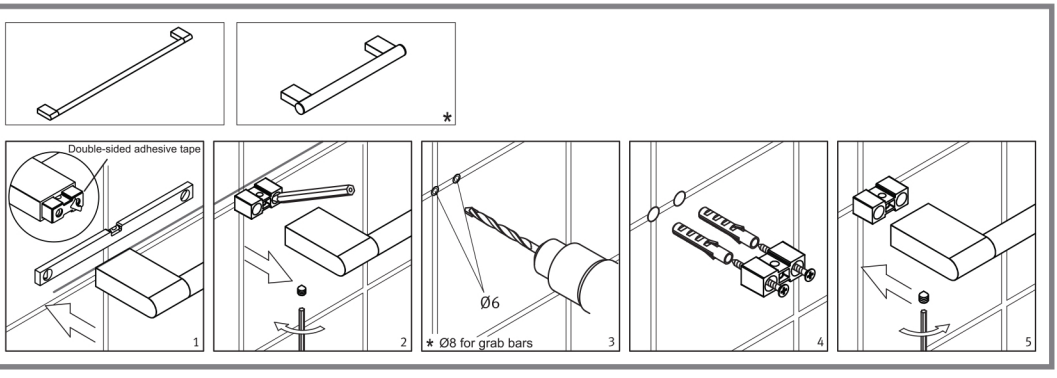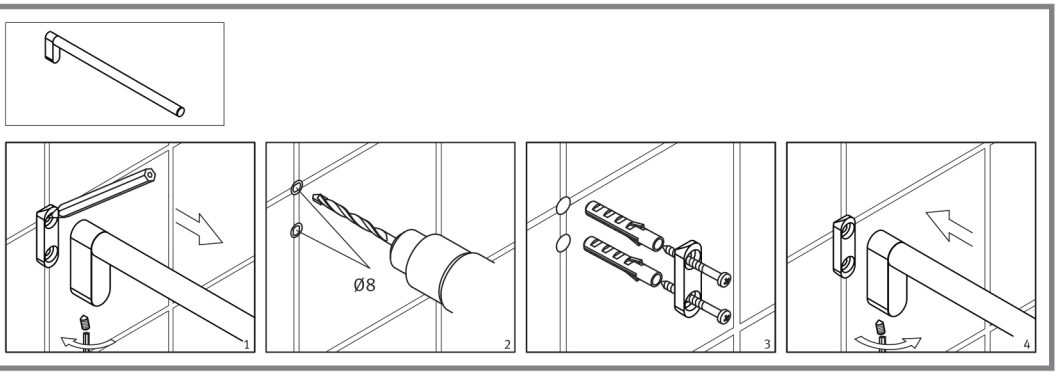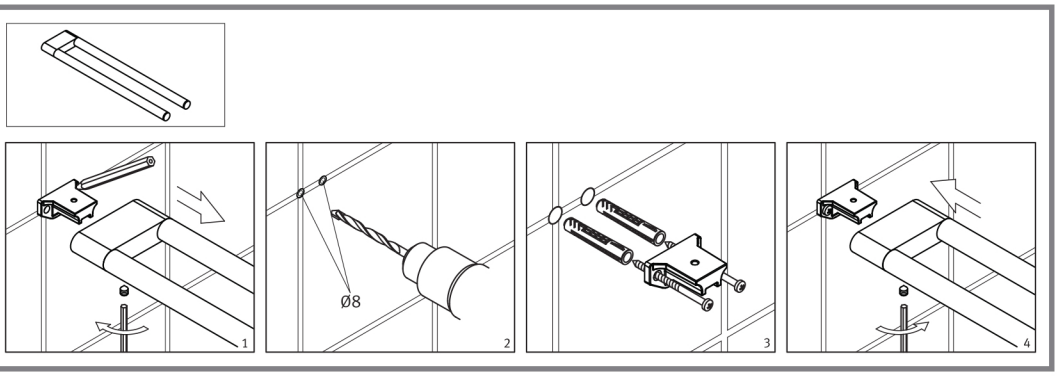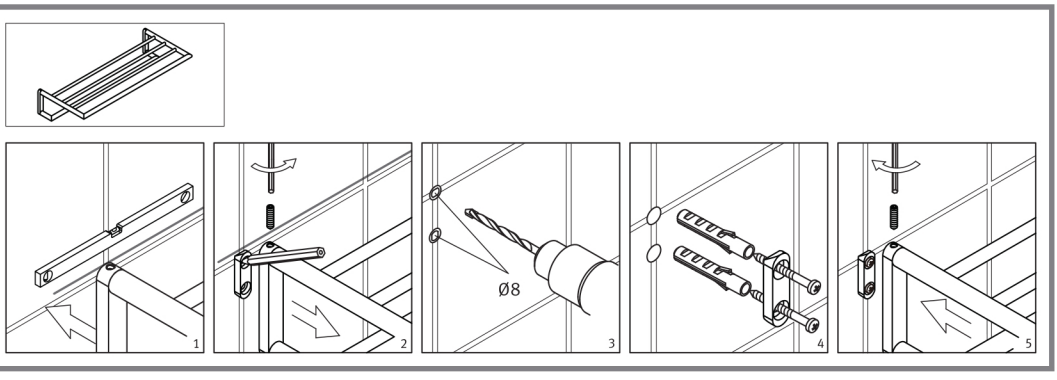
Montageanleitung
Mounting Instruction