

WARNING

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL. ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

CARE AND MAINTENANCE







Unplug lamps before using any cleaning solutions. Dust shades with a feather duster or with an appropriate vacuum-brush attachment. Wipe with a soft, dry cloth and clean lamp bases with the methods appropriate to the material. Avoid the use of chemicals and household cleaners as they may damage the finish.

NOTICE& IMPORTANT SAFETY INSTRUCTIONS

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * To reduce the risk of fire, electrical shock or injury to persons or property, please follow the guideline below for safe use and installation
- *The external flexible cable or cord of this lamp cannot be replaced
If the cord is damaged, the lamp shall be destroyed

**This portable lamp has two polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. this plug will fit in a polarized outlet only one way. if the plug does not fit fully in the outlet,reverse the plug, if it still does not fit, contact a qualified electrician.Never use with an extension cord unless the plug can be fully inserted. do not attempt to disregard this safety feature.

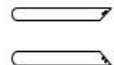Part List and Hardware List

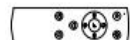PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	main body stents		1X	D	fallen wrench		1X
B	counter weight		1X	E	transformer		1X
C	screw		2X	F	the remote control		1X

JONATHAN Y

Model#: JYL7126

Product Dimensions:11.75"Lx11.75"Wx60.5"H




PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 5 minutes.

If there are any questions relating to defects, missing parts, assembly issues, replacements, or device connectivity issues, please send a detailed email to cs@jonathany.com

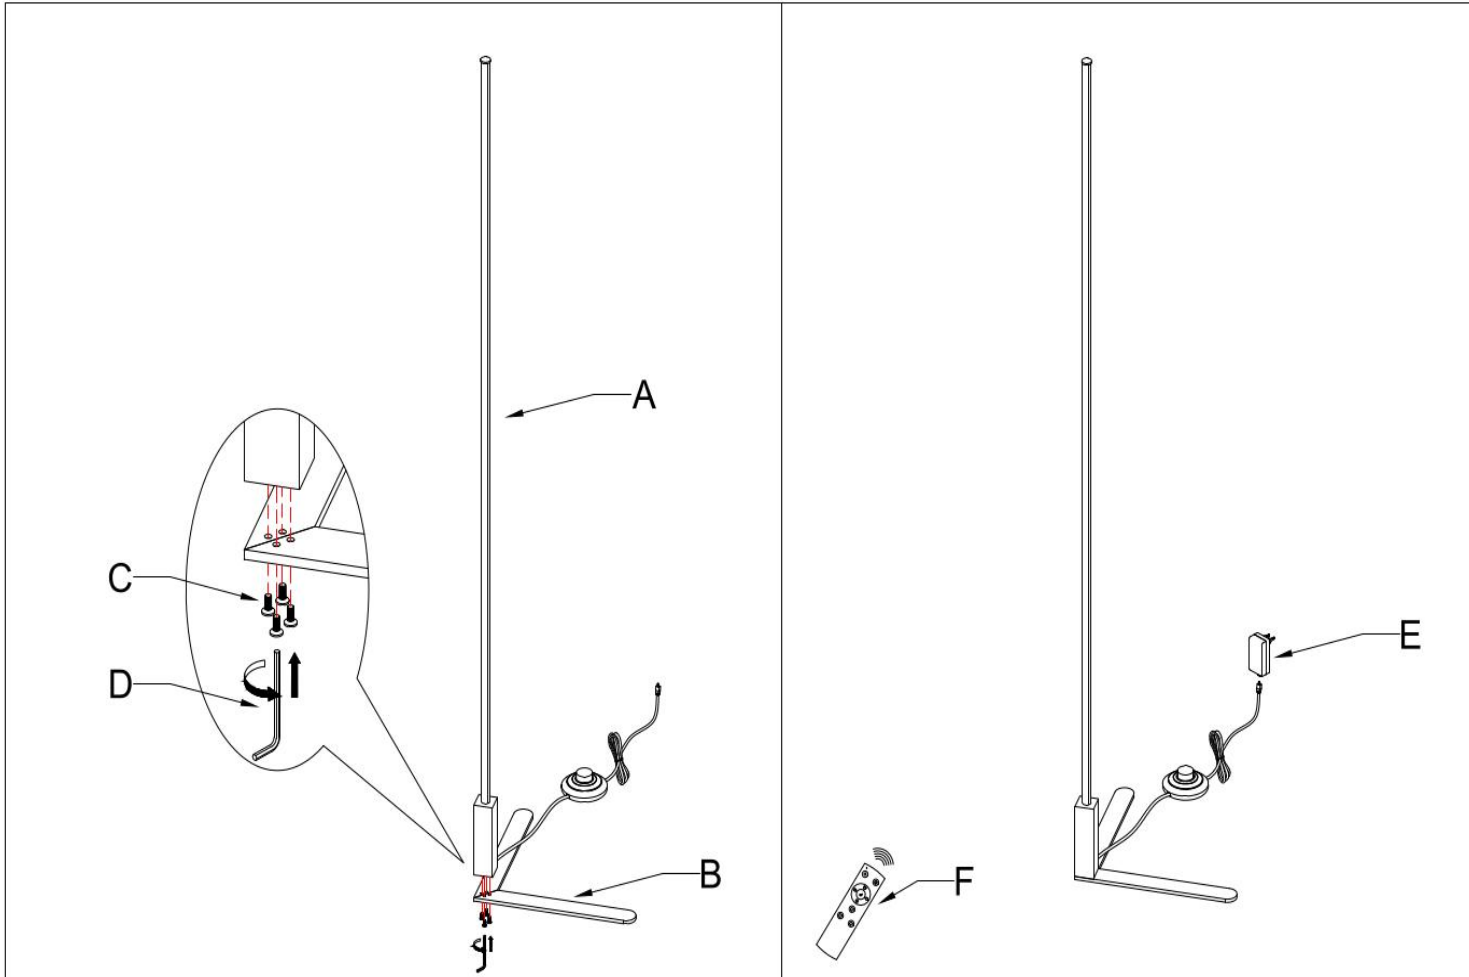


- 1.Locking main body stents (A) to counter weight (B) with screw (C) and allen wrench(D).
- 2.Insert transformer (E) correctly.
- 3.Adjust the lights with the remote control.

Put the light on a level surface to check if everything is stable.

Use of remote control

Use of intelligent remote control

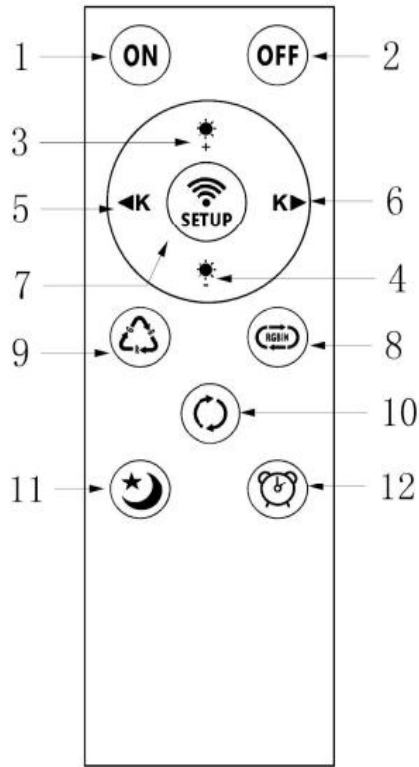

remote control<ONLY>

No	Key	Use of Remote Control	Guide of Remote Control
1	ON	LIGHT ON	Short press for turning on
			Long press within 10S after device connected to power till the light is off and on again for matching code.
2	OFF	LIGHT OFF	Short press for turning off
			Long press within 10S after device connected to power till the light is off and on again for canceling code.
3	Brightness Increase (+)	Brightness Increase	Short press for brightness increase
			Long press for continuous slow brightness increase
4	Brightness Decrease (-)	Brightness Decrease	Short press for brightness decrease
			Long press for continuous slow brightness decrease
5	Color Temperature Decrease (◀K)	Color Temperature Decrease	Short press for color temperature decrease
			Long press for continuous slow color temperature decrease
6	Color Temperature Increase (K▶)	Color Temperature Increase	Short press for color temperature increase
			Long press for continuous slow color temperature increase
7	SETUP (Wi-Fi)	Network Matching or Canceling	Long press "SETUP" 5S till device blinks once before blinking rapidly to match or cancel network
8	RGB-DIN	RGB Dynamic Switching	Short press to choose the dynamic RGB
9	RGB	RGB Static Switching	Short press to choose the static RGB
10	Reading/Party/Sleep Mode	Reading/Party/Sleep Mode Switching	Short press to change the mode of Reading/Party/Sleep
11	Night Light (moon and star)	Night Light	Short press to choose the night light
12	LIGHT OFF Delay (alarm clock)	LIGHT OFF Delay	Short press to turn off the device with 60S delay

Pairing JONATHAN Y Mobile APP

Intelligent Function

In addition to the included control , you can operate your device with the JONATHAN Y app.

Upgradeable with Smart Features

Scan the code below with your phone to find out how you can enable smart features through the JONATHAN Y app and integrate with your smart home ecosystem.

Downloading JONATHAN Y Mobile APP

1. To use the JONATHAN Y app , download it from the App Store or Google Play.
2. Open the app to create your account.
3. To set up a Wi-Fi connection you will need the SSID and Wi-Fi password for the network you wish to connect to.
4. You can name your device if you choose.



Pairing JONATHAN Y Mobile APP

Scan the QR code to download the "JONATHAN Y " APP

- a. Download and Open "JONATHAN Y" Mobile App.
- b. Press the + button in the top right corner of the mobile App.
- c. Under "Add Manually" select " Smart bulb"
- d. Type in your Wi-Fi name & password then proceed to click "Next".
- e. Press "SETUP" on the remote control for 5S. The device blinks once before blinking rapidly.
- f. Click "Confirm indicator rapidly blink"
- g. After the loading screen go back to homepage and you should be able to find your device there.

Withdrawing JONATHAN Y Mobile APP

Press "SETUP" on the remote control for 5S till device blinks once before blinking rapidly to cancel network, if you prefer not using the app or broadcasting Wi-Fi.

Q&A

Q : If you cannot pair the JONATHAN Y APP

A : 1 . Please check whether the WI-FI network is 2.4g.

2. Turn off the power and turn on the power again. Long press "SETUP" on the remote control for 5S till device blinks once before blinking rapidly.

3. Pairing JONATHAN Y Mobile APP again.

Q : If your remote cannot control the receiver.

A : 1. Please turn off the power.

2. Turn on the power again.

3. Long press "ON" on the remote control within 10S till the light is off and on again.