


The MINC5, 5-n-1 Incizo Profile, has the possibilities of a T-mold, stair nose-overlap, universal, end molding or reducer all in one. Or using an additional Base, offers a stair nose flush application. Base sold separately.



**Uncut Incizo MINC5 Profile**

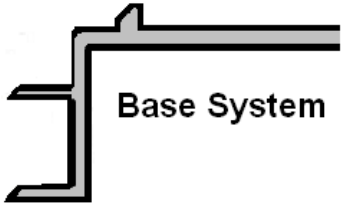

**Base System**

MINC5 - Comes with written installation instructions, 1 uncut profile 83.5" long, and Slitter for cutting.

When used with the MINC5, the base system will create a flush stair nose or overlapping stair nose— This kit comes with written instructions and an uncut aluminum rail base. Bases are coordinated to the thickness of the laminate. See retailer for proper base code number for correct thickness.

**MINC5 as a T-mold.**

Allow a gap measuring approximately 1 1/8" to 1 1/4" for installation.




**MINC5 as a T mold**

**MINC5 as a Carpet End, End Molding or Universal Edge.**

Allow a gap measuring approximately 1 5/16" to 1 7/16".

Important Reminder: When using with carpet, allow appropriate space for the thickness of the carpet pile height- this will vary per carpet style.

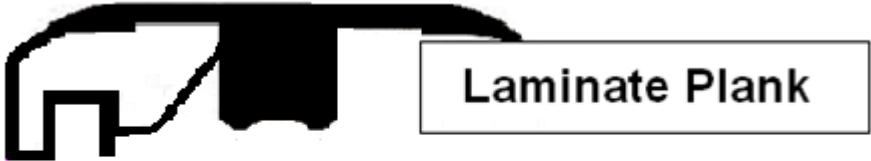

**MINC5 as a Carpet or End Molding aka Universal Edge**

## MINC5 as a Reducer.

Allow gap measuring approximately 1 5/8" to 1 3/4" for installation.



---


Incizo® profile enables you to create stairs that fit perfectly into your interior.

Various stair finishes are possible! Simple and fast, seamless and subtle; matching color to your floor with this discrete transition. This stair profile is available in a pattern and surface that perfectly matches your floor.


Check with your local dealer for your style and color and base selection of laminate as needed.

Our 5-n-1 trim will accommodate 2 shapes of stair cases and 8 methods of installation.

This is Shape C

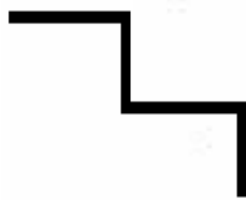

This is shape G

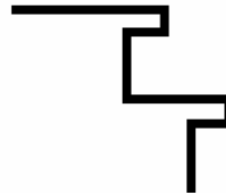


Just choose the shape of your stair case from the installation instructions, and then select the style you would prefer to use.


Described on the next two pages you will see examples of the stair profiles use starting with the Flush method.

Flush Method:

Shape C, the reducer side is removed from the MINC5 and installed, using 100% silicone in the method shown.

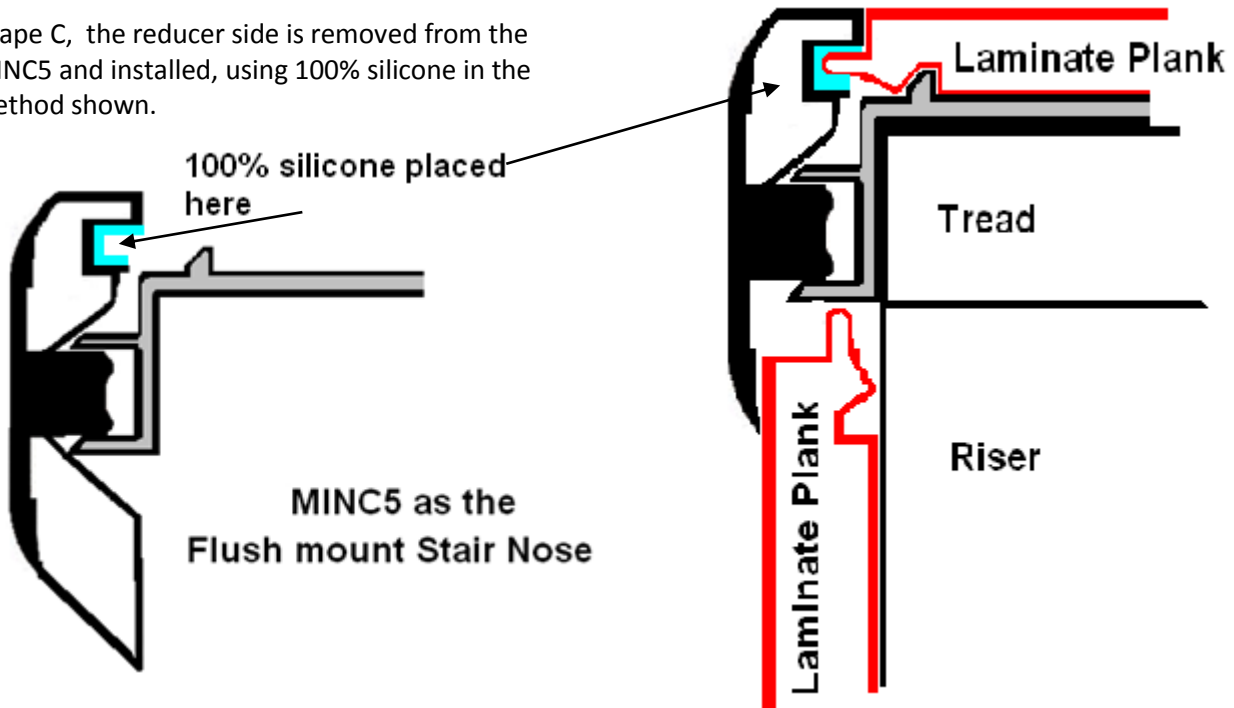


Shape G the MINC5 remains intact, nothing is removed, and installed using the gasket in the method shown. 100% Silicone will be used (not included)

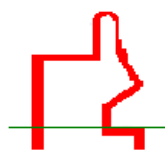

Tongue is cut off 1st




Tongue is cut off 1st

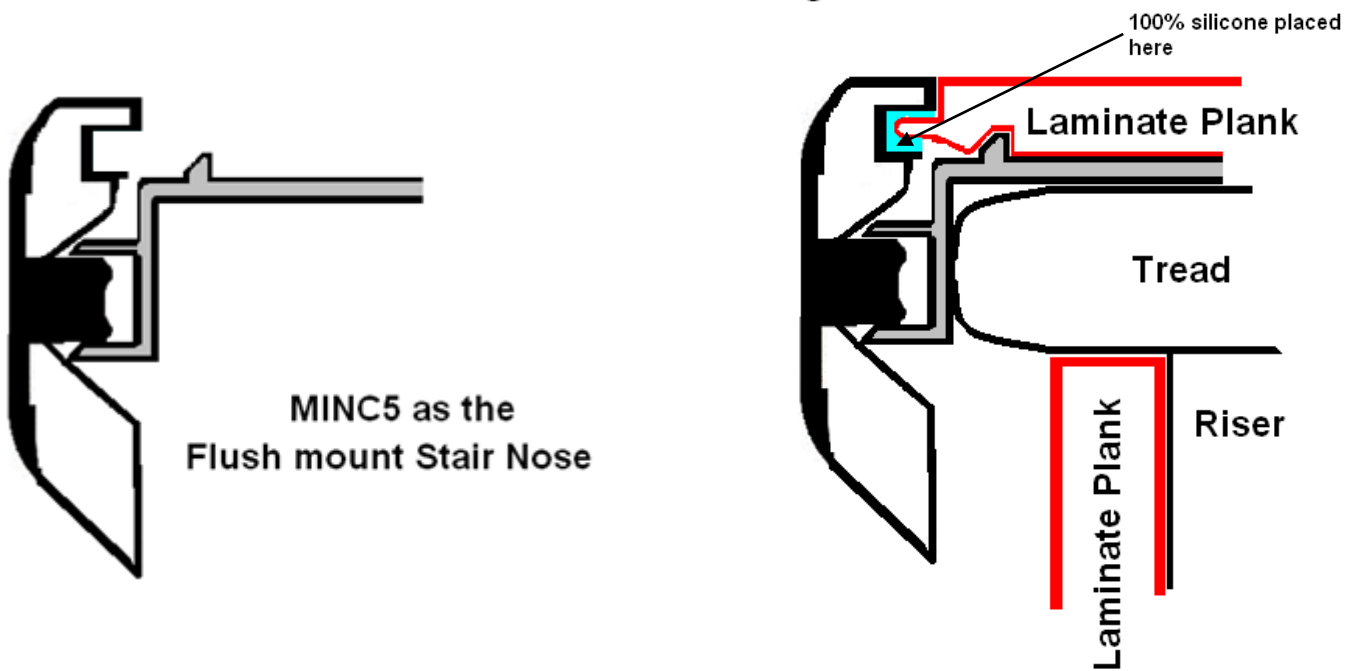


MINC5 can also make the overlapping stair nose when using base.

Overlapping Method:

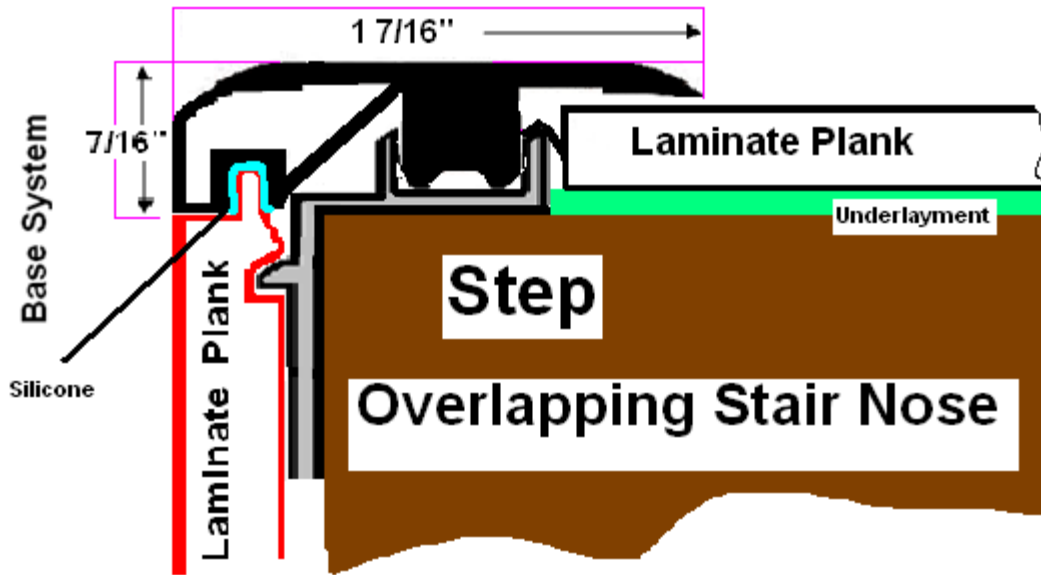


### Laminate Trim Size Chart:


MINC5

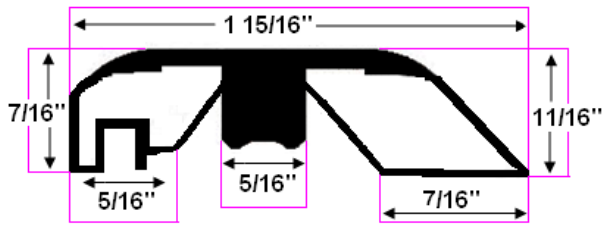


Uncut Incizo MINC5 Profile

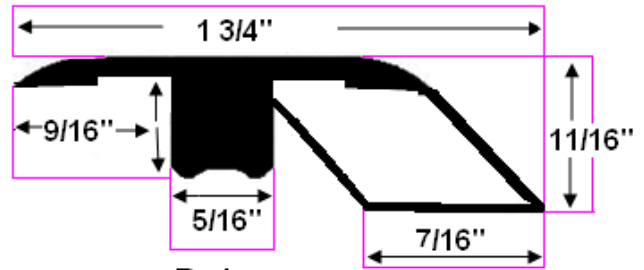


Reducer

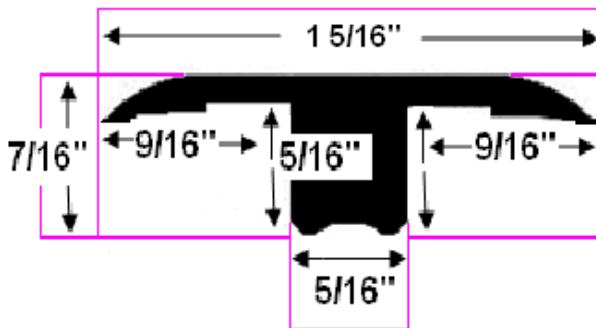

T-Mold

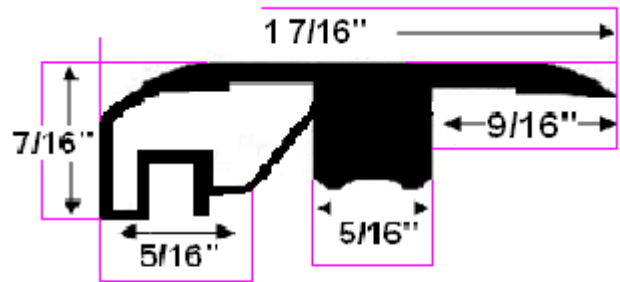


Carpet or End Molding  
aka Universal Edge

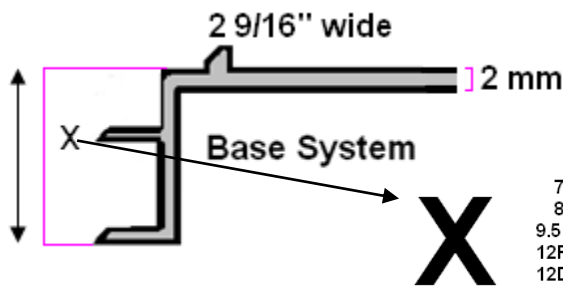


7mm	3/4"
8mm	3/4"
9.5 mm	11/16"
12Rmm	7/16" Used w/Reclame Styles
12Dmm	unknown Used w/Dominion Styles



Quarter Round

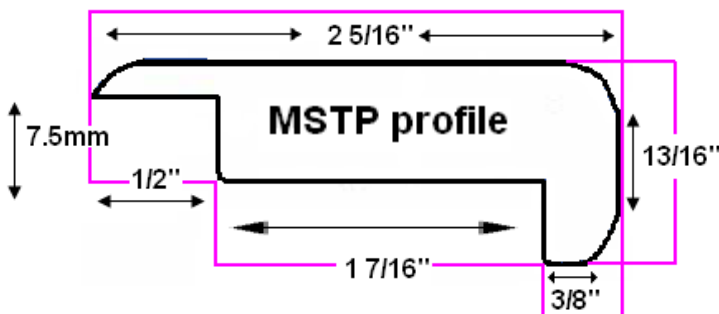

MSTP profile

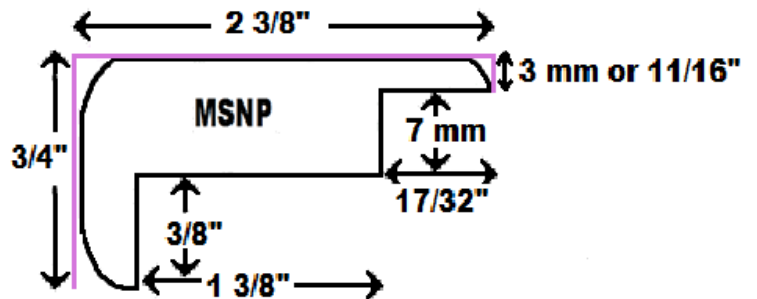

MSNP

For use on stairs, (flush or overlapping) you will need measurement for the base system with an uncut Incizo or base system and the Reducer measurements. **BASE SOLD SEPARATELY** Availability based on product. Not all Products are available for use with a Base System. For those the MSTP is still offered.

