CERTIFICATION: CUL DAMP NO: 20665



INSTALLATION INSTRUCTIONS

IMPORTANT

Before assembling your access lighting fixture, please make sure that you carefully read through these instruction sheets. Consider having your fixture installed by a qualified licensed electrician.


NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care, are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.


GENERAL INFORMATION

All electrical connections must be in accordance with all ordinances,
Local and National Electrical Codes. These fixtures are intended for
mounting to a standard 4" x 2 1/2"metal octagon outlet box. The box
must be directly supported by the building structure and U.L. Recognized.

STEP BY STEP INSTRUCTIONS

Before starting your installation disconnect the Power by turning off the Circuit Breaker or by removing the fuse at the fuse box. Just turning the light off at the light switch is not sufficient to prevent electrical shock.

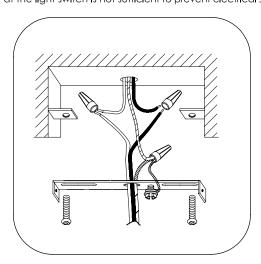

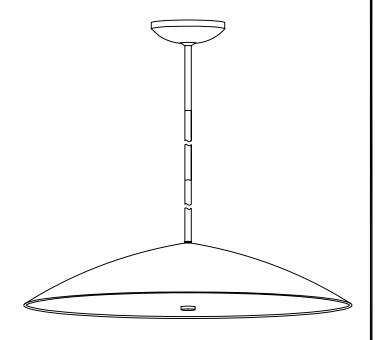

COLLECTION	APPLICATION	MODEL NO.
STEALTH	Pendant fixture	20665

WHAT WE PROVIDE

- Crossbar
- Mounting Hardware
- Metal Shade
- 1 x Glass Cover
- 5 x13W CFL GU24 Bulbs (Model Dependant)

WHAT YOU NEED


- Screwdriver
- Wire Cutters
- Wiring Supplies as Specified by Electrical Code

MOUNT CROSSBAR

If there is an existing fixture, remove it. Expose the supply wires from the j-box. Mount the supplied crossbar to the J-Box.

1

CERTIFICATION: CUL DAMP NO: 20665

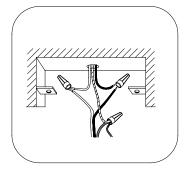


2

CONNECT THE WIRES

Gently pull the supply wires. Connect the black fixture wire to the black supply wire and the white fixture wire to the white supply wire.

Connect the fixture ground wire to the ground wire from the J-Box.


Secure all connections with the supplied wire connectors and U.L listed electrical tape (not supplied). Tuck all wires carefully into the J-Box.

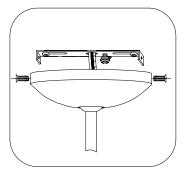

3

INSTALL THE CANOPY

Position the Canopy over the crossbar. Align the holes in the side of the Canopy with the holes in the crossbar. Secure with supplied screws.

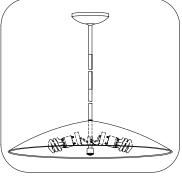


4

INSERT THE BULBS

MAXIMUM WATTAGE 13W.

DO NOT EXCEED THE RECOMMENDED WATTAGE AS STATED ON THE WARNING LABEL AND INSTRUCTION SHEETS.

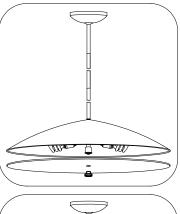

ASSEMBLE THE GLASS COVER

Align the center hole of the glass cover with the nipple on the fixture, and then secure the glass cover onto the fixture with the supplied T shaped finial.



6

RESTORE THE ELECTRICITY AND CHECK THE OPERATION OF YOUR NEW ACCESS FIXTURE

