

**WARNING**

**DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE
READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.**

**CAUTION**

- TO AVOID THE RISK OF FIRE OR SHOCK, FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL/BUILDING CODES.
- INSTALLATION AND MAINTENANCE OF THIS UNIT REQUIRES AN ELECTRICIAN OR CERTIFIED FACTORY TRAINED TECHNICIAN.
- If an existing fixture is being replaced, remove it and note to which of the wires in the outlet box the fixture was attached. DO NOT SEPARATE ANY OTHER WIRES THAT MAY BE IN THE BOX. DO NOT DAMAGE THE INSULATION OF OLDER WIRING. In regular circumstances the BLACK wire will be the "Hot" lead and the WHITE wire will be the "Neutral" or "Common" lead. A GREEN or BARE COPPER wire is the "Ground". In older buildings it is always good practice to reconfirm the polarity of the wiring.

NOTICE

- The important safeguards and instructions outlined on this sheet cannot cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care factors that cannot be built into any product. Caution and care must be supplied by the person(s) installing, operating and caring of this lighting fixture.
- This fixture is design to be mounted on a correctly installed standard round or octagon box or a through wiring box with a plaster frame. The box must be securely mounted to the structure of the building. The crossbar and hardware supplied should be used. Directly mounting the fixture to the outlet box may make it impossible to correctly align the fixture.

FIXTURE PREPARATION


1. Remove the fixture, glass/metal parts and parts bag(s) from the carton.

NOTICE:

Before discarding the carton, double check to make certain that all parts are found.

FIXTURE INSTALLATION

1. Place the led driver inside the outlet box. Connect by inserting the black wire from the junction box into the led driver where there is opening below the primary sign PRI (~) (~). Tighten it by turning the screw on top by using and appropriate tools. (See Fig. 1)
2. Insert the white wire from the junction box into the led driver where there is a opening below the primary sign PRI (~) (~). Tighten it by using an appropriate tool. (See Fig. 1)

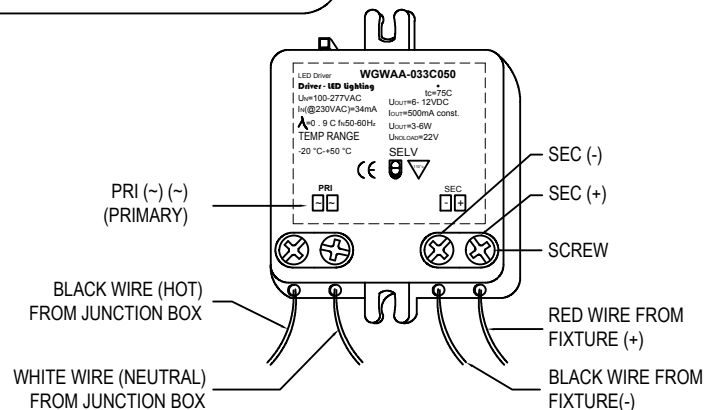

NOTE: ABOVE TWO WIRES CAN BE INTERCHANGE

SEE ALSO DRIVER COLOR CODING
LED LAMP TO LED DRIVER
WIRE CONNECTION DETAILS

FIGURE-1

WARNING

Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

3. Connect by inserting the red wire (+) coming from the fixture into the led driver where there is a opening below the secondary sign SEC (+). Then tighten it same of as step 1.

WARNING

Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!

4. Connect by inserting the black wire (-) coming from the fixture into the led driver where there is a opening below the secondary sign SEC (-). Then tighten it same as step 3.
5. Using the two (2) flat screws, fasten the fixture to the outlet box through the side holes.
6. Attach the center stem and place the glass column together with the stainless trim, place the end cap and screw the finial to hold the glass column in place (See figure-2).
7. Place the fabric shade, Use the flat screws to hold the shade in place (See figure-2).

NOTICE:

Must use a incandescent dimmer with LED's on this fixture.

***Lutron Maestro dimmer not compatible.**

8. Restore power to circuit at breaker or fuse box.


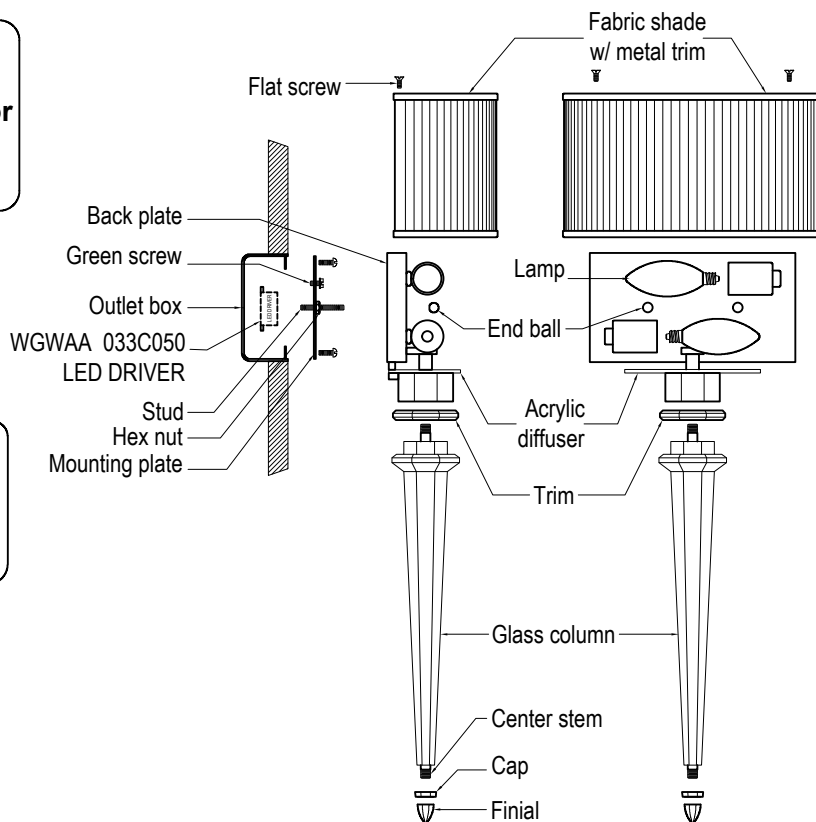


FIGURE-2

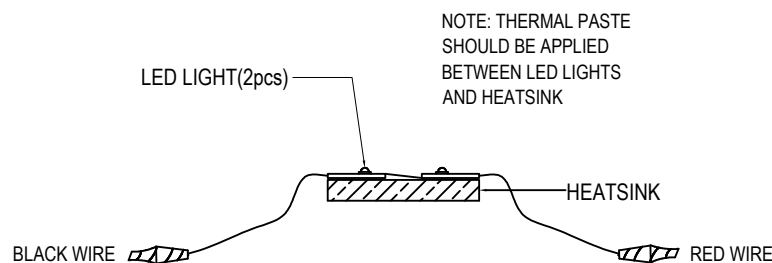

Replacement LED Instruction