Q UOIZEL 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-HC2006IB For Style HC2006IB

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (1) 12V T5 Wedge Base Halogen Bulb, 18W Maximum (Supplied) **Estimated Assembly Time:** 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

Part	Description	Quantity	
Α	Fixture Body	1 pc.	
В	T5 Wedge Bulb	1 pc.	
С	Wire Connector	2 pcs.	
D	Silicone Caulk	1 pc.	
Е	Tube	1 pc.	
F	Tube with Connector	1 pc.	
G	Ground Spike	1 pc.	

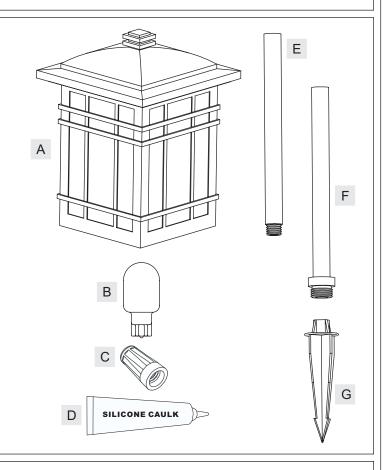

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700


or visit us on-line at www.quoizel.com

© 2013 Quoizel Inc.



FINISH: IMPERIAL BRONZE



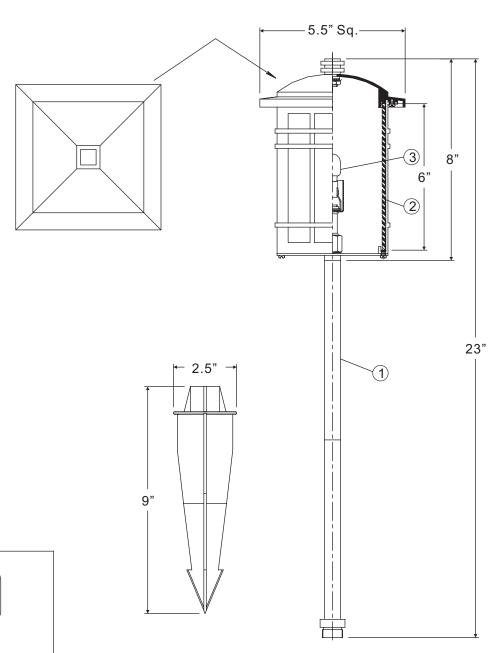

(1)18W 12V T5 Wedge Base Halogen Bulb (Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

	NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.	
	1	12006IBHC	BASE IMPERIAL BRONZE HC2006IB	1	
	2	G8209PA	PANEL OPAQUE LINEN 6"H X 4"W	4	
	3	1832SC	BULB 12V 18W ARGON T5 CLEAR	1	
1					


2of6

Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-HC2006IB For Style HC2006IB


STEP 1 – Assemble Ground Spike, Tube withe Connecter, Tube and Fixture Body together

- A. To assemble fixture, thread Tube (E) into the Fixture Body (A), hand tighten until snug.
- B. Thread the Tube with Connecter (F) into the Tube (E), hand tighten until snug.
- C. Thread the bottom of Tube with Connecter (F) into Ground Spike (G), hand tighten until snug.

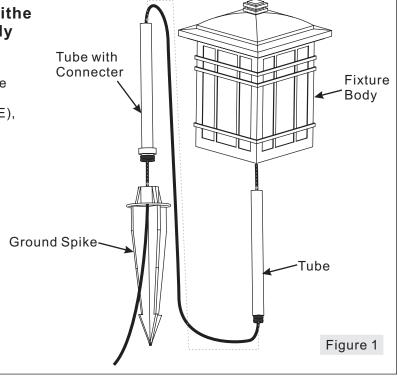

STEP 2 - Remove Fixture Hood from Shade Cage

- A. Remove the Fixture Hood from the Shade Cage by unscrewing the Lock Screws.
- B. Remove the package papers inside of the Shade Cage.

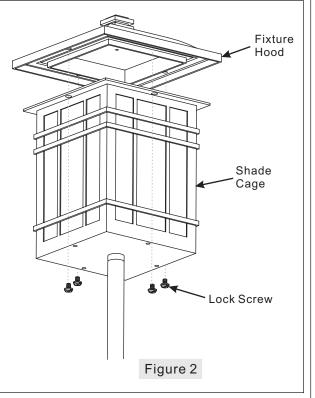

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com


© 2013 Quoizel Inc.

Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-HC2006IB For Style HC2006IB


STEP 3 - Install Bulb

- A. This fixture uses 12V T5 Wedge Bulb (B). Maximum 18 watts.
- B. Insert bulb and push snugly into place.

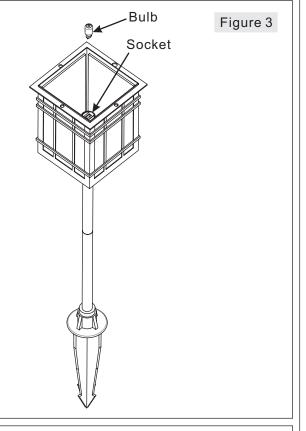

STEP 4 - Install Fixture Hood to fixture

A. Place Fixture Hood back onto the Shade Cage, secure by threading the Lock Screws into the Lock Hole on the bottom of Fixture Hood. Hand tighten until snug.

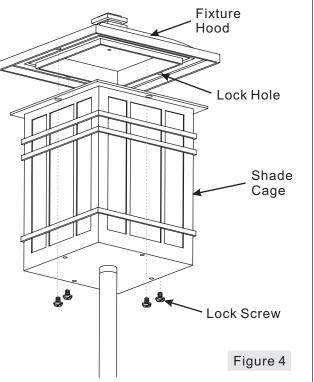

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com


© 2013 Quoizel Inc.


Q U O Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-HC2006IB For Style HC2006IB

STEP 5 - Make Wire Connections

- A. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- B. Connect White Supply Wire from the 12V transformer (not supplied) to ribbed side wire from fixture.
- C. Connect Black (or Red) Supply Wire from the 12V transformer (not supplied) to smooth side wire from fixture.
- D. Twist connectors until wires are tightly joined together.
- E. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Tube.

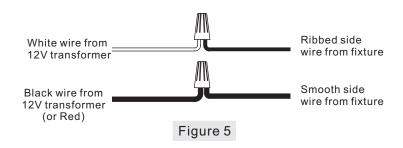


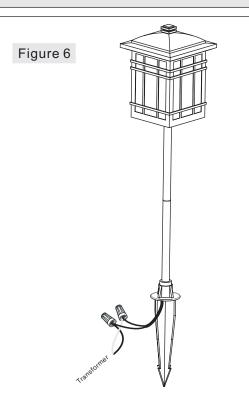

STEP 6 - Apply Silicone Sealer to tube

- A. Using Silicone Caulk (D) provided, inside each connector (C).
- B. Place Ground Spike (G) in predetermined location.

Your fixture is now assembled and ready to use. Enjoy!

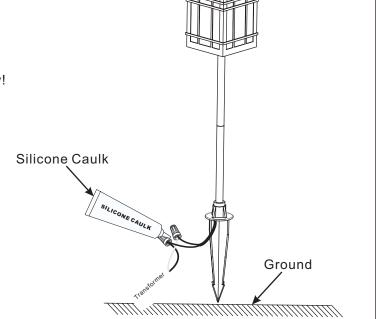

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

© 2013 Quoizel Inc.

March 2013

Figure 7



Assembly Instruction Sheet #IS-HC2006IB For Style HC2006IB

CAUTION FOR BULB REPLACING

- A. When replace bulb, turn off power and allow lamp to cool. For safety purpose, wear gloves and eye protection.
- B. If bulb is scratched or cracked, DO NOT use the lamp to avoid breakage during use or installation.
- C. Use only in fixtures rated for lamps wattage and voltage.
- D. Lamp operate under high pressure generating intense heat. Prevent contact with liquid and combustible materials.

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2013 Quoizel Inc.