



KESWICK FREESTANDING FAUCET INSTALLATION

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the plumbing, floor, walls, tub, or for personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the faucet for shipping damage. If any damage is found, contact our Customer Relations team at 1-855-715-1800.

GETTING STARTED

- Ensure that you have gathered all the required materials that are needed for the installation.
- For these instructions, it is assumed that the floor has been finished and the water supply has been prepared.

TOOLS AND MATERIALS:



Plumbers
Tape*



Thread
Sealant*



Masking Tape



Adjustable
Wrench*



Level



Hex Wrench



Drill



Wood Shims



Pencil or
Marker

*not included




KESWICK FREESTANDING FAUCET INSTALLATION


Installation

1. Connect the provided braided water lines to the supply posts on the faucet's spout. Apply thread sealant or plumber's tape to the threads before tightening. Hand tighten the connections firmly.


Tip: Place a piece of masking tape on the bottom of the hot water line. This will prevent the hot and cold lines from being crossed when it is time to connect to the main water supplies.

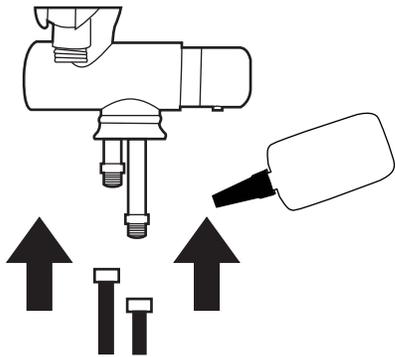


2. Feed the water lines through the faucet body and attach the spout by threading it onto the body.

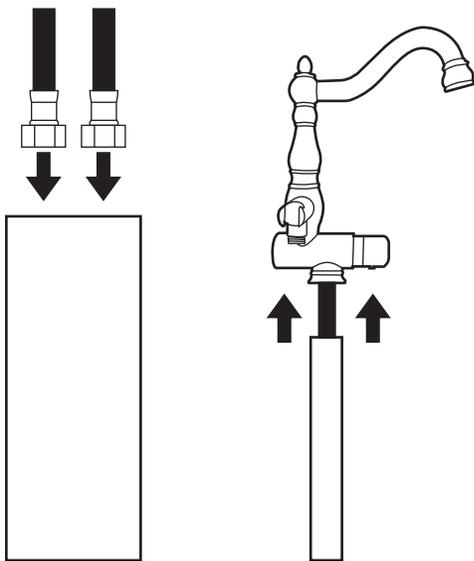

3. Slide the decorative baseplate onto the faucet body, as shown.

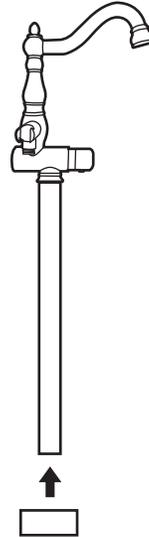


4. Attach the mounting bracket by threading it onto the base of the faucet. Hand tighten firmly. Position the faucet at its desired location, then mark the location of the mounting holes on the floor. Set the faucet aside.

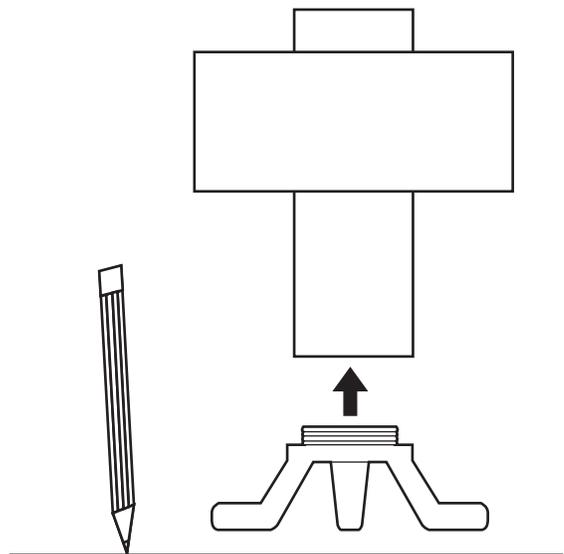





KESWICK FREESTANDING FAUCET INSTALLATION


5. Drill pilot holes into the floor at the marked mounting hole locations. The pilot holes should measure approximately 1" deep and 1/4" in diameter.

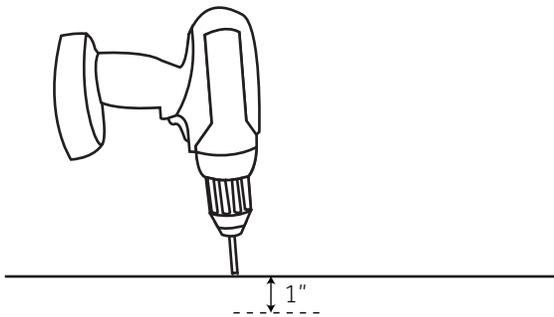


6. Remove the nuts, locking washers, and metal washer from each of the mounting screws. Drop each of the screws and anchors into the drilled pilot holes, with the threads facing up through the floor.

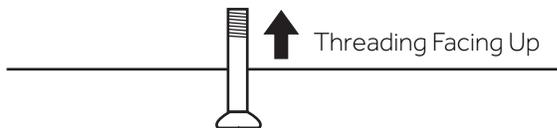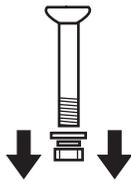

7. Connect the braided water lines to the main water supply at the floor. Ensure that you are connecting the hot and cold lines accordingly. Apply thread sealant or plumber's tape to the threads before attaching. Hand tighten firmly, then finish tightening using an adjustable wrench. Be careful not to overtighten.

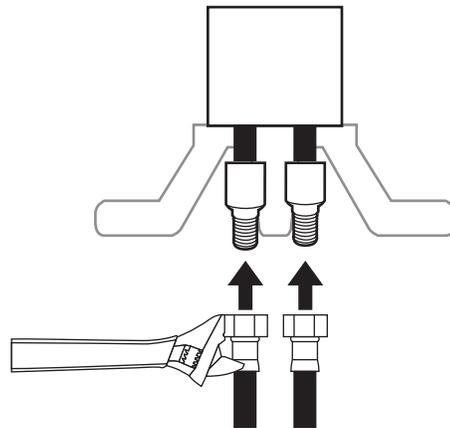


8. Briefly turn on the main water supply to ensure that there are no leaks. Once you have determined that there are no leaks, turn the water supply back off and continue with the installation.

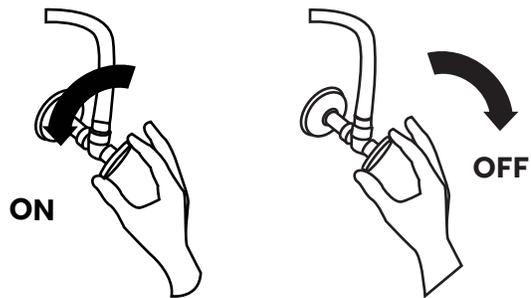




KESWICK FREESTANDING FAUCET INSTALLATION

9. Secure the faucet to the floor using the metal washers, locking washers, and nuts that were removed in step 6. Slide the decorative baseplate to the floor to conceal the mounting hardware and rough-in.

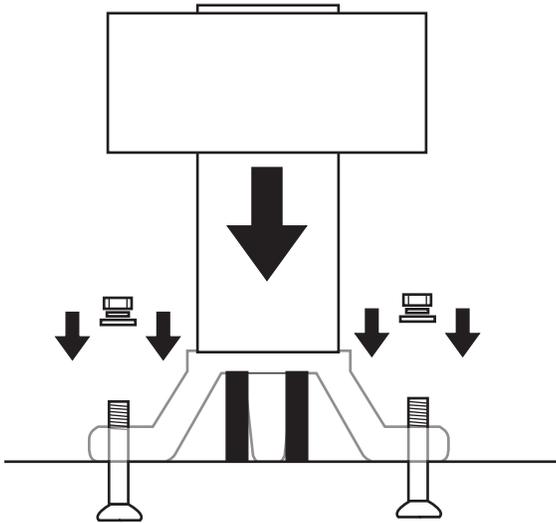

10. Finish your installation by attaching the hand shower to the faucet using the hand shower hose. Hand tighten each connection firmly.

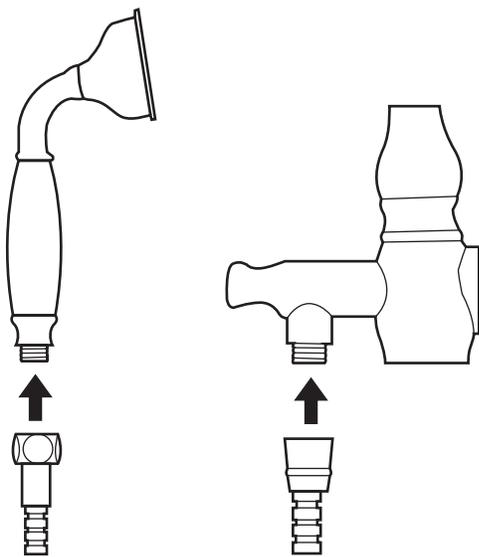

11. Once installation is complete, turn on the main water supply. Remove the aerator from the spout and turn the faucet on. Allow the water to flow for 60 seconds to remove any dust or loose sediment within the water lines. Check for any leaks, and that hot and cold water are running appropriately. Divert the water to the hand shower and allow the water to flow through the hose for approximately 60 seconds.

