

ASSEMBLY INSTRUCTIONS

ITEM # DWC11 /WEMBLEY SCONCE

ITEM DESCRIPTION

MATERIAL TYPE:IRON+ALABASTER	FINISH :CHATTERED ANTIQUE BRASS + ALABASTER	TOP COAT/SEALANT
SOCKET TYPE:LED	SOCKET QTY: 2PCS	
BULB TYPE: LED	BULB WATTAGE: 2W	VOLTAGE:100V-120V
ITEM NET WEIGHT:		
UL COMPLIANT		
INSTALLATION ENVIRONMENT: <u>SUITABLE FOR DAMP LOCATIONS</u>		

NOTE:
*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON
*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING
*MIN 75°C SUPPLY CONDUCTORS






PARTS

A	MOUNTING PLATE	1 PC
B	SCREW	2 PCS
C	LAMP BODY	1 PC
D	ALABASTER PANEL	1 PC


INCLUDED ASSEMBLY HARDWARE

J MOUNTING SCREWS

K PLASTIC WIRE CONNECTORS

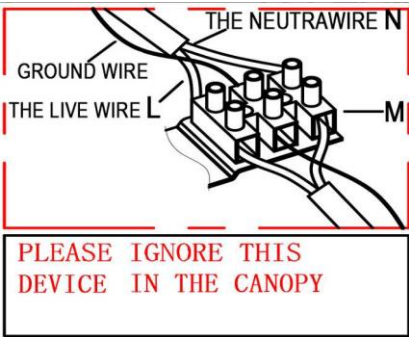

PRODUCT ASSEMBLY

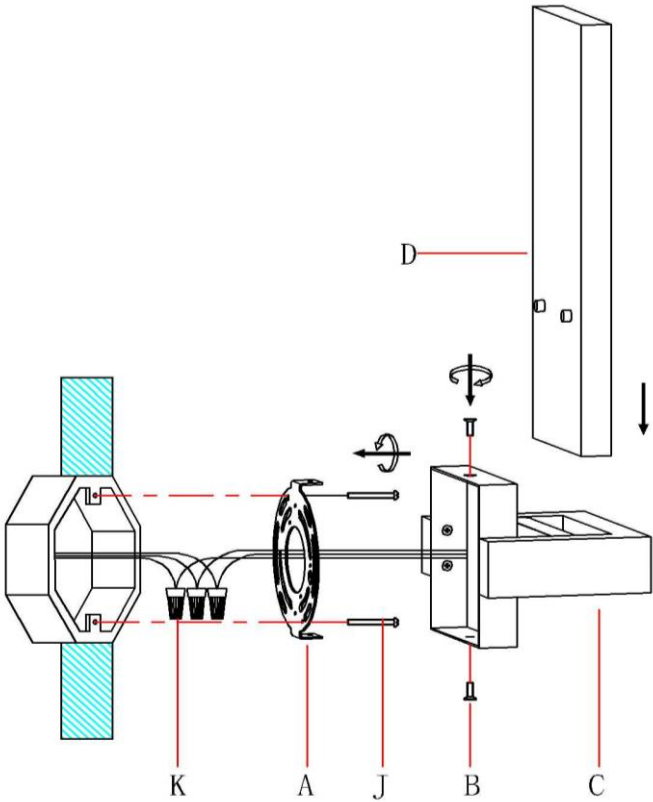

ASSEMBLY INSTRUCTIONS

- 1.REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S)CAREFULLY.
- 2.PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
- 3.SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 4.PULL THE ELECTRICAL CORD OF "J BOX"THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A).
- 5.**PLEASE PAY SPECIAL ATTENTION THAT YOU DO NOT NEED TO CONNECT THE WIRE CONNECT DEVICE(M).**
IT IS USED FOR THE WIRE CONNECTION FOR EURO-MARKET.
- 6.CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDEGS MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING.THE BARE WIRE IS THE GROUNDED WIRE.
7. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
- 8.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 9.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED.
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 10.GENTLY TUCK THE WIRE CONNECTIONS(K) NEATLY INTO THE CEILING JUNCTION BOX.
- 11.ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX USING THE MOUNTING SCREWS(J) AND TIGHTEN SCREWS(J) WITH A SCREWDRIVER.
- 12.ATTACHED THE LAMP BODY (C) TO THE MOUNTING PLATE(A) AND FASTEN IT WITH 2PCS SCREW(B) .
- 13.INSERT THE ALABASTER PANEL (D) INTO THE LAMP BODY (C)
- 14.RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

DUST WITH A DRY CLOTH.
FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866
ARTERIORS HOME:972.488.9800

DISCLAIMERS
WE RECOMMEND THE INSTALLATION OF THIS ELECTIONAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

ARTERIORS CONTRACT:972.488.9800 EXT.321