


# WIDESPREAD LAVATORY SET INSTALLATION INSTRUCTIONS

MODEL : 3320C  
3330C

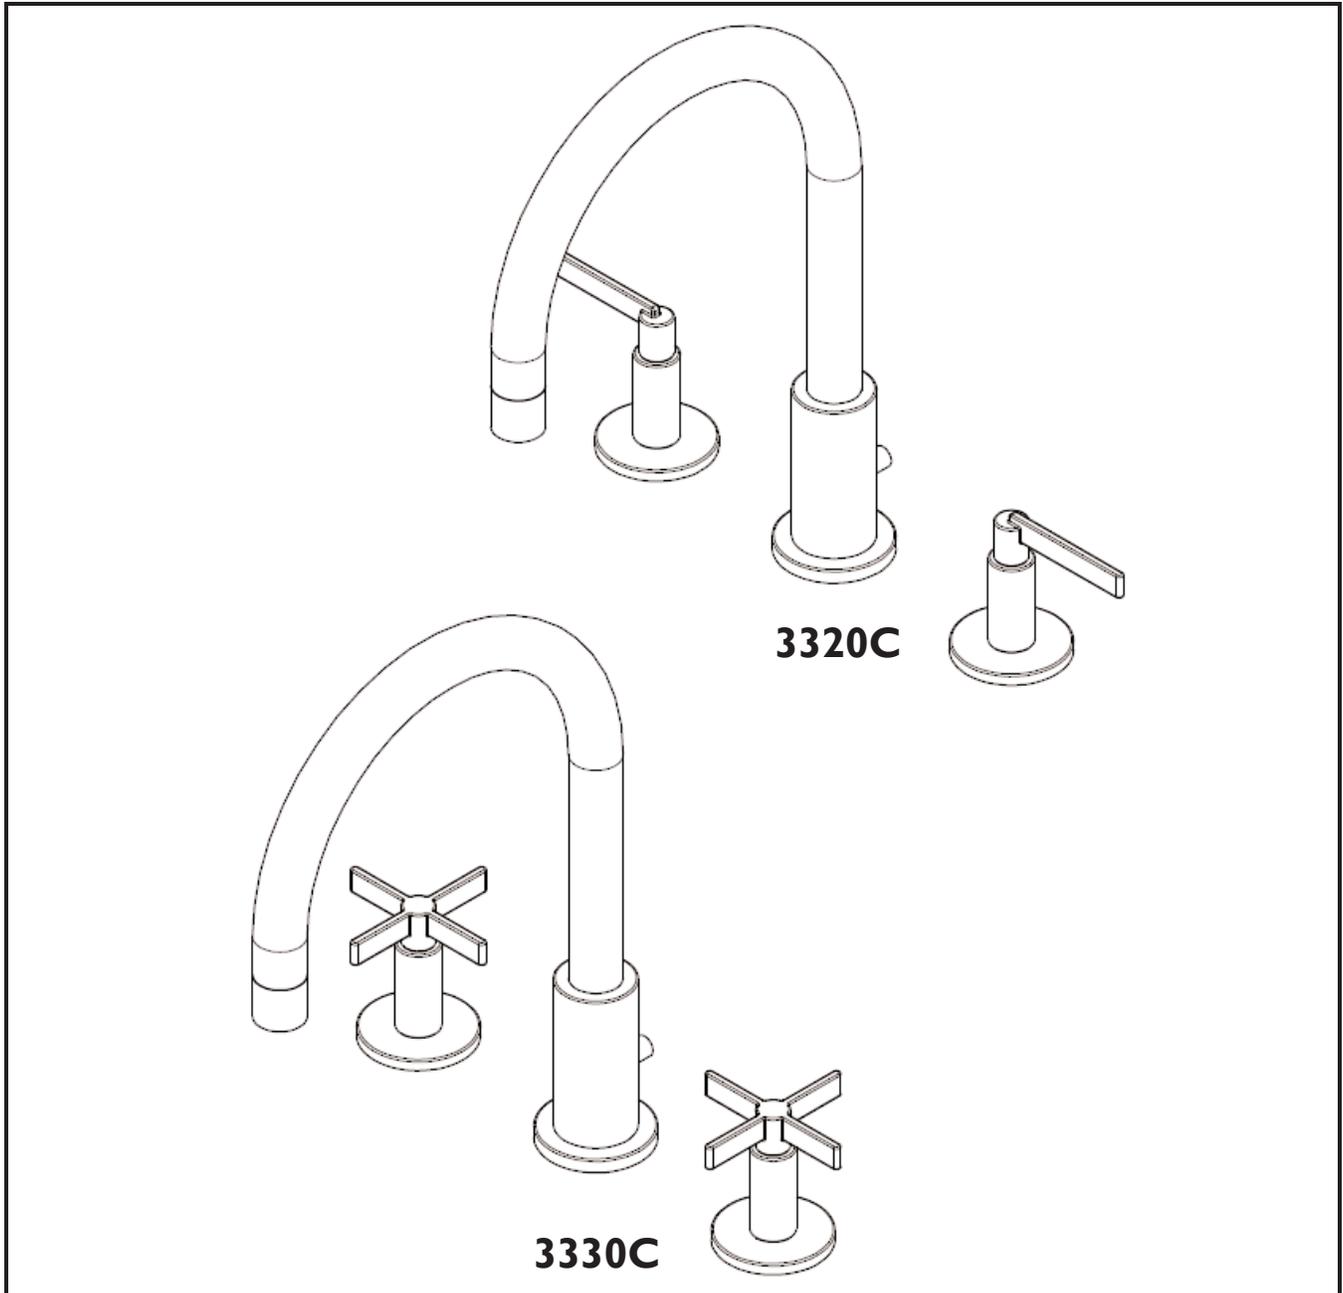

# NEWPORT BRASS

Flawless Beauty. From Faucet to Finish.™

2001 CARNEGIE AVE, SANTA ANA CA 92705

(949) 417-5207

## We recommended installation of this product by a Professional Plumbing Contractor

**Note:** The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials. Recommended deck hole  $\text{\O}1\text{-}3/8$ " and  $\text{\O}1\text{-}3/8$ " for two side holes.

1. Place the SPOUT (1) hoses, one at a time, and threaded ROD (2) through center hole of mounting surface. Secure SPOUT (1) into place with WASHER (3), BRACKET (4) and NUT (5). See Figure 1.
2. Place flange NUT (6), WASHER (7) and SPACER (8) on valve BODY (9). Insert valve BODY (9) through the hole in the mounting surface and thread into INVERTED NUT (10) until it bottoms out. Before tightening NUT (5), check alignment of handle. Any adjustments for rotational alignment must be made to the valve BODY (9), not to the cartridge. See **Figure 1 & Figure 2**.
3. Connect the loose end of flexible HOSE (11) to side outlet of valve BODY (9). (Hand-tighten and secure each connection with a wrench  $1/4$  turn.) Repeat on other side. See **Figure 2**.
4. Connect hot/cold water supply to appropriate  $1/2$ " NPSM valve BODY (9), utilizing one of the three following types of risers. Supply risers not included. See **Figure 3**.
  - a.  $1/2$ " IPS flexible riser: discard rubber nosecone WASHER (12), friction WASHER (13) and coupling NUT (14).
  - b.  $3/8$ " or  $1/2$ " OD bullnose riser: utilize friction WASHER (13) and coupling NUT (14).
  - c.  $1/2$ " copper riser: utilize rubber nosecone WASHER (12), friction WASHER (13) and coupling NUT (14).
5. Secure HANDLE (15) into place by first engaging the STEM (16) and then threading HANDLE BODY (17) onto CARTRIDGE (18). Any adjustments for rotational alignment must be made to the valve BODY (9), not to the CARTRIDGE (18). See **Figure 4**.
6. Remove drain PLUG (19) from FLANGE (20). Place FLANGE (20) and white WASHER (21) through sink drain opening. (Clear silicone may be used in place of white washer). Place NUT (24), clear WASHER (23) and cone shaped rubber WASHER (22) into drain BODY (25). **Note:** Cone portion of washer should face upward. From bottom side of sink, place the BODY (25) and tighten to FLANGE (20). Next slide up cone shaped rubber WASHER (22) and clear flat WASHER (23) against sink bottom and secure the drain BODY (25) by tightening the NUT (24). Apply thread sealant to TAILPIECE (26) and attach TAILPIECE (26) and WASHER (27) to drain BODY (25). Attach TAILPIECE (26) to p-trap drain, not included. See **Figure 5**.
7. Insert ball ROD (28) into the drain rod OPENING (29); secure with ball rod NUT (30). Insert pop-up ROD (31) through SPOUT (1) and secure to STRAP (32), approximately 1" from end of ROD (31), with SCREW (33). Place drain PLUG (19) into FLANGE (20). Adjust the rise of the plunger and CLIP (34) into place. Adjust ball ROD (28) and pop-up ROD (31) so drain will open and close properly. See **Figure 6**.
8. Remove AERATOR (36) from SPOUT (1). Turn on water supply, and flush both VALVES until water is clear. Check for leaks and make any final adjustments required. Re-attach AERATOR (33) to the SPOUT (1). See **Figure 6**.

