
SCHONBEK®

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE: #D5,109,325 & #D5,222,805

CHANDELIER 5874A TRIM DIAGRAM

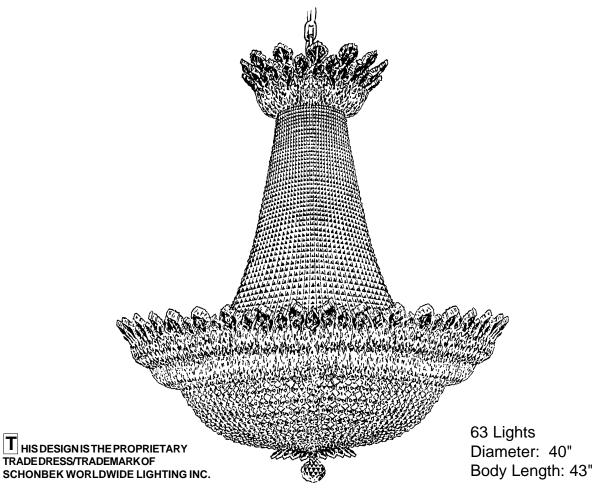

SCHONBEK®

This fixture was designed and manufactured in Plattsburgh, N.Y. Our high-quality crystal fixtures are made with state-of-the-art manufacturing equipment. If you have any questions about this or any of our more than 450 crystal products, contact your nearest authorized Schonbek distributor.

CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 102 pounds.

BULBS: (62) Candle shaped candelabra base C10 bulbs, recommend 25 watts

for best appearance.

(1) Globe shaped candelabra base G16-1/2 bulbs, recommend 25 watts for best appearance.

60 - Watts Maximum

WARNING: This chandelier meets UL/CSA requirements. Any tampering will void

UL/CSA certification.

Follow steps in exact order Save this trim diagram for future reference


IMPORTANT

Please record the following information for future service.

CODE # _____ Four-digit number on outside of carton.

PACKER # _____ See crystal package label.

ORDER # _____ See crystal package label.

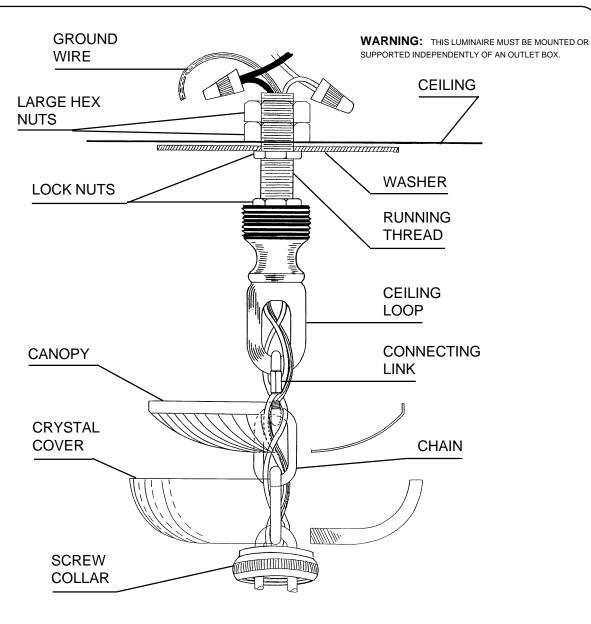

1 MAKE SURE POWER IS DISCONNECTED!!

2 Attach washer to supporting member in ceiling sufficient to support weight of fixture.

3 Slip screw collar, crystal cover and metal canopy over chain. Determine the suspension length of the fixture and cut chain, if necessary. Use two connecting links to attach chain to chandelier loop and ceiling loop.

4 Insert stem wire through chain and ceiling loop. Connect wires. Fixture MUST be grounded.

5 Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.

6 Attach canopy to ceiling with screw collar.

NOTES:

Installation of Crystal "C"

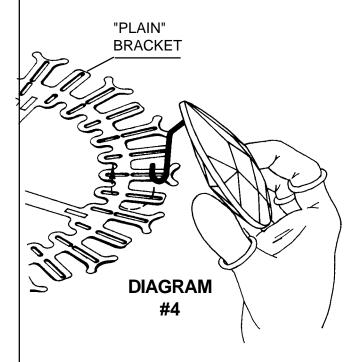


DIAGRAM #5

Position the crystal above the "plain" bracket so that the end of the hook enters the slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the inner slot, in line with the outer slot.

With the hook in the bracket, as shown, pivot the crystal downwards so that the hook rests in the end of the outer slot.





"Y" **BRACKET**


Installation of Crystal "D" and "E"


Position the crystal above the "Y" bracket so that the end of the hook enters the long slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the short slot, in line with the long slot.


pivot the crystal downwards so that the hook rests in the end of the long slot.





TRIM ID SHEET FOR ORDERING **SPARE PARTS.** PLEASE SAVE FOR CLEANING FIXTURE!

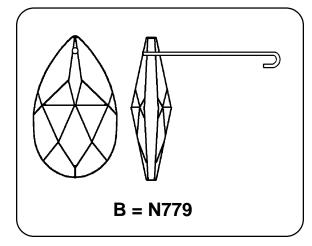


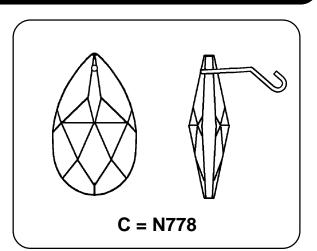

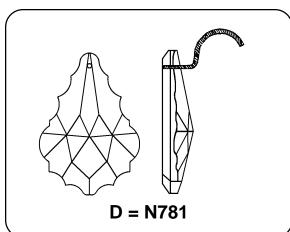

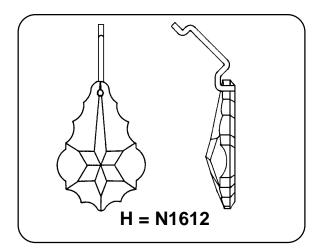

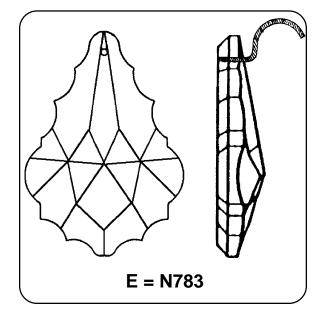

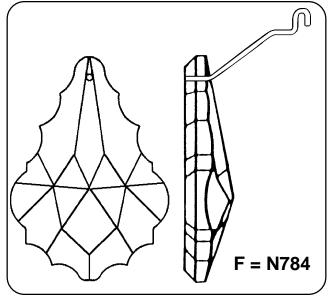

With the hook in the bracket, as shown,

5874A PAGE 6 5874A PAGE 3



Hook Crystal Chain "A1" (small crystal at top) into ring #3 pin hole and hook the bottom of the crystal chain into ring #4 leg. See diagram #1 for detailed instructions. Hook Crystal Chain "A2" (small crystal at top) into the ring #3 leg and hook the bottom of the crystal chain into ring #4 pin hole. See diagram #1 for detailed instructions. NOTE: Crystal Chain "A2" overlaps Crystal Chain "A1".

8 Hook Crystal "B" into the back slot of the "Y" bracket of ring #2. See diagram #3 for detailed instructions. Hook Crystal "C" into the "plain" bracket of ring #2. See diagram #4 on page 6. Hook small Crystal "D" into every second "Y" bracket of ring #2. **NOTE: Line-up with Ring #1 bracket. Crystal "D" and Crystal "F" line-up with one another**. See diagram #5 on page 6. Hook large Crystal "E" into the remaining "Y" brackets on the ring #2. See diagram #5 on page 6.

9 Hook large Crystal "F" into the leg bracket of ring #1. **NOTE: Cyrstal "F" should line-up** with Crystal "D".

10 Attach horse shoe bracket with finial into holes in down light. HINT: Take out round bulb for easier installation of the horse shoe bracket. Hook Crystal Chain "G" (large crystal at top) into the ring #7. Hook Crystal "H" into the lexan washer on the finial assembly. See diagram #2 for detailed instructions.

11 Hook the bottom of Chains "G" into the lexan washer. Close bottom hook after inserting into washer.

12 Hook Crystal "B" into the back slot (the "Y" is cut off) of ring #6. See diagram #3 for detailed instructions. Hook Crystal "C" into the "plain" bracket of ring #6. See diagram #4 on page 6.

13 Hook Crystal "B" into the back slot of the "Y" bracket of ring #5. See diagram #3 for detailed instructions. Hook Crystal "C" into the "plain" bracket of ring #5. See diagram #4 on page 6. Hook small Crystal "D" into every second "Y" bracket of ring #5. See diagram #5 on page 6. Hook large Crystal "E" into the remaining "Y" brackets of ring #5. See diagram #5 on page 6.

14 Screw Crystal Ball onto the bottom of chandelier. Tighten set screw with supplied tool.

