SPEAKMAN COMPANY

SD-02-AF Installation, Maintenance & Operation Instructions ANYSTREAM ® SHOWERHEAD

DESCRIPTION

Polished chrome plated ANYSTREAM showerhead. Brass ball swivel joint. Brass shank. Contoured polished chrome plated brass spray adjusting handle. 2-3/4" face. 6 Lexan deposit resisting plungers with 48 spray channels. Water conserving pressure compensating AUTOFLO® device reduces flow to 2.5 GPM/9.46LPM maximum, to meet existing ANSI A112.18.1 Standard. ½" NPT inlet.

SPECIFICATIONS

SUPPLY INLET: ½" NPTF

FLOW RATE: 2.5 GPM/9.46LPM

MAXIMUM

SHIPPING WEIGHT: 1.26 LBS.

INSTALLATION

Apply pipe thread tape in a clockwise direction to threads of shower arm. Pipe joint compound may be used

OPTIONS

♦ PC-PVD: Chrome w/ Brass Trim	♦ SB: Satin Brass
♦ ORB: Oil Rubbed Bronze	♦ BPT: British Pipe Thread
♦ BLK: Black	♦ SC: Satin Chrome
♦ BPT: British Pipe Thread	♦ PBL: Polished Brass PVD Coating
♦ PN: Polish Nickel	♦ SN: Satin Nickel
♦ WHT-PC: White w/ Polished Chrome Trim	

instead of tape. Turning in a clockwise direction, thread the shower head on to the shower arm. Tighten with a pipe wrench or a pair of pliers. Position the shower head by rotating it clockwise. Make sure the ball joint coupling nut is properly tightened. Turn the water supply on and check for leaks.


OPERATION

To adjust the spray pattern of the shower head, simply rotate the handle to the desired spray (needle spray, gentle rain or full flood).

MAINTENANCE

Your Speakman showerhead is designed and engineered in accordance with the highest quality and performance standards. Periodic cleaning using a mild soap and warm water will help keep your showerhead's appearance in its original condition. For best results, dry immediately with a soft, clean cloth. Do Not Use harsh and/or abrasive cleaners on showerheads. To help restore your finish, occasionally apply a non-abrasive wax to your showerhead body (Follow manufacturer's instructions). In certain water conditions, mineral deposits may form on your faceplate. To reduce the mineral build-up, turn the handle to FLOOD position to let the water drain out after every use. A gentle scrubbing of the plunger or channels with a toothbrush should restore your spray pattern. On *chrome* plated showerheads, a white vinegar/water treatment will assist in breaking down excessive mineral deposits on the sprays. The showerhead faceplate can be soaked in a two (2) parts white vinegar and (1) part water solution for about ½ hour to break up the mineral deposits. Rinse thoroughly. Brush off any remaining mineral deposits if necessary. CAUTION: On all special finish parts, including any of the nickel or brass finishes, the white vinegar/water treatment should not be used.

ROUGH-IN MEASUREMENTS

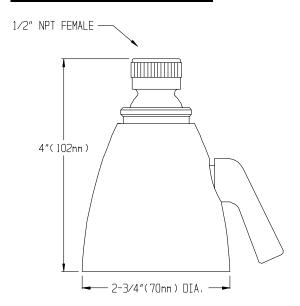

Product improvements may cause specification and dimensional

changes without notice.

SPEAKMAN[®]

11/09 REV 2 92-1737