


**363GBTP**  
**ADA Toilet Paper Holder with Assist Bar**  
**Operation & Maintenance Manual**

<p><b>Model Numbers</b></p>	<p><b>Feature Highlights</b></p>
<p><input type="checkbox"/> <b>363GBTP</b>     <i>Toilet Paper Holder with Assist Bar</i></p>	<ul style="list-style-type: none"> <li>• Supports up to 250 lbs. as an assist bar</li> <li>• 7/8" bar diameter</li> <li>• 2" square flange</li> <li>• Bar extends 2-1/8" from wall</li> <li>• Concealed mounting for a clean look</li> <li>• Pivoting tissue holder for easy loading</li> <li>• Mounting hardware and mounting plate included</li> <li>• Metal construction in standard polished chrome finish</li> <li>• Winglts compatible</li> </ul>
<p><b>Finish Options</b></p>	<p><b>Warranty</b></p>
<p><input type="checkbox"/> <b>-STN</b>     <i>Satin Nickel finish</i></p> <p><b>Note:</b> Append appropriate -suffix to model number.</p>	<p><b>Limited Lifetime</b> - to the original end purchaser in consumer/residential installations.  <b>5 Years</b> - for industrial/commercial installations.  Refer to <a href="http://www.symmons.com/warranty">www.symmons.com/warranty</a> for complete warranty information.</p>


**Dimensions**




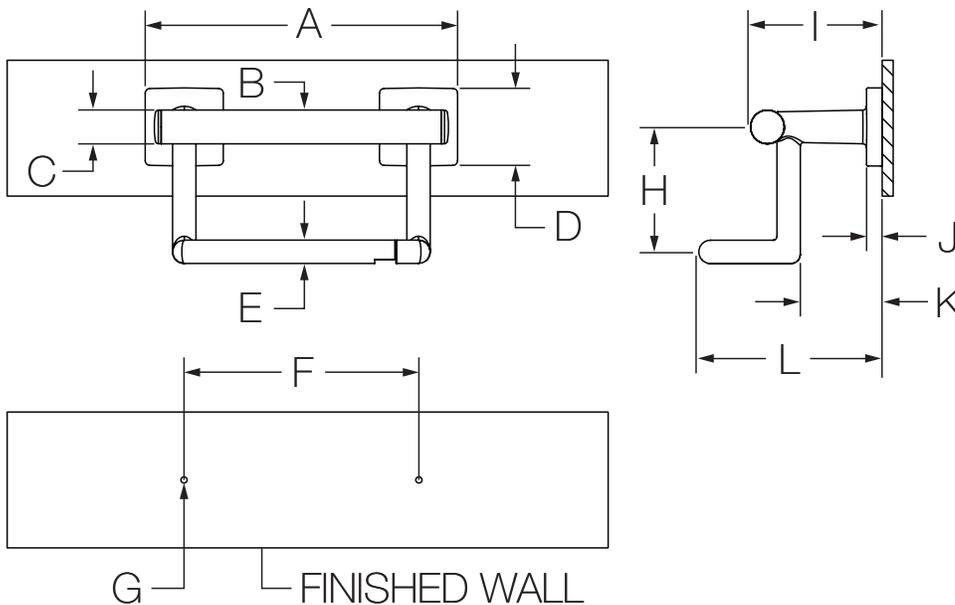


Measurements	
A	8", 203 mm
B	Load bearing surface supports up to 250 lbs. as an assist bar
C	Ø 7/8", 22 mm
D	(2x) Sq. 2", 51 mm
E	19/32", 15 mm
F	6", 152 mm
G	(2x) Hole Size Ø 7/64", 3 mm
H	3-3/16", 81 mm
I	3-3/8", 86 mm
J	3/8", 10 mm
K	2-1/8", 54 mm
L	4-11/16", 119 mm

**Note:** Dimensions subject to change without notice.

## Parts Breakdown

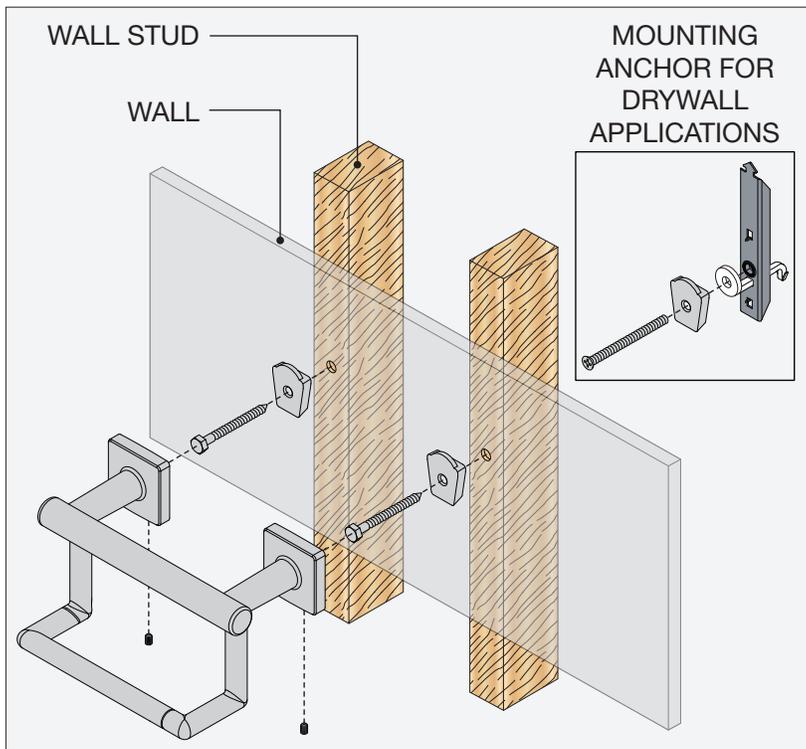

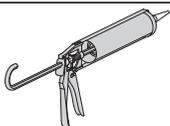Tools Required for All Installations	
3/8" Drill	
7/16" Hex Socket with 3/8" Drive Ratchet	
Pencil	
Phillips Head Screwdriver	
Safety Glasses	
Silicone	
Stud Finder	

### Drill Bit Sizes


#### Installing to Wall Studs Only

Wall Stud Pilot Hole:  
7/64" Drill Bit  
Through Ceramic Tile:  
5/16" Carbide Tip Drill Bit



#### Installing Mounting Anchor

Drywall Pilot Hole:  
1" Drill Bit  
Through Ceramic Tile:  
1" Carbide Tip Drill Bit



## IMPORTANT NOTES FOR PROPER INSTALLATION

DO NOT install this product without first reading and understanding the instructions. If you are unable to understand these warnings and instructions, contact professional or technical personnel for assistance - otherwise injury may occur.


### Toilet Paper Holder Location

- For proper mounting heights and location consult with your state and local code official having jurisdiction over the installation.


### Solid Support

- Toilet Paper Holder ends can be mounted with both end positions over a wall stud. A stud finder can be used to locate wall studs. Contractor is responsible for installing Toilet Paper Holder to wall studs as instructed.
- For drywall applications one end of Toilet Paper Holder must be positioned over a wall stud while the mounting bracket is used to secure the opposite end.
- Secure through wall board or tile to the wall stud so as to hold a minimum of 250 pounds of force.


## Installation (Wall & Wall Studs)

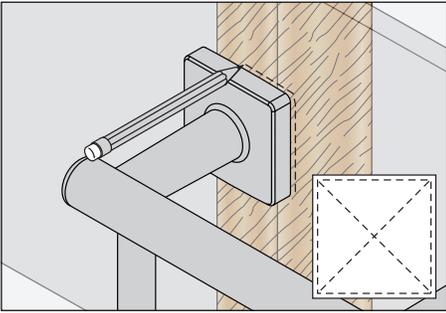


1) Place Toilet Paper Holder at desired position. Mark the centers on each end with a pencil.

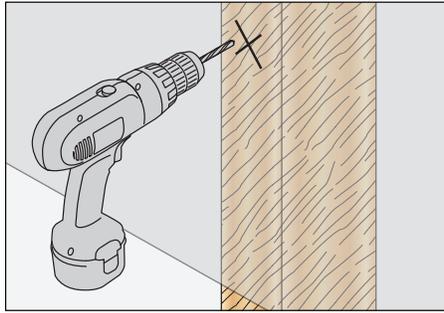


2) Remove Toilet Paper Holder from wall. Use drill with 7/64" drill bit to drill holes into wall and wall studs at the marked positions.

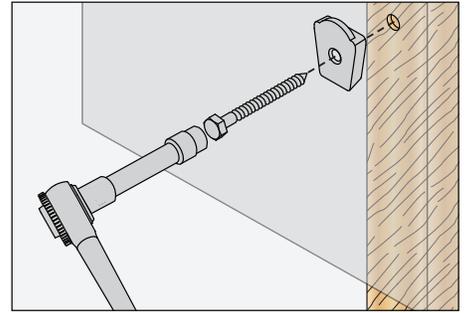


3) Use ratchet and lag bolt to attach mounting bracket to wall. Do not overtighten. Repeat step for opposite end, and then tighten both brackets so they are secured to wall.

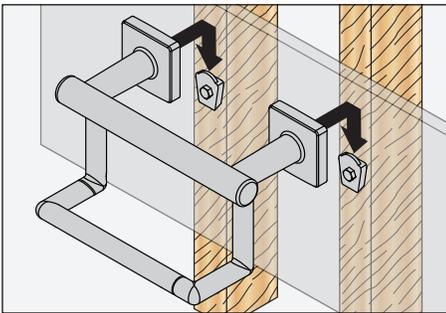

4) Attach ends of Toilet Paper Holder to mounting brackets.

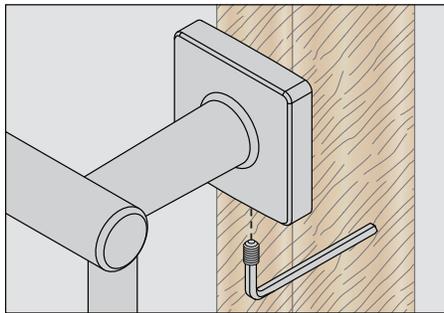


5) Secure Toilet Paper Holder end with set screw. Repeat step for opposite end.

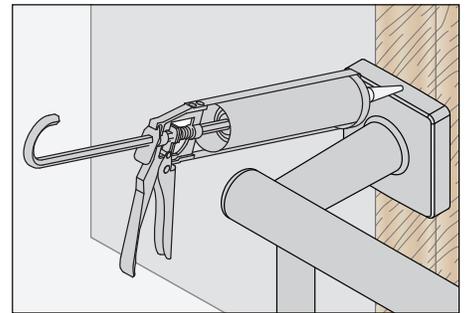


6) Apply a bead of silicone around the perimeter of the Toilet Paper Holder ends to prevent water from bleeding through the mounting holes and potentially damaging the wall and wall studs.

## Installation (Ceramic Tile)

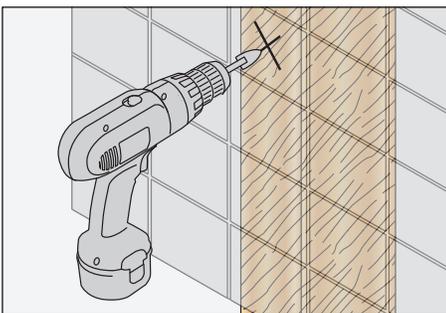


1) Follow step 1 for wall and wall studs to mark centers of Toilet Paper Holder ends. Use drill with 5/16" carbide tip drill bit to drill holes into ceramic tile at the marked positions to prevent damage to the tiles.

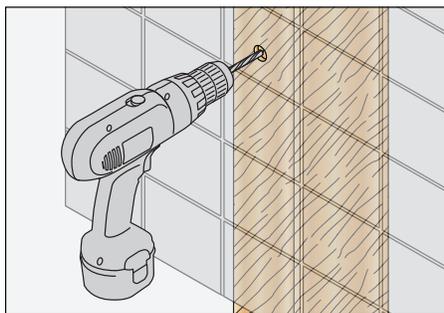


2) Use drill with 7/64" drill bit to drill pilot holes into wall studs through ceramic tile.

3) Follow steps 3, 4, 5 and 6 for wall and wall studs to complete installation of Toilet Paper Holder onto ceramic tile.


## Installation (Drywall & Wall Stud with Mounting Anchor)

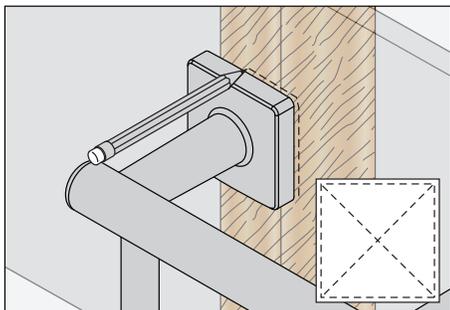


1) Place Toilet Paper Holder at desired position. Mark the centers on each end with a pencil. Follow steps 1-3 for wall and wall studs (page 3) to install bracket to wall stud.

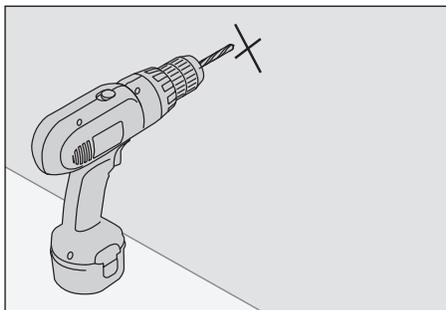


2) Use drill with 1" drill bit to drill holes into drywall at the marked position.

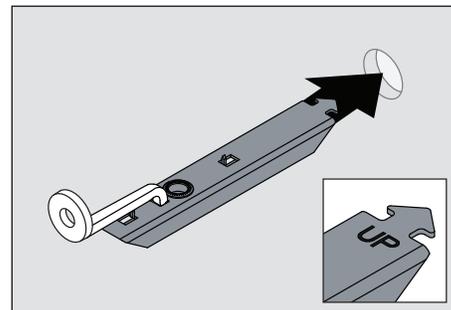


3) Hold white flange upright and insert mounting anchor bar into drywall hole with the arrow facing toward the drywall.

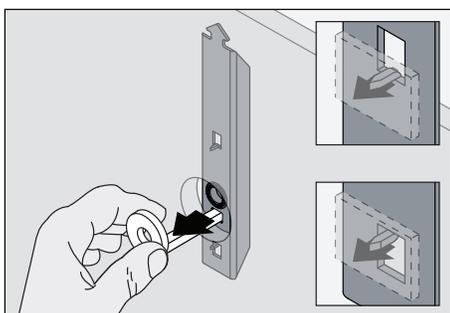

4) Pull backward on white flange so bar straightens and tilts upright. Arrow on bar must be facing upwards for anchor to perform as intended.

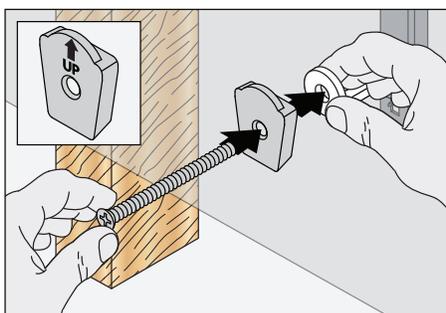


5) Keep pressure on bar behind the drywall. Align holes in bar, white flange and bracket. Align machine screw with holes. Hand tighten machine screw so bar remains upright.

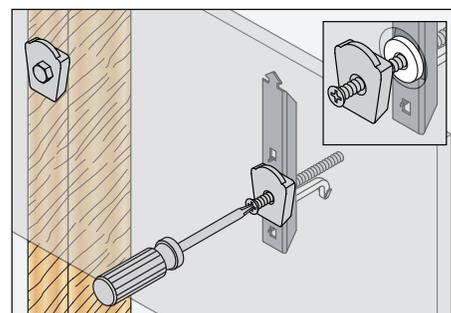


6) Tighten machine screw with phillips head screwdriver so bracket attached to mounting anchor bar is flush with drywall.

**Note:** Hooks on bar will penetrate drywall to help secure bar in the upright position.


**Note:** The **UP** arrow on the bracket must be facing installer and pointing upright.

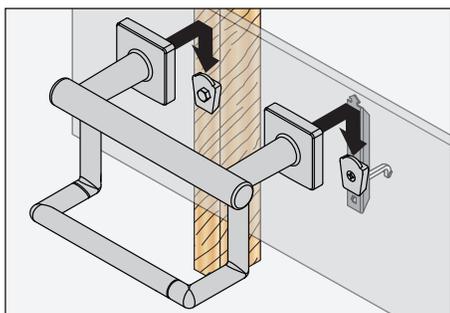

7) Attach ends of Toilet Paper Holder to mounting brackets.

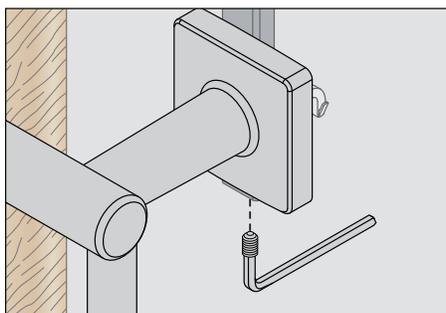

8) Secure Toilet Paper Holder end with set screw. Repeat step for opposite end.

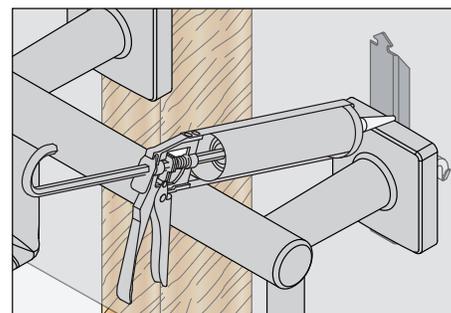

9) Apply a bead of silicone around the perimeter of the Toilet Paper Holder ends to prevent water from bleeding through the mounting holes and potentially damaging the wall and wall studs.

---

## Troubleshooting Chart

---

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
Finish is spotting.	Elements in water supply may cause water staining on finish.	Clean finished trim area with a soft cloth using mild soap and water or a non-abrasive cleaner and then quickly rinse with water.

For California Residents

**WARNING:** This product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.