


ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0383 / P0385

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THIS INSTRUCTION.


Hardware Package (included):



Installation Steps

Turn off the power at fuse or circuit box.

- Unscrew two bolt nuts (D) and remove mounting strap unit (A) from the canopy.
- Loosen the plastic headless screw on the canopy by using a flat head screwdriver (not included).
- Thread the cord through the canopy and strain relief. Measure the desired length of the cord (F) from the canopy to the glass shade and leave additional 9" cord (G) above the canopy (include the canopy), and then cut off the unnecessary cord. (See Fig.1)
- Adjust strain relief at 9" position from the top of the cord.
- Mark the 3" cord (H) from the top of the cord (G). Use a knife to peel off the insulation of the cord (H) carefully to show the 3 inside wires out. (See Fig. 1)
Caution : Cutting too deep may cut off three inside wires and destroy the insulation surface of the three inside wires.
- Peel off the 3 wires from the top about 3/8" long (I) to expose the copper for wiring.
- Attach the mounting strap unit (A) to outlet box by using two mounting screws (B).
- Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - The black wire marked "L" from the fixture to the black wire from the power source.
 - The white wire marked "N" from the fixture to the white wire from the power source.
 - The green ground wire marked "⊕" from the fixture to the green ground wire from power source.
 Carefully put wires back into the outlet box.
- Pull the cord (E) down slightly until the strain relief touches the hex nut. Attach the canopy to the mounting strap unit (A) by inserting two fixture mounting screws, and then secure it with two bolt nuts (D).


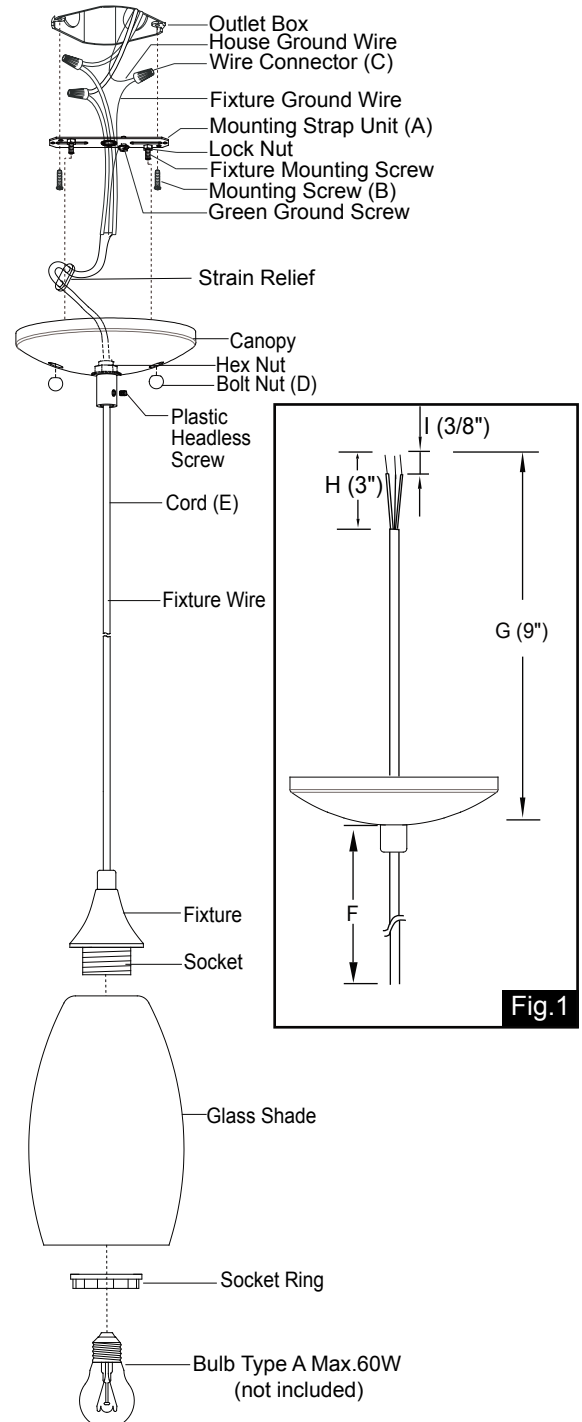




10. Fastening cord by screwing plastic headless screw, using flat head screwdriver (not included).
11. Attach the glass shade to fixture, and then secure it with the socket ring.
12. Install a bulb (not included). Check relamping label at socket area or packaging for maximum wattage allowed.


Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.


Spare Parts List:

			
Mounting Strap Unit (A)	Mounting Screw (B)	Wire Connector (C)	Bolt Nut (D)

Assembly Kit 5509MM (1 SET)

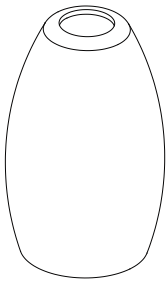

Glass Shade
10302AG for P0383
10303TG for P0385

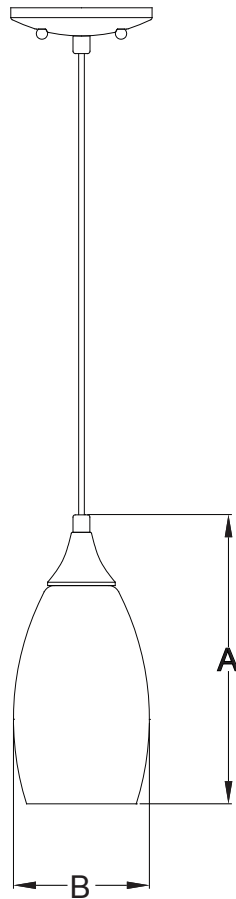

A: 9-3/4"

B: 4-3/4"