

Wall Range Hood Installation



Installation Tutorial Video

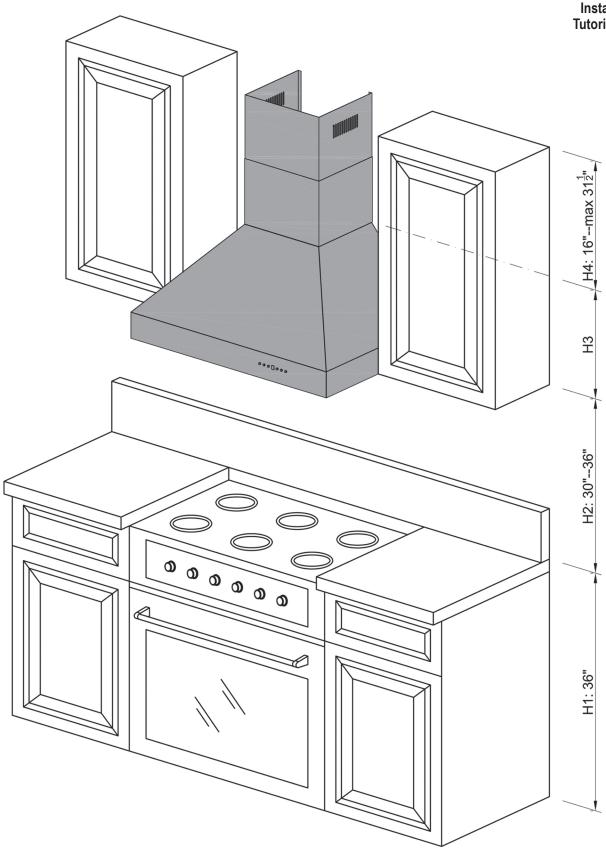

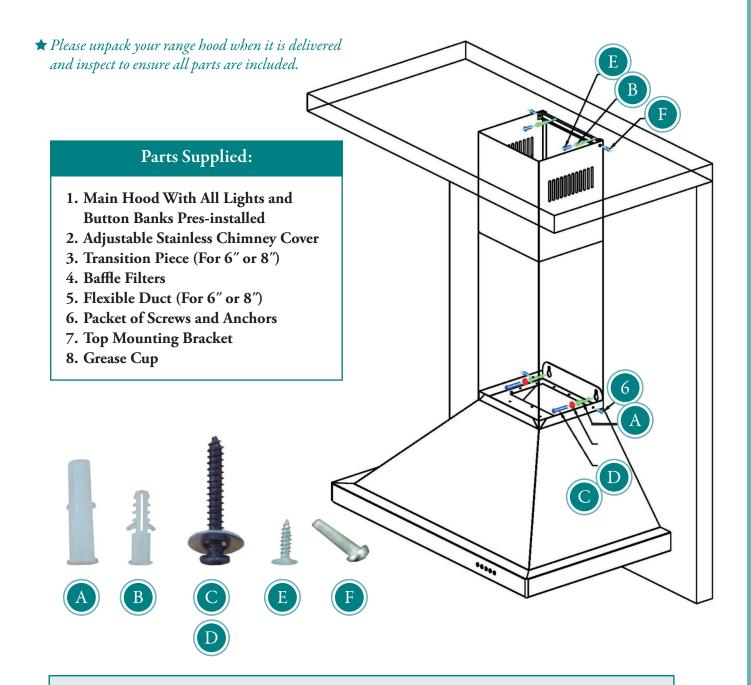

*Note: Wall range hoods with single motors will come with a square to 6" round transition piece and will include a back draft damper. The ducting with these range hoods is 6".

Dual motor wall hoods will come with a square to 8" round transition piece without a back draft damper. The ducting with these range hoods is 8".

*Use rigid ducting wherever possible. Try and minimize the use of elbows. More elbows and longer runs create higher static pressure. The hood comes with a grounded three prong plug that can either be direct wired or plugged into a 20 amp. circuit.

*The recommended height to install your hood is 30" minimum and 36" maximum above the cooktop.

*For Outdoor (304 Series) hood installation, the unit must be installed at a minimum of 36" above the grill.

- Find the center of the wall where you are installing the hood. Make sure there is sufficient bracing to hold the weight of the hood. Mark your center line and measure out from the center to find your two mounting points. Make sure your mounting points are level when you mark them. It is recommended to install the hood directly into wood supports. (Figure 1)
- Mark the mounting points and install the two mounting screws provided leaving the heads out 1/4" to mount the hood. (Figure 1)
- Mount the main body of the hood to the two screws and screw into place.
 (Figure 2)
- Mount the top chimney mounting bracket centering it above the hood. (Figure 3)




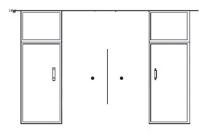



Figure 1




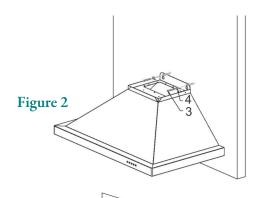


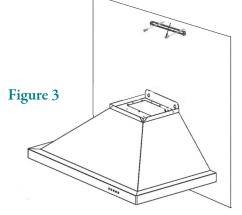




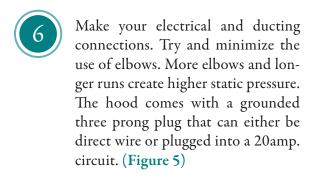

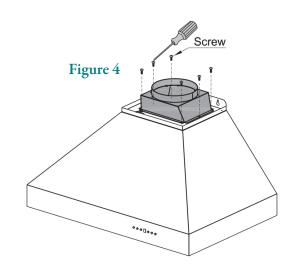

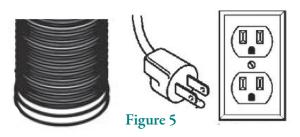


Connect the ducting to the transition piece using ring to hold into place. Attach ducting to the range hood. (Figure 6)

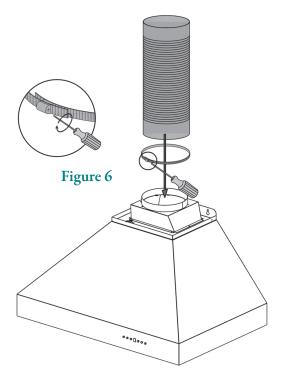


Wall Range Hood Installation

- Install the two part chimneys on top of the hood. Slide the inside section up until the vertical vent slots are visible, attach top portion to mounting bracket with screws. Secure lower chimney portion to the hood with screws provided. (Figure 7)
- Install plastic drip cup by sliding into brackets located at the bottom of the motor. Install *baffle channel and baffle filters. (Figure 8)

*Before installing baffle filters, make sure that you insert the grease cup under the motor blower.

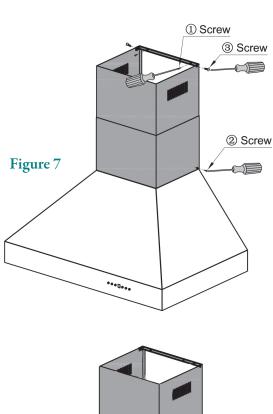

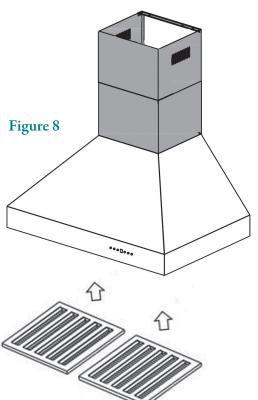

^{*}Not all models include baffle channels.