

INSTALLATION INSTRUCTIONS

For Model 5732-04


PLEASE READ AND SAVE THESE INSTRUCTIONS

These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning installation of the lighting fixture. We strongly suggest that all direct wired fixtures be installed by a qualified, licensed electrician.

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

BEFORE INSTALLATION

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

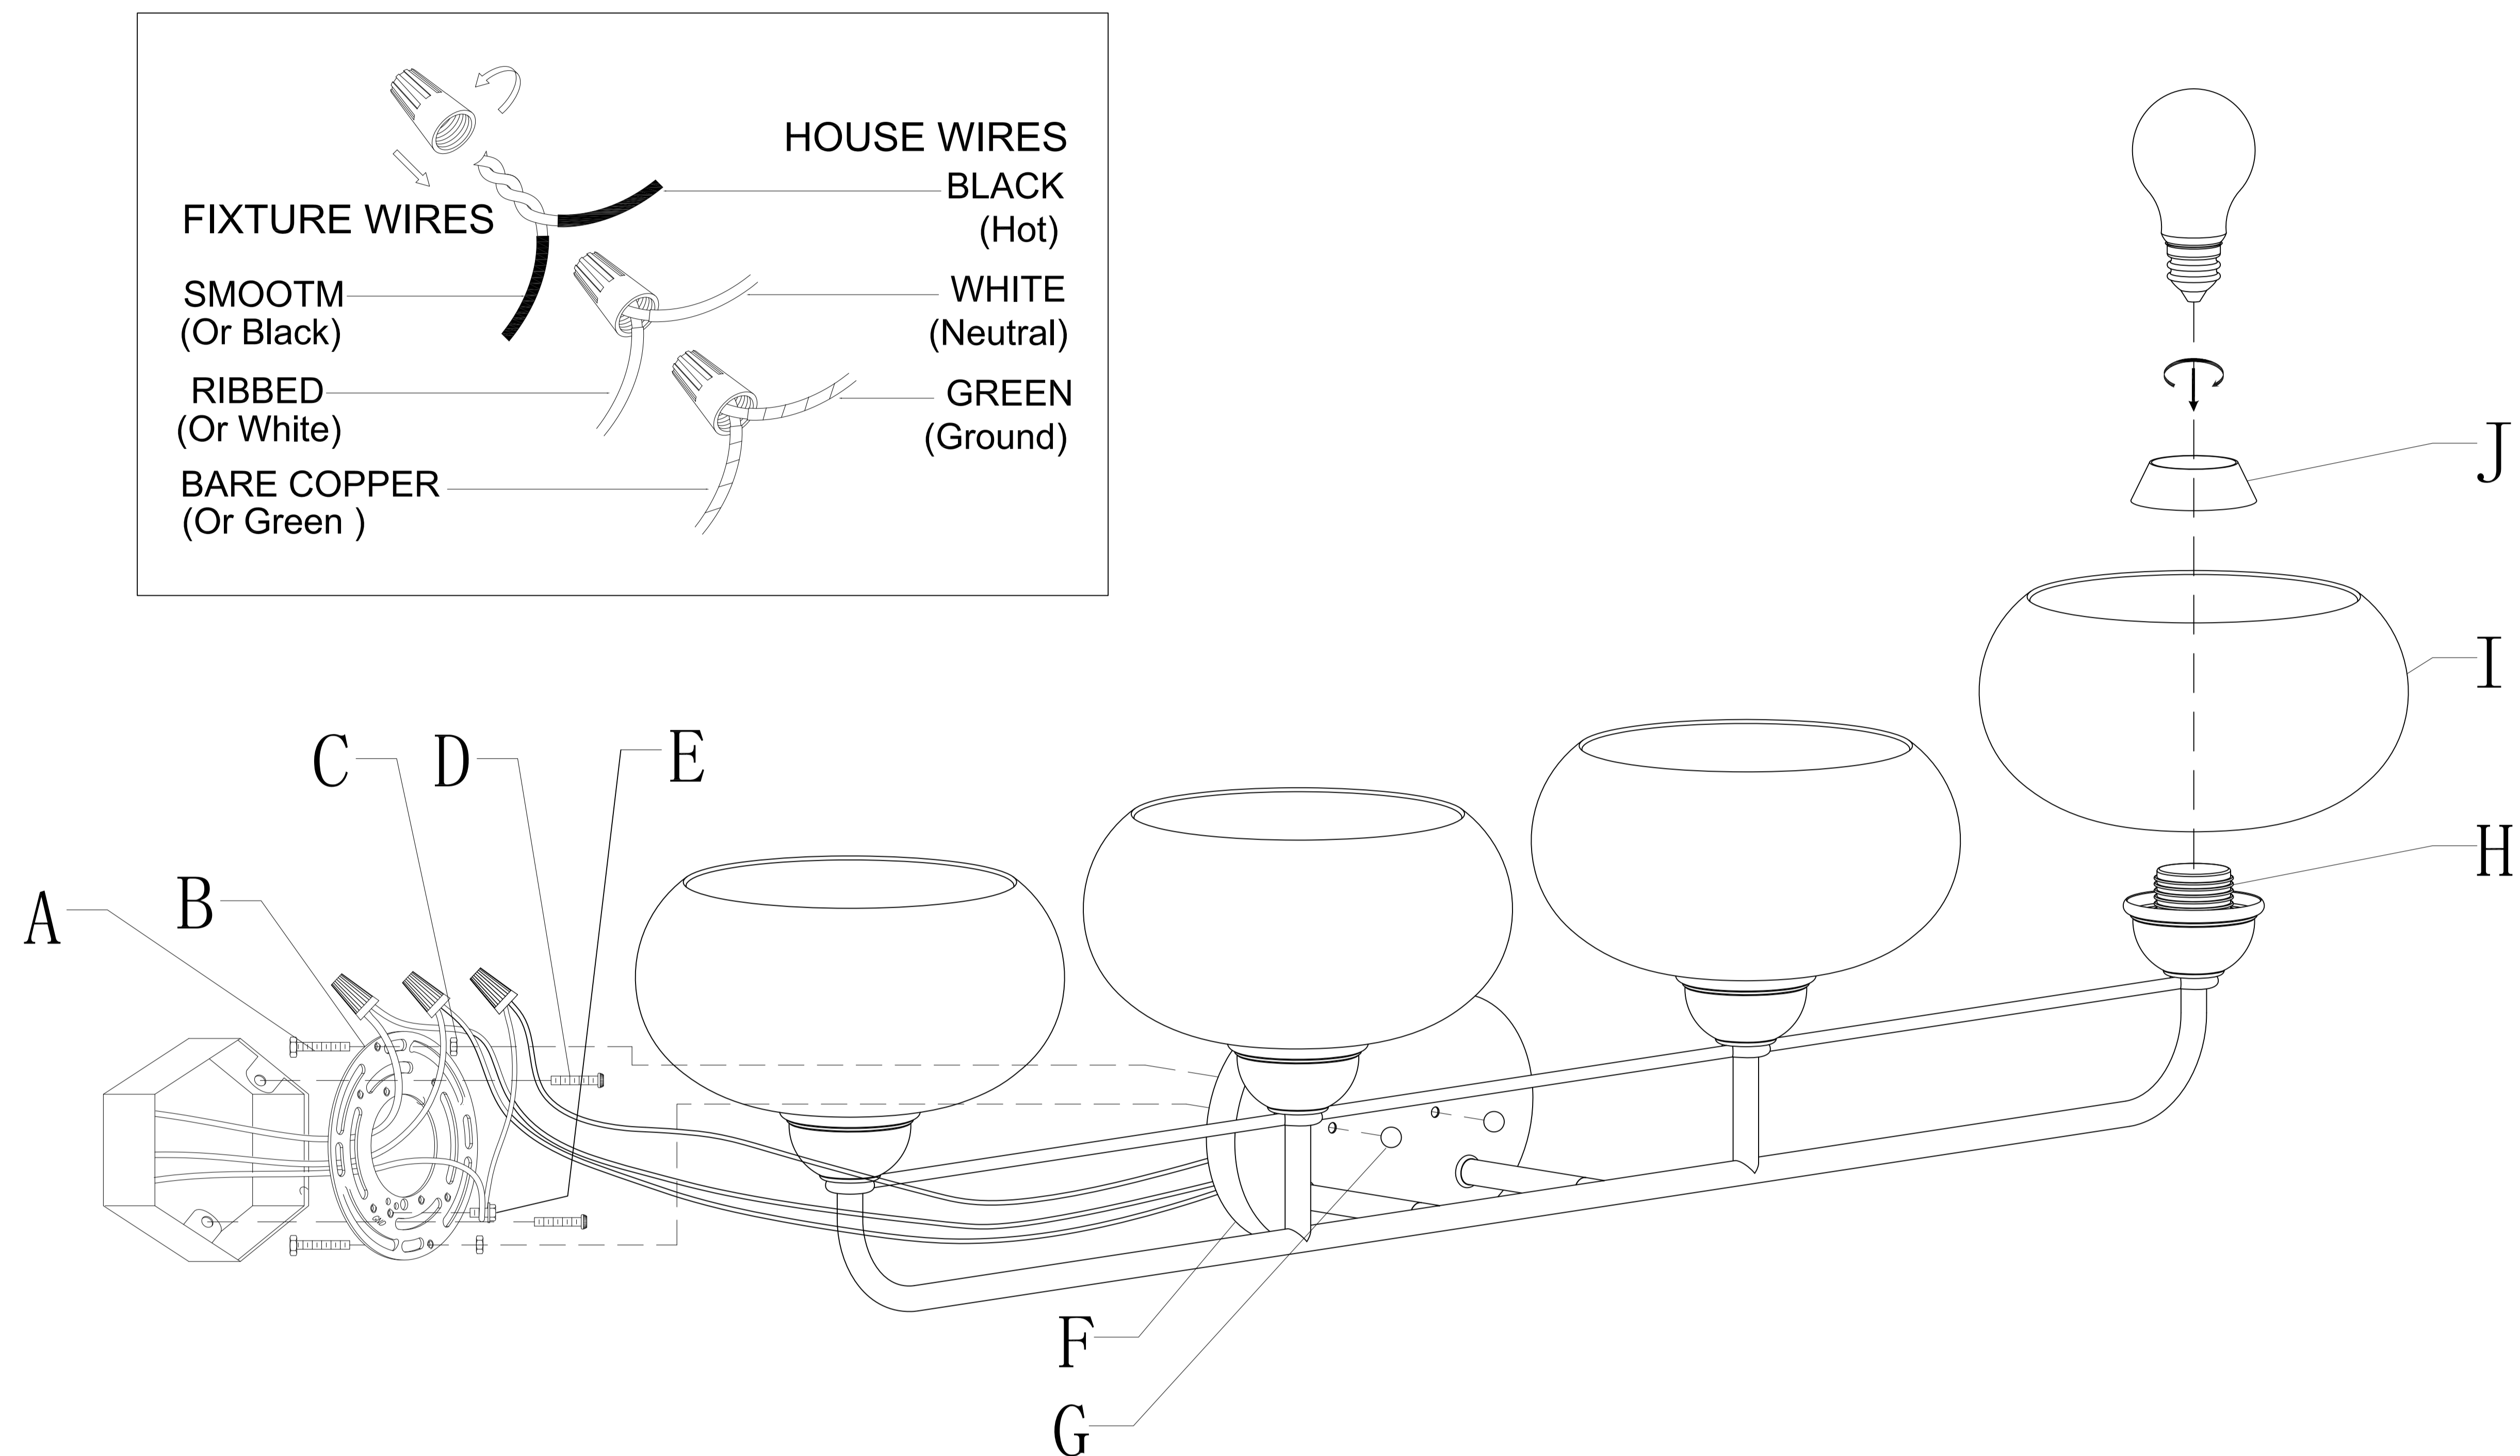

PREPARING FOR INSTALLATION

Remove all contents from the carton. See the important illustrations above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

The mounting plate (B) contains several threaded holes. Find the holes that match the spacing of the holes on the junction box and on your fixture's backplate. Two mounting screws (A) should be attached to the mounting plate (B). You may need to tighten the nuts that hold these screws in place. Pull the house wires through the center of the mounting plate (B). Place the mounting plate (B) over the junction box so that the mounting screws (A) are horizontal, and aligned with the hole locations on fixture's backplate (F). Secure the mounting plate (B) to the junction box by securely tightening the mounting screws (D).

CONNECTING THE WIRES

Attach the fixture's wires to the power supply wires from the junction box. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the end of the wire same color wire pairs to the same color wire coming from the junction box (white with white and black with black). **DO NOT CONNECT DIFFERENT COLORED WIRES TOGETHER.** Make sure all twists are in the same direction. If there is no ground wire (green or copper) from the junction box, locate the ground screw (E) on the mounting plate (B) and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

FINISHING THE INSTALLATION

Place the fixture's backplate (F) over the mounting screws (A) so that they protrude through the holes in the front of the backplate. Tightly screw the deco nuts (G) onto the mounting screws (A) until the backplate of the fixture is snug against the wall. Secure the glass shade (I) onto the socket (H), secure with socket ring (J). Install a light bulb (not included) in accordance with the fixture's specifications. Do not exceed the recommended maximum wattage.

Your installation is now complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.