# INSTALLATION INSTRUCTIONS

Item#P7989-077 (New. 03/01/2013)

#### **READ AND SAVE THESE INSTRUCTIONS**

## ${f W}$ arning! Shut power off at fuse or circuit breaker.

### AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

#### **HANGING THE FIXTURE (Fig. 1)**

- 1. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.
- 2. Shut off power at the circuit breaker and remove the old fixture including the mounting hardware.

#### **SUGGESTED INSTALLATION (Fig. 1)**

 Attach the mounting plate (A) to the junction box using mounting screws (B) (Size: #8-32N\*L0.5") as shown in Fig. 1.

### **CONNECTING THE WIRES (Fig. 2)**

4. At this point, connect the electrical wires as shown in figure 2, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture ground wire to it. Otherwise, connect the fixture ground wire directly to the mounting plate with the green screw provided. After wires are connected, tuck them carefully into the ceiling junction box.

#### **COMPLETING THE INSTALLATION (Fig. 1)**

- 5. Align the lamp body (C) over the mounting plate (A) and secure with finials (D).
- Install the light bulb (not included) in accordance with the fixture's specifications. DO NOT EXCEED THE MAXIMUM WATTAGE RATING!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)
- 7. Align spacer (J) followed by glass shade (G) onto the nipple and secure with metal gasket (I) and finial (H).


Your installation is now complete. Return power to the junction box and test the fixture.


Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

#### **Notice:**

Due to techniques used in manufacturing of this product, small tooling marks may be visible on the outside of the shade where it is attached to the support frame. All products are inspected to ensure they adhere to our quality control standards

Min 90°C supply conductors

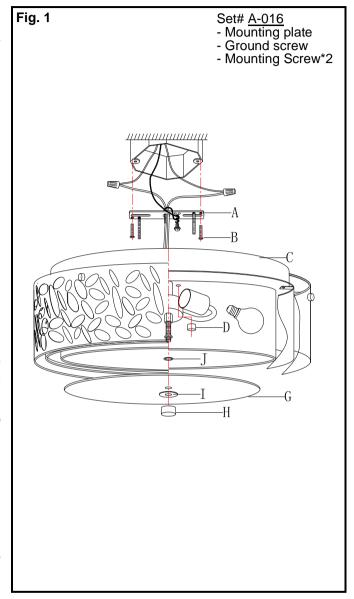

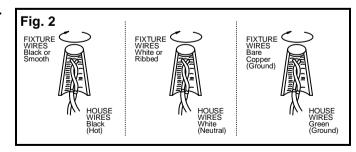

IMPORTANT: FIXTURE SHOULD BE INSTALLED BY A QUALIFIED ELECTRICIAN TO ENSURE PROPER WIRING AND INSTALLATION.

